
MCR-MGT Management Module

User's Guide

December 2017
Version A.1.18.12.2017
Part #5500310-17

Copyright Statement

This document must not be reproduced in any way whatsoever, either printed or electronically, without the consent of:

Perle Systems Limited,
60 Renfrew Drive
Markham, ON
Canada
L3R 0E1

Perle reserves the right to make changes without further notice, to any products to improve reliability, function, or design.

Perle, the Perle logo are trademarks of Perle Systems Limited.

Microsoft and Internet Explorer are trademarks of Microsoft Corporation.

Mozilla Firefox is a trademark of the Mozilla Foundation.

Perle Systems Limited, 2010 - 2017.



Table of Contents

Preface	3
About This Book	3
Intended Audience	3
Contents of CD	3
Typeface Conventions	4
Chapter 1 Introduction	5
About the MCR-MGT Management Module	5
Accessing the MCR-MGT Management Module	5
General Features	5
Management Features	5
Control Features	6
Security Features	6
Additional Features for the MCR1900	6
Additional Features on some Media Modules	6
Chapter 2 Setting IP Addresses	8
SetIP Utility	8
Using CLI commands	9
Chapter 3 Configuration Methods	11

Introduction	11
Configuration Methods Overview.....	11
Features.....	11
MCR Web Manager	11
Connecting to the Management Module for the first time	11
Using WebManager	14
Command Line Interface	15
Overview.....	15
Access Platforms	15
Using CLI commands.....	15
Menu.....	16
Overview.....	16
Access Platforms	16
Using the Menu.....	16
SNMP.....	17
Overview.....	17
Accessing MCR-MGT using SNMP	17
Chapter 4 MCR1900 Chassis.....	18
MCR1900 Chassis.....	18
Power Supplies.....	18
Temperature Protection Logic	18
Removal Of Management Module From a Chassis	18
Firmware Components.....	18
Configuration	19
Backplane	19
Media Converter Modules	19
MCR1900 Chassis View	20
Populating Slots In the MCR1900 Chassis.....	20
Unmanaged modules	20
Empty slot	21
Chapter 5 SMI Media Converter	22
SMI Media Converter.....	22

Removal Of Management Module From a Chassis	22
Firmware Components.....	22
Configuration	22
Modules.....	22
Chassis.....	23
Advanced Parameters.....	23
Chapter 6 MCR-MGT Module	24
MCR-MGT Management Module	24
General Tab.....	24
Alert Log Tab	24
Port Setup Tab.....	25
Serial.....	25
Ethernet.....	26
Advanced Tab.....	27
Management Module View	28
MCR1900 Chassis.....	28
Power Schedule	29
Network	30
Advanced	34
Access	43
MCR Web Manager	44
SSH.....	44
SNMP	46
Authorized Hosts.....	48
Authentication and Accounting	49
Local.....	51
RADIUS.....	52
Kerberos.....	54
LDAP/Microsoft Active Directory	55
TACACS+	57
SecurID	59
NIS	60
Alerts	61
Local Event Log	62
Email Alerts.....	63
Syslog	65
SNMP Traps.....	66
Date and Time.....	68
Time Zone Settings	68

Display Formats	71
Files	71
Firmware	71
MCR 1900 Media Converter Module Firmware Update	73
Manual Update	73
Automatic Update.....	74
SMI Media Converter Firmware Update.....	74
Manual Update.....	74
Automatic Update.....	75
Configuration.....	75
Keys and Certificates	75
Diagnostic File.....	76
Bootup Files	76
TFTP Settings	77
Chapter 7 CM-100 Media Converter Module	78
CM-100 Media Converter Module Parameters	78
General Tab.....	79
Copper Port Tab	81
Fiber Port Tab	82
Alert Log Tab	82
Advanced Tab	82
Slot Tab	83
Chapter 8 CM-110 Media Converter Module	84
CM-110 Media Converter Module Parameters	84
General Tab.....	85
Copper Port Tab	89
Switch Features	92
Fiber Port Tab	95
Switch Features	97
Alert Port Tab.....	100
Advanced Tab	100
Slot Tab	101
Chapter 9 CM-1110/CM-1110-SFP Module	102
CM-1110/SFP Media Converter Module Parameters	102

General Tab.....	103
Copper Port Tab	106
Switch Features	109
Fiber Port Tab	112
Switch Features	115
Alert Log Tab	118
Advanced Tab.....	118
Slot Tab	119
Chapter 10 CM-1000/CM-1000-SFP Module	120
CM-1000 Media Converter Module Parameters.....	120
General Tab.....	121
Copper Port Tab	123
Fiber Port > SFP (Statistics)	126
Alert Log Tab	126
Advanced Tab.....	126
Chapter 11 CM-100MM Media Converter Module	128
CM-100MM Media Converter Module Parameters	128
MCR1900 Chassis	128
SMI Chassis	128
General Tab.....	129
Fiber Port 1 Tab	131
Fiber Port 2 Tab	132
Alert Log Tab	132
Advanced Tab.....	132
Slot Tab	133
Chapter 12 CM-1000MM Media Converter Module	134
CM-1000MM Media Converter Module Parameters	134
General Tab.....	134
MCR1900 Chassis	134
Fiber Port 1 Tab	138
Fiber Port 2 Tab	139
Alert Log Tab	139

Advanced Tab	140
Chapter 13 CM-10G Media Converter Modules	142
Standard Models.....	142
High Power Models	142
CM-10G Modules Parameters	143
General Tab.....	144
Port 1 Tab.....	146
Port 2 Tab.....	147
Alert Log Tab	149
Advanced Tab.....	149
Slot.....	150
Chapter 14 CM-10GT Media Converter Modules	152
Commercial Model.....	152
High Power Model	152
CM-10GT Module Parameters	152
General Tab.....	153
Port 1 Tab (SFP installed).....	155
Port 1 Tab (XFP installed).....	156
Port 2 Tab (Copper).....	158
Alert Log Tab	159
Advanced Tab.....	160
Slot.....	161
Chapter 15 eX-1CM110/1110 Ethernet Extender Modules	162
eX-1CM110/1110 Models	162
MCR1900 Chassis	162
SMI Chassis	162
General Tab.....	163
Interlink Port - Advanced VDSL Status	171
Interlink Port - Statistics	172
Alert Log.....	177
Advanced	177
Slot.....	178

Chapter 16 CM-4GPT-DSFP Media Converter Module . 179

CM-4GPT-DSFP Media Module Parameters.....	180
General Tab.....	181
Port 1	183
Port 1 SFP	184
Port 2	184
Port 2 SFP	185
Alert Log.....	185
Advanced Tab.....	186
Slot.....	186

Chapter 17 CM-10GRT Media Converter Modules..... 187

CM-10GRT-SFP Media Converter Parameters.....	187
MCR1900	187
SMI Chassis.....	187
General Tab.....	188
Port 1 Tab (SFP installed).....	191
Port 2 Tab (Copper).....	196
Alert Log Tab	201
Advanced Tab.....	202
Slot.....	203

Chapter 18 CM-10GR-STS Media Converter Modules.. 204

CM-10GR-STS Modules Parameters	204
MCR 1900	204
SMI Chassis.....	204
General	205
Ports 1 and 2 tab (SFP+'s installed)	207
Alert Log Tab	209
Advanced Tab.....	209
Slot.....	210

Appendix A Alert Messages 211

Introduction	211
---------------------------	------------

Format of alerts	211
Severity levels	211
Alert Messages	212
Management Module Alerts	212
Chassis Alerts	213
Power Supply Alerts	214
Media Converter Alerts	214
SFP/XFP Alerts	215
VDSL Line Alerts	226
Appendix B SSL/TLS Ciphers	227
Appendix C Pinouts and Cabling Diagrams	229
Console Port Pinout	229
Appendix D Auto-Config Switch	230
Appendix E Troubleshooting	231
General Troubleshooting	231
Communication Issues	232
Host Problems	232
RADIUS Authentication Problems	232
Unknown IP Address	233
SSL/TLS	233
IPv6 Issues	233
Contacting Technical Support	234
Appendix F Symmetric Key File	235
Symmetric Key File	235



Preface

About This Book

This guide provides the information you need to:

- Configure and manage your MCR-MGT Management Module.

Intended Audience

This guide is for administrators who will be configuring the MCR-MGT Management Module. Some prerequisite knowledge is needed to understand the concepts and examples in this guide:

- If you are using an external authentication application(s), working knowledge of the authentication application(s).
- Knowledge of TFTP may be required if this is the method you choose to use as the transfer protocol of the MCR-MGT Management Module.

Contents of CD

The following documentation is included on the MCR-MGT Management Module Installation CD:

- *MCR1900 Media Converter 19-Slot Chassis Installation Guide*
- *SMI Media Converter Installation Guide*
- *MCR-MGT Management Module User's Guide*
- *MCR-MGT Management Module CLI Guide*
- *MCR-MGT Management Module Installation Guide*
- *Installation Guides for all supported Media Converter Modules*

The following files are also included on the MCR-MGT Management Module Installation CD:

- *MCR-MGT.MIB file for SNMP*
- *SetIP utility*
- *Firmware for MCR-MGT Management Module*
- *Firmware for all supported Media Converter Modules.*
- *Copyrights notices*

Typeface Conventions

Most text is presented in the typeface used in this paragraph. Other typefaces are used to help you identify certain types of information. The other typefaces are:

Typeface Example	Usage
At the C: prompt, type: add host	This typeface is used for code examples and system-generated output. It can represent a line you type in, or a piece of your code, or an example of output.
Set the value to TRUE .	The typeface used for TRUE is also used when referring to an actual value or identifier that you should use or that is used in a code example.
subscribe <i>project subject</i> run yourcode.exec	The italicized portion of these examples shows the typeface used for variables that are placeholders for values you specify. This is found in regular text and in code examples as shown. Instead of entering <i>project</i> , you enter your own value, such as <i>stock_trader</i> , and for yourcode , enter the name of your program.
File, Save	This typeface and comma indicates a path you should follow through the menus. In this example, you select Save from the File menu.
<i>MCR-MGT Management Module</i>	This typeface indicates a book or document title.
See About This Book for more information.	This indicates a cross-reference to another chapter or section that you can click on to jump to that section.



Introduction

About the MCR-MGT Management Module

The following software features are available on the MCR-MGT module.

Accessing the MCR-MGT Management Module

The MCR-MGT Management Module can be accessed through any of the following methods:

- MCR Web Manager, a (http/https) web browser
- Menu, a window-oriented menu interface
- CLI, a Command Line Interface option
- SNMP

General Features

- IPv6 support
- IPv6 Tunneling through an IPv4 network
- Access via Serial, Telnet, SSH, HTTP and HTTPS.
- DHCP/BOOTP for automated network-based setup
- Dynamic DNS with DYNDNS.org
- Domain Name Server (DNS) support
- Display preferences (Date, Time, Temperature formats)
- Backup/Restore module configuration automatically
- Automatically update managed media converter modules to the current firmware version

Management Features

- Console port enable/disable function
- IP and Mac address filtering
- Enable/Disable management services
- Management session inactivity timer
- Multiple Concurrent management sessions
- View and gather link statistics

Control Features

- Remote logging via Syslog
- SNMP (versions 1, 2, 3, and 4 are supported)
- Email alert notification

Security Features

Authentication using any of the following systems:

- Local Authentication
- RADIUS
- Kerberos
- TACACS+
- NIS
- SecurID
- LDAP/Microsoft Active Directory
- Ability to assign users access level rights to control their access
- Idle timers, which close a connection that has not been active for a specified period of time
- SSH-2 and SSH-1 connections
- SSL/TLS v1.1 and v1.2 connections.
- Filter network services
- Local event log with filtering per module basis

Additional Features for the MCR1900

- Chassis temperature, voltage and fan monitoring
- ECO power scheduler feature allows you to set power on/off schedules
- Manually power slots off and on
- Define a default power state for each slot

Additional Features on some Media Modules

Quality of Service (QOS)

- Bandwidth allocation via ingress and egress rate limiting
- IEEE 802.1p tagged frame priority control
- IEEE 802.1p priority tag remapping
- IP TOS (Type of Service) priority for IPv4 Diffserv or IPv6 Traffic Class frames
- Congestion Service Policy through Weighted Fair Queuing or Strict Priority Queuing

VLAN Tagging

- Rate Limiting on ingress or egress packets
- Enable discarding of tagged frames
- Enable discarding of untagged frames
- Removal of existing tag on frames
- Insert tag

- Insert double tag

Other

- Unidirectional Ethernet
- Filtering of unknown multicast frames
- Filtering of unknown unicast frames

2


Setting IP Addresses

SetIP Utility

There are several different configuration methods available to configure the MCR-MGT Management Module (Management Module). The most important part of setting up the network is assigning an IP address to the Management Module, whether this is a static IP address, or enabling a DHCP/BOOTP assigned address. The Management Module is pre configured with an IP address of 10.0.0.10 with a subnet mask of 255.0.0.0. This will probably not be the IP address schema for your ethernet network, therefore all of the Management Module configuration methods have the ability to change the IP address on the Management Module. You should also assign a name to the Management Module to make it easier to recognize. By default the Management Module does not require a user to login to configure or manage the module.

This section deals primarily with three ways in which to assign an IP address to the Management Module.


The easiest method to assign an IP address to your MCR-MGT Management Module is to use the Perle SetIP Utility. The Perle SetIP Utility will allow you to assign an IP address and/or manage a predefined Management Module. This utility can be found on the Perle CD that came with your Management Module. Simply run the SetIP utility by double clicking on the SetIP.exe file. For security reasons, the ability to set an IP address to a module is only available when the module is in a factory default state. (i.e. has not yet been configured).

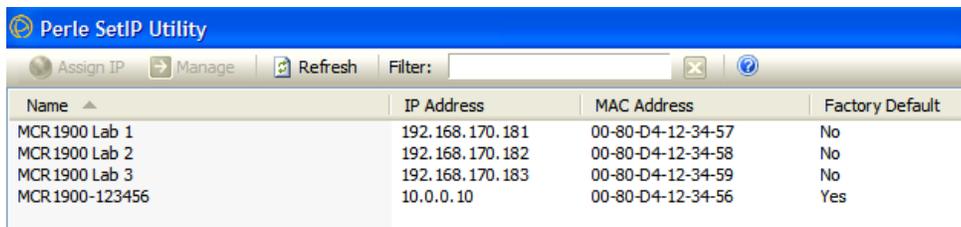

The screenshot shows the 'Perle SetIP Utility' window. It has a menu bar with 'Assign IP', 'Manage', and 'Refresh' options, and a 'Filter:' input field. Below the menu bar is a table with the following data:

Name	IP Address	MAC Address	Factory Default
MCR 1900 Lab 1	192.168.170.181	00-80-D4-12-34-57	No
MCR 1900 Lab 2	192.168.170.182	00-80-D4-12-34-58	No
MCR 1900 Lab 3	192.168.170.183	00-80-D4-12-34-59	No
MCR 1900-123456	10.0.0.10	00-80-D4-12-34-56	Yes

Assign IP address

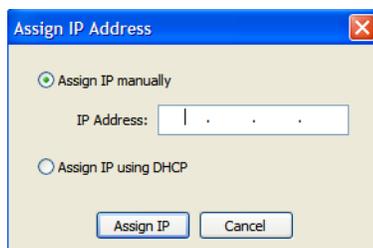

The screenshot shows the 'Assign IP Address' dialog box. It has two radio buttons: 'Assign IP manually' (which is selected) and 'Assign IP using DHCP'. Below the radio buttons is an 'IP Address:' label followed by a text input field containing four dots. At the bottom of the dialog are 'Assign IP' and 'Cancel' buttons.

Using CLI commands

Using a Direct Serial Connection to Specify an IP Address or to Enable DHCP/BOOTP

You can connect to the Management's Module's serial console port using a PC with a terminal emulation package, such as HyperTerminal or a terminal.

1. Using an RJ-45 patch cable and a CISCO RJ45-DB9F-DTE Pinout adapter (Perle part number 04007040), connect your PC or dumb terminal to the console port on the Management Module. See [Appendix C, Pinouts and Cabling Diagrams](#) for cabling diagram.
2. Using a PC emulation application, such as HyperTerminal, or from a dumb terminal, set the Port settings to 9600 Baud, 8 Data bits, No Parity, 1 Stop Bits, and No Hardware Flow control.
3. Press **Enter**
4. You should now see a prompt that displays the model type and last 6 numbers of the MAC address for that unit. for example, MCR-MGT-900634.
5. To set the IP address, type the following command:

```
set server internet <ipv4address> netmask <netmask>
```

Press **Enter**

Where *ipv4address* is the IP Address being assigned to the Management Module and netmask is the subnet mask to apply to the IP address. *For example;*

```
set server internet 172.16.4.90 netmask 255.255.0.0
```

6. To save the information to non-volatile memory, type the following command:

```
save
Save config to flash ROM y/n
Type,
y
```

7. Lastly, type:

```
reboot
Confirm reboot unit y/n
Type,
y
```

The management Module will reboot and the IP address will now take affect.

Alternatively, you can enable the DHCP/BOOTP option within the Management Module.

1. Perform the steps above 1 through 4.
2. Using the Command Line Interface (CLI).

Type the following command:

```
set server internet dhcp/bootp on
```

Press **Enter**

3. Then type the following command:

```
save
Save config to flash ROM y/n
Type
y
```

4. Lastly, type:

```
reboot
```

```
Confirm reboot unit y/n  
Type  
y
```

Connecting to the Management Module's Internal IPv6 address

The Management Module has a link local IPv6 address based upon its MAC Address. For example, the link local address is:

Management Module MAC Address: 00-80-D4-AB-CD-EF

Link Local Address: FE80:0280:D4FF:FEAB:CDEF

Using Telnet or SSH you can connect to the Management Module's IPv6 local link address and configure the Management Module. By default, the MCR-MGT Management Module will listen for IPv6 router advertisements to obtain additional IPv6 addresses.



Configuration Methods

Introduction

This chapter provides information about the different methods you can use to configure the MCR-MGT Management Module (Management Module). Before you can configure the Management Module, you must assign an IP address. See [Chapter 2, *Setting IP Addresses*](#) to find out how to assign an IP address to the Management Module.

Configuration Methods Overview

Following is a list of methods for configuring the Management Module.

- **MCR Web Manager**
- **CLI** using Telnet/SSH or a Direct Serial Console Connection
- **Menu** using Telnet/SSH or a Direct Serial Connection
- **SNMP** using standard based SNMP tools

Features

- Configure Management Module chassis parameters
- Configure Network parameters
- Configure User accounts and Authentication methods
- Configure Alert levels, Email alerts, SMNP parameters and SMNP traps
- Configure Access parameters
- Configure Date and Time parameters
- Configure the Security parameters
- Backup and Restore configuration
- Update firmware
- Reboot the Management Module and any Manageable media converter modules or the Chassis
- View and gather statistics while connected to the Management Module


MCR Web Manager

Connecting to the Management Module for the first time

By default, the Management Module requires no login information to gain entry to it. The Management Module supports http/https with common browsers such as Internet Explorer (version 7 or higher/Windows Edge), Firefox (version 3.5.10 or higher), Chrome (version 4.0.249 or higher) and Safari (version 4.0.5 or higher).

1. Open your web browser and type in the IP address of the Management Module that you want to manage/configure and press **Enter**. For example: `http://10.0.0.10` or `https://10.0.0.10`
2. If you successfully connect to the Management Module, either a MCR1900 screen or a SMI Media Converter screen will appear.

MCR1900

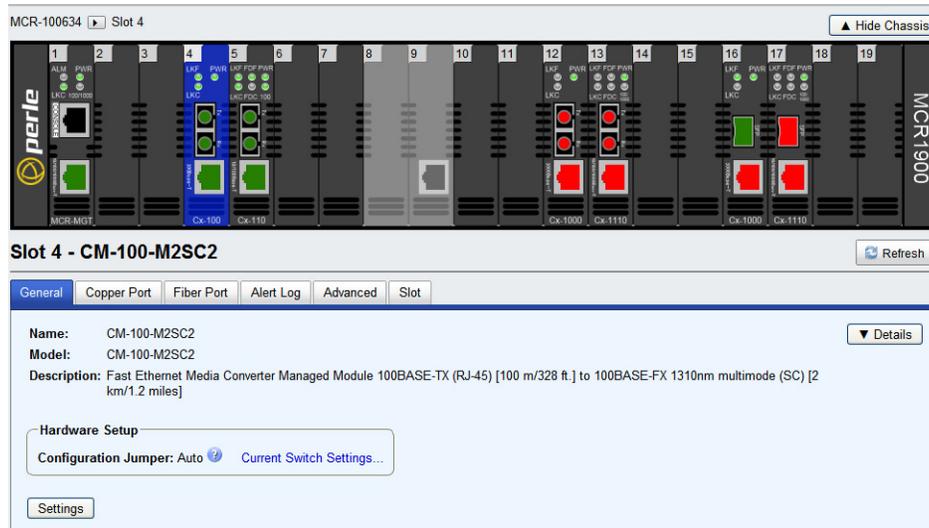

The top portion of the screen (chassis view) will display the chassis and all modules detected. This will include;

- MCR-MGT Management Module
- Managed Media Converter Modules.
- Unmanaged Media Converter Modules (if any exist).
- Unknown card - Slot powered off when Media Converter Module was inserted.

If any component has an active alarm (severity level “System Level Fault”, “Module level Fault” or “Persistent Error”), a red triangle will show up on that component. If you place your cursor over the triangle, the cause of the alarm will be displayed.

Moving your cursor over any module, will place a “magnifying glass” at the bottom of the module. If you move the cursor to the magnifying glass, you will be presented with a magnified view of the module in that slot.

Clicking on any module on the top portion will bring up the detailed information on the selected module in the bottom half of the screen. If a selected module has active alarms, these will be displayed in the middle of the page. The chassis view automatically refreshes every 30 seconds.

SMI Media Converter

The screenshot displays the MCR Web Manager interface for a device labeled MCR-MGT-900084. The top navigation bar includes the Perle logo, the device ID, IP address (172.16.113.66), and the date/time (May 28, 2013 20:32:34 EDT). Below this, the main area shows a chassis view with two slots. Slot 2 is highlighted with a red box and contains the SMI-110-S2LC120 module. An arrow points from this module to the detailed configuration page below.

Slot 2 - CM-110-S2LC120

General | Copper Port | Fiber Port | Alert Log | Advanced | Slot

Name: CM-110-S2LC120
Model: CM-110-S2LC120
Description: 10/100 Fast Ethernet Media and Rate Converter Managed Module. 10/100BASE-TX (RJ45) [100 m/328 ft] to 100BASE-X 1550nm single mode (LC) [120 km/74.4 miles]

Hardware Setup
 Configuration Jumper: Auto [Current Switch Settings...](#)

[Settings](#)

CM-100 Media Converter Module



The top portion of the screen will display the installed MCR-MGT module and the detected media converter module.

If any module has an active alarm (severity level “System Level Fault”, “Module level Fault” or “Persistent Error”), a red triangle will show up on that module. If you place your cursor over the triangle, the cause of the alarm will be displayed.


Clicking on any module on the top portion will bring up the detailed information on the selected module in the bottom half of the screen. If a selected module has active alarms, these will be displayed in the middle of the page.

Using WebManager


Click the MCR-MGT Management Module.

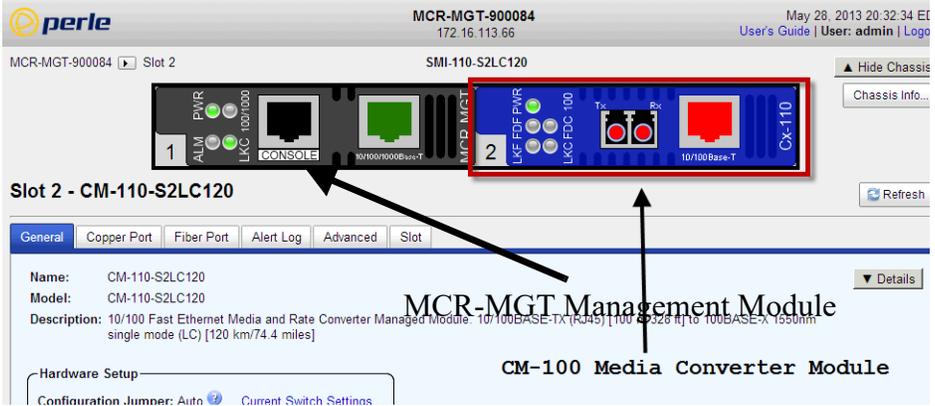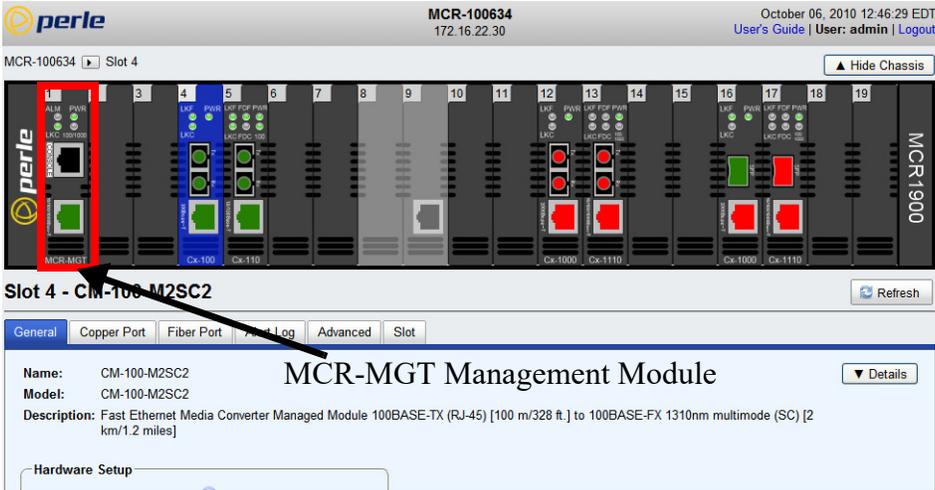

You navigate through the different configuration windows by selecting a navigation tab. Each of the navigation tabs open to more options and windows.

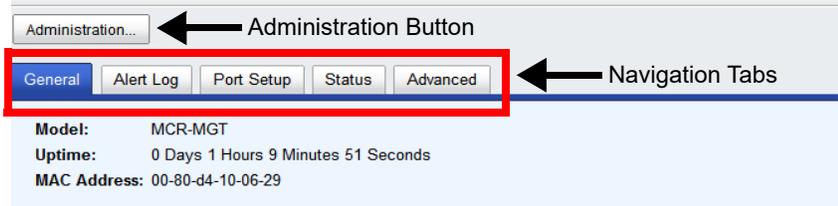

The Administration button will take you to the navigation Tree as shown below.

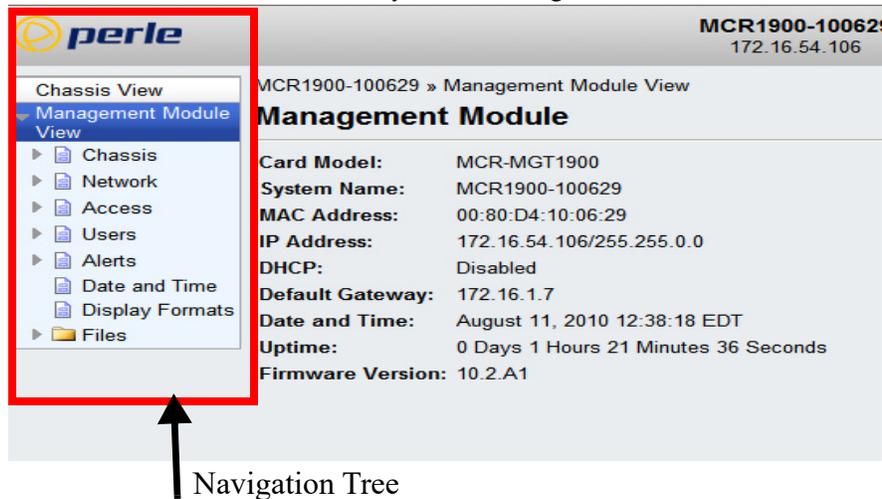

Note: Remember to click on the Apply button to save your configuration changes.

Command Line Interface

Overview

The Command Line Interface (CLI) is a command line option configuration for the Management Module. See the *Command Line Interface Reference Guide* for a full breakdown of all the CLI commands and their functionality.

Access Platforms

The CLI is accessed by any application that supports a Telnet or SSH session to the Management Module's IP address, such as Putty, SecureCRT, or from a command prompt. You can also access the CLI from a dumb terminal or PC connected to the console port of the Management Module.

Using CLI commands

To connect to the Management Module through the network to configure/manage it using the CLI commands, do the following:

1. Start a Telnet or SSH session to the Management Module's IP address; for example:
telnet 10.0.0.10
2. Press **Enter**
3. Alternatively, you can connect directly to the console serial port.
4. If Require Password is enable you will get a prompt to login, else you will get the following command prompt.

MCR-MGT-<last six digits of your MAC address>#

You can start configuring/managing the Management Module by typing in commands at the prompt. If you are not sure what commands are available, you can type a ? (question mark) at any time during a command to see your options.

See the *Command Line Interface Reference Guide* for more information about the CLI.

Menu

Overview

The Menu is a graphical representation of the CLI. You can look up Menu parameter explanations in the *Command Line Interface Reference Guide*. The only operations that the Menu does not support are the downloading or uploading of files to/from the Management Module.

Access Platforms

The Menu is accessed by any application that supports a Telnet or SSH session to the Management Module's IP address, such as Putty, SecureCRT, or from a command prompt. You can also access the Menu from a dumb terminal or PC connected to the console port of the Management Module.

Using the Menu

To connect to the Management Module through the network to configure/manage it using the Menu Configurator, do the following:

1. Start a Telnet or SSH session to the Management Module's IP address; for example:
telnet 10.0.0.10
2. Press **Enter**
3. Alternatively, you can connect directly to the console serial port.
4. If Require Password is enable you will get a prompt to login else you will get the following command prompt.

MCR-MGT-<last six digits of your MAC address>#

5. Type **screen**, Press **Enter**

The following Menu will now appear.



To navigate through the Menu options, do the following:

1. Highlight a Menu option by using the keyboard up and down arrows to navigate the list.
2. When the Menu item you want to access is highlighted, press the **Enter** key to either get to the next list of options or to get the configuration screen, depending on what you select.
3. When you are done configuring parameters in a screen, press the **Enter** key and then the **Enter** key again to **Accept and exit the form**.

4. If you want to discard your changes, press the **Esc** key to exit a screen, at which point you will be prompted with **Changes will be lost, proceed? (y/n)**, type **y** to discard your changes or **n** to return to the screen so you can press **Enter** to submit your changes.
5. If there are a number of predefined options available for a field, you can scroll through those items by pressing the **Space Bar** or you can type **l** (lowercase L) to get a list of options, use the up/down arrows to highlight the option you want, and then press **Enter** to select it.

SNMP

Overview


The Management Module supports configuration and management through common standard SNMP Management Tools. You can use SNMP to manage or configure any installed Management Module or Media Converter Modules. The standard SNMP default communities, “public” for read-only access and “private” for read-write access are predefined on the Management Module and will allow you access from any IP address. However, these predefined communities will need to match the communities as configured on your Network Management Software/SNMP MIB browser.

Community=**public**, Permissions=**Readonly**

Community=**private**, Permissions=**Readwrite**

Accessing MCR-MGT using SNMP

1. Load the MCR-MGT.MIB file from the Perle Management Module CD-ROM or Perle website into your SNMP manager.
2. Type in the IP address of the Management Module.
3. You are now ready to start configuring and managing your Management Module and Media Converter Modules using SNMP.

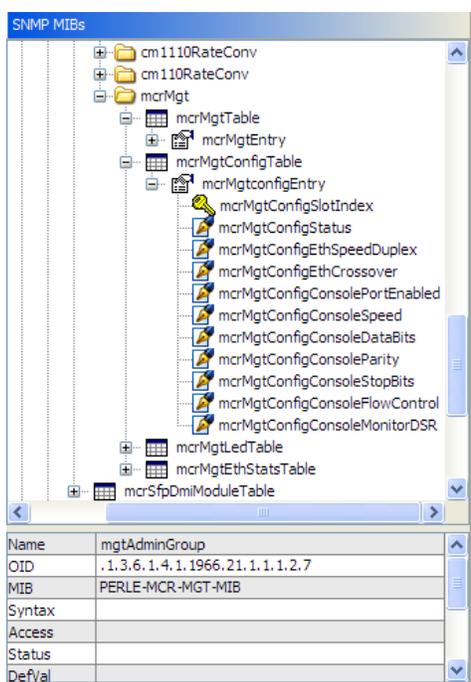



MCR1900 Chassis

General information on the MCR1900 Chassis

MCR1900 Chassis

- The MCR chassis consists of 19 slots.
- Each slot can accommodate either a Management Module or a Media Converter Module.
- This chassis can support 1 Management Module plus 18 Media Converter Modules.
- Each module is hot-pluggable which means it can be inserted or removed without needing to power down the chassis
- The Media Converter Modules do not require the Management Module to be present in order to operate as media converters.

Power Supplies

The chassis supports up to two power supplies. Each supply can power the chassis on its own. When a second power supply is present, “load sharing” is implemented between the two supplies.

The power supply is hot pluggable. When two supplies are powering the chassis, one can be pulled without affecting the operation of the chassis.

Temperature Protection Logic

The chassis has logic which continuously monitors the internal temperature of the chassis. If this temperature ever exceeds 70 degrees Celsius, power to all modules will be cut. This protects the modules from being damaged. The chassis continues to monitor the temperature and when it return back to 55 degrees Celsius, all modules are powered back up.

Removal Of Management Module From a Chassis

You can remove the Management Module from the chassis at any time if needed (i.e for service). All Media Converter Modules will continue to operate normally. What will be lost is the ability to remotely (or locally) connect to the chassis and monitor or control any of its functions. All event notification will be lost as well as any scheduled slot power up/down functionality.

Firmware Components

The MCR1900 chassis has a number of intelligent components, each with supporting firmware. These components are;

- Power supply
- Backplane
- Management module
- Media converter module(s)

All the components are pre-loaded with firmware at the factory. Over time, new updates can become available for any component. Through the Management Module, all components (including the Management Module itself) can be upgraded.

The firmware residing on Managed Media Converter Modules can be updated manually (user intervention required) or automatically to the latest firmware versions. The Management Module and Media Converter Modules can be at different firmware versions.

The power supply and backplane firmware is embedded in the Management Module image and is updated automatically by the management card so that they always match its firmware.

Configuration

The MCR-MGT Management Module allows for the soft configuration of parameters on the chassis and Media Converter Modules. Some configuration parameters reside only on the Management Module and others reside on the backplane or Media Converter Module.

Backplane

The user can configure a “default power state” for each slot in the chassis. This determines if the slot is powered up or down when the system boots. This information is stored on the backplane so that even if the management card is removed from the chassis, the slots will still power up as per the configured status.

If you ever need to reset this configuration but no longer have a management card with which to do so, you can reset the configuration to factory default (all slots powered up) by doing the following;

1. Power off the chassis.
2. Remove all modules from the chassis.
3. Power up the chassis for at least 30 seconds.
4. Power down the chassis.
5. Re-insert all modules into their respective slots.
6. Power up the chassis.
7. At this point, all slots should have gone back to a “powered up” default state.

Media Converter Modules

The Media Converter Modules can be configured using the MCR-MGT Management Module. This configuration will be stored on the Media Converter Module in non-volatile memory. Whenever the Media Converter Modules are powered up or re-started, the Media Converter Modules will look first at their Auto-Config Jumper to determine the jumper position see [Appendix D, Auto-Config Jumper](#) for more information. If the jumper is set to SW the modules will read the settings of the DIP switches and use those as their running configuration. The Media Converter Modules will ignore any configuration information in their flash memory. If the jumper is set to Auto (default), the Media Converter Modules will at power up, check their internal flash memory to see if configuration information has been downloaded to them from a management module. If so, the Media Converter Modules will use this as their running configuration. If there is no configuration in flash, the Media Converter Modules will read the settings of the DIP switches and uses those as their running configuration.

When configuring the Media Converter Module, you have the option to enable the “Backup/Restore Module Configuration Automatically”. When this option is used, the Media Converter configurations are also stored on the Management Module. At any time, if you replace the module in this slot with a different module of the same type, the management card will automatically download the configuration it has for that slot to the new Media Converter Module. This allows you to easily replace a module for servicing purposes.

MCR1900 Chassis View

The Chassis section is used to view the parameters directly associated with the MCR1900 chassis.

The screenshot displays the MCR1900 Chassis View interface. At the top, the Perle logo is on the left, and the device ID 'MCR-MGT-069F29' and IP '216.129.13.62' are in the center. The date and time 'January 13, 2011 10:54:10 EST' and user information 'User: admin | Logout' are on the right. Below this is a navigation bar with 'MCR-MGT-069F29' and 'Chassis' tabs, and a 'Hide Chassis' button. The main area shows a rack of 19 slots. Slots 1-4 contain modules: MCR-MGT, Cx-1000, Cx-1110, and Cx-100. Slots 5-19 are empty. Below the rack is a 'Chassis - MCR1900' section with a 'Refresh' button. Underneath are tabs for 'General', 'Power Supplies and Fans', and 'Alert Log'. The 'General' tab is selected, showing 'Model: MCR1900', 'Current Temperature: 24 °C', and 'Maximum Temperature Threshold: 50 °C'. A 'Self-Test' box shows 'Passed', 'Firmware Version: 1.0G6', 'Bootloader Version: 0.0', and 'Serial Number: 103-002710T10095'.

General

Model The Model of the chassis.

Current Temperature The current temperature of the chassis.

Maximum Temperature Threshold When the temperature of the chassis exceeds this threshold, alerts will be generated. Once the threshold is exceeded a new alert will be issued each time the temperature raises by 1 degree.
Default: 50 °C

Power Supplies and Fans

Show details for the Power supplies and fans installed.

Alert Log

Shows any alerts that have been generated.

Populating Slots In the MCR1900 Chassis

Slots in the MCR1900 chassis can be populated with a Management Module and Media Converter Modules. The Media Converter Modules can be of the CM/eX variety (managed) or C variety (unmanaged). You can mix managed and unmanaged Media Converter Modules in the same chassis. Slots can also be left unpopulated.

Unmanaged modules

If a slot is populated with an unmanaged Media Converter Module, the management card can not manage that module however, it can still perform the following actions on this slot;

- Assign a logical name to the slot. This can facilitate the ability for the operator to determine what this card is.
- Power the slot on or off
- Define a default power state for this slot

Empty slot

If a slot is empty the management card can perform the following actions on this slot;

- Power the slot on or off
- Define a default power state for this slot
- Disable the “Backup/Restore Module Configuration Automatically” option.
- This is done to provide the user a method of cancelling or disabling this operation even once the Media Converter Module is no longer in the slot. This would be useful if you plan to place a new Media Converter Module in this slot but do not wish to have its configuration overwritten by the one stored on the management card.



SMI Media Converter

General information on the SMI Media Converter

SMI Media Converter

- This chassis consists of 2 slots.
- One Management Module plus 1 Media Converter Module are supported.
- By default, slot 1 of the SMI Media Converter will be populated with a MCR-MGT management module and slot 2 will be populated with a Media Converter module.
- Each module is hot-pluggable which means it can be inserted or removed without needing to power down the chassis

Removal Of Management Module From a Chassis

You can remove the Management Module from the chassis at any time if needed (i.e for service). The Media Converter Module will continue to operate normally. What will be lost is the ability to remotely (or locally) connect to the chassis and monitor or control any of its functions. All event notifications will be lost.

Firmware Components

Both the MCR-MGT management module and the Media converter module are pre-loaded with firmware at the factory. All modules can be upgraded as new firmware becomes available.

The firmware residing on Managed Media Converter Modules can be updated manually (user intervention required) or automatically to the latest firmware versions. The Management Module and Media Converter Modules can be at different firmware versions.

Configuration

Modules

The two slots in the SMI Media Converter are populated with a Management Module and a Media Converter Module. See [Advanced Parameters](#) for information on how to set the slot position for the management module.

The one Media Converter Module can be configured using the MCR-MGT Management Module. This configuration will be stored on the Media Converter Module in non-volatile memory. Whenever the Media Converter Module is powered up or re-started, the Media Converter Module will look first at the Auto-Config Jumper to determine the jumper position see [Appendix D, Auto-Config Jumper](#) for more information. If the jumper is set to SW the module will read the settings of the DIP switches and use those as its running configuration. It will ignore any configuration information in its flash memory. If the jumper is set to Auto (default), the Media Converter Module will at power up, check its internal flash memory to see if configuration information has been downloaded to it from a management module. If so, the Media Converter Module will use this as its running configuration. If

there is no configuration in flash, the Media Converter Module will read the settings of the DIP switches and use those as its running configuration.

When configuring the Media Converter Module, you may enable the “Backup/restore Module Configuration Automatically”. When this option is used, the Media Converter configuration is also stored on the Management Module. At any time, if you replace the module in this slot with a different module of the same type, the management card will automatically download the configuration it has for that slot to the new Media Converter Module. This allows you to easily replace a module for servicing purposes.

Chassis

The Chassis section is used to view or configure the parameters directly associated with the SMI Media Converter chassis.

General Parameters

The screenshot displays the web interface for the SMI-110-S2LC120 chassis. At the top, the Perle logo is on the left, and the device name 'MCR-MGT-VI' with IP '172.16.54.106' and date 'January 12, 2011 15:52:04 EST' are on the right. Below this, the page title is 'Chassis' and the device model is 'SMI-110-S2LC120'. A diagram of the chassis shows two slots. Slot 1 has a module with 'PWR', 'ALM', 'LKC', and 'CONSOLE' indicators. Slot 2 has a module with 'LKF', 'FDF', 'PWR', 'LKC', and 'FDC' indicators. The 'General' tab is selected, showing 'Product Model: SMI-110-S2LC120' and 'Serial Number: user123'.

- Product Model** The product model.
- Serial Number** Sets the chassis serial number.
Field Format: 16 characters

Advanced Parameters

The screenshot displays the web interface for the SMI-110-S2LC120 chassis. At the top, the Perle logo is on the left, and the device name 'MCR-MGT-VI' with IP '172.16.54.106' and date 'January 12, 2011 14:26:05 EST' are on the right. Below this, the page title is 'Chassis' and the device model is 'SMI-110-S2LC120'. A diagram of the chassis shows two slots. Slot 1 has a module with 'LKF', 'FDF', 'PWR', 'LKC', and 'FDC' indicators. Slot 2 has a module with 'PWR', 'ALM', 'LKC', and 'CONSOLE' indicators. The 'Advanced' tab is selected, showing 'Management Module is installed in: Slot 2'.

- Management Module Slot Number** The management module can be installed in either slot 1 or slot 2.

Note: *If a change is made to the slot position of the management module, a reboot of the SMI Media Converter is needed for the new slot position to take effect.*



MCR-MGT Module

MCR-MGT Management Module

The MCR Web Manager screens will be used to explain the various parameters associated with each component of the system. The parameters have the same meaning in all configuration tools.

General Tab

Field Descriptions

Slot 1 - MCR-MGT

Administration...

General | Alert Log | Port Setup | Status | Advanced

Model: MCR-MGT
Uptime: 0 Days 0 Hours 35 Minutes 50 Seconds
MAC Address: 00-80-d4-10-06-34

Firmware Version: 1.0.A1
Failsafe Bootloader Version: 01.01.0101
Secondary Bootloader Version: 01.01.0002
Serial Number: 101-694010W00001

Model	Displays the module's model information.
Uptime	Displays the amount of time the MCR-MGT Management Module has been running since its last reboot.
MAC Address	Displays the MCR-MGT Management Module's MAC Address.
Details	Displays the MCR-MGT Management Module's firmware and serial number information.

Alert Log Tab

The MCR-MGT Management Module monitors the status of the various components in the system and when a note worthy event occurs, it records this event in its local event log. This log is kept in a circular buffer which means that once the log is full (around 200 entries), the oldest entries will be replaced with new entries. The date and time of when the alert occurred is recorded with each alert. Clicking on any column will cause the log to be sorted based on the selected column.

Field Descriptions

Slot 9 - MCR-MGT

Administration...

General Alert Log Port Setup Status Advanced

Show alerts for: Entire System

Clear Alert Log

Date	Description	Severity
09/10/2010 6:02:08 PM	Mgmt: Authentication SUCCESSFUL! Access method=WebManager(HTTP), Originating IP=10.10.200.54.	Normal Operation
09/10/2010 6:01:23 PM	Mgmt: Authentication SUCCESSFUL! Access method=WebManager(HTTP), Originating IP=10.10.200.41.	Normal Operation
09/10/2010 5:59:21 PM	Mgmt: Configuration saved to flash.	Normal Operation
09/10/2010 5:58:39 PM	Mgmt: Authentication SUCCESSFUL! Access method=WebManager(HTTP), Originating IP=172.16.54.107.	Normal Operation
09/10/2010 5:55:36 PM	Mgmt: Ethernet port link status UP.	Normal Operation
09/10/2010 5:55:36 PM	Mgmt: System boot - Cold Start.	Normal Operation

Configure the following parameters:

- Show Alerts** Shows Alerts for the Entire System, Chassis or a specific slot.
- Clear Alerts** Clears the Alert Log for the Entire System.

Port Setup Tab

Serial

General Alert Log Port Setup Status Advanced

Serial Console Ethernet Port

Enable Serial Console

Speed: 9600

Parity: None

Data Bits: 8

Stop Bits: 1

Software Flow Control (XON/XOFF)

Hardware Flow Control (RTS/CTS)

Monitor DSR

Apply


The serial console port is used to obtain local access to the MCR-MGT module. The port allows the user to configure, monitor and/or control the system modules via CLI (Command Line Interface) or Menu (a series of menus). This tab allows for the configuration of the serial parameters used for the port. This tab also allows the system administrator to disable the console port if they do not want to grant access to the Management Module via this port.

Field Descriptions

Enable Serial Console	Enables/Disables the serial console port. Default: Enabled
Speed	Specifies the baud rate of the serial console port. Data Options: 9600, 19200, 38400, 57600 or 115200 Default: 9600
Parity	Specifies the type of parity being used for the data communication on the serial port. Data Options: Even, Odd, None Default: None
Data Bits	Specifies the number of bits in a transmitted character. Data Options: 7, 8 Default: 8
Stop Bits	Specifies the number of stop bits that follow a byte. Data Options: 1, 2 Default: 1
Software Flow Control	The data flow is handled by the Software Flow Control (XON/OFF). Default: Off
Hardware Flow Control	The data flow is handled by the Hardware Flow Control (RTS/CTS). Default: Off
Monitor DSR	Specifies whether the EIA-232 signal DSR (Data Set Ready) should be monitored. on the serial console port. When the DSR signal is dropped (turn off terminal), the session is terminated. If login is required, will force user to login next time terminal is powered up. Default: Off

Ethernet

The Ethernet port is used to both provide access to the MCR-MGT Management Module from the LAN or Internet as well as allowing the Management Module to access hosts and servers on the LAN or beyond. The port allows the user to configure, monitor and/or control the system modules by Telnetting, SSHing, HTTPing or HTTPSing into the IP address associated with this port.

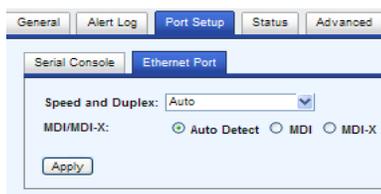

Field Descriptions

Speed and Duplex Define the Ethernet connection.

Data Options:

- **Auto**—automatically detects the Ethernet interface speed and duplex
- 10 Mbps/Half Duplex
- 10 Mbps/Full Duplex
- 100 Mbps/Half Duplex
- 100 Mbps/Full Duplex
- 1000 Mbps/Half Duplex

Default: Auto


MDI/MDI-X

- **Auto-Detect**— automatically detects the Ethernet’s cable polarity
- **MDI** —the cable’s polarity is straight-through
- **MDI-X** —the cable’s polarity is crosscovered

Default: Auto

Advanced Tab

This tab allows the user to reset/restart modules or to reset the configuration of modules back to a factory default state.

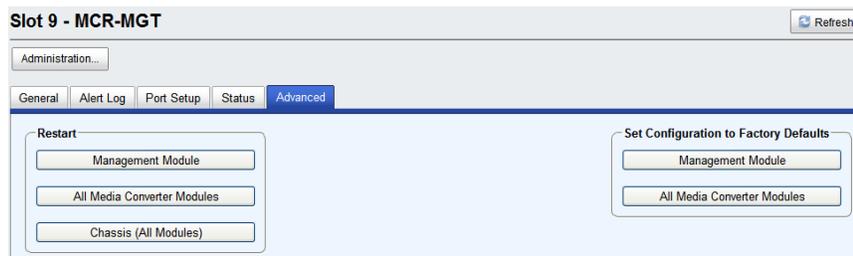

Field Descriptions

Restart

- Restart the Management Module
- Restarts all Media Converter Modules
- Restarts all Modules (including the Management Module)

Set Configuration to Factory Defaults

- Sets the Management Module back to factory default, erasing all configuration, SSL keys and certificates.
- Sets all Media Converter Modules back to factory defaults.

Management Module View

To configure the “system wide” parameters associated with the MCR-MGT module, click on the “Administration” button. This will take you to the following screen where you can navigate to the various parameters which can be set.




The main screen is divided into two sections. On the left is the “navigation tree” and on the right is the information associated with a specific selection on the navigation tree.

Click on the desired item on the navigation tree and then review or update the information in the window on the right of it.

To get back to the “Chassis” view, click on the “Chassis View” item on the top of the navigation tree. This will return you to the screen with the graphical representation of the chassis.

MCR1900 Chassis

The Chassis section is used to configure the parameters directly associated with the chassis. Maximum Threshold parameter as well as the parameters for the Power Scheduler.

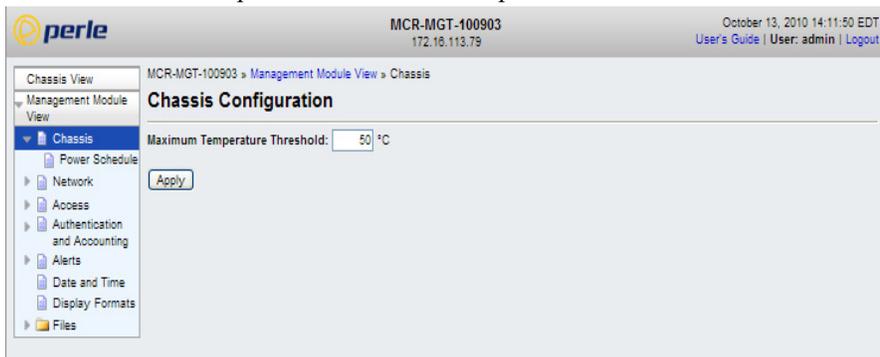

Configure the following parameters:

Maximum Temperature Threshold

When the temperature of the chassis exceeds this threshold, alerts will be generated. Once the threshold is exceeded a new alert will be issued each time the temperature raises by 1 degree.

Field Format: 0 °C to 70 °C (32 °F to 158 °F)

Default: 50 °C

Power Schedule

The parameters in Power Scheduler allow you to configure each slot within the Chassis to be automatically turned On or Off according to a user pre-defined schedule. This feature is available on the MCR1900 chassis only.

MCR-MGT-100903
172.16.113.79

October 13, 2010 14:13:18 EDT
User's Guide | User: admin | Logout

Chassis View: MCR-MGT-100903 » Management Module View » Chassis » Power Schedule

Power Schedule

Slots can be automatically turned on or off according to a schedule. Use the links below to view and change a slot's schedule.

Slot	Name	Schedule
2	CM-1110-SFP	Yes (Change...)
3	CM-1000-M2SC05	No (Change...)
4	CM-110-M2SC2	No (Change...)
5	Empty	No (Change...)
6	Empty	No (Change...)
7	Empty	No (Change...)
8	Empty	No (Change...)
9	Empty	No (Change...)
10	Empty	No (Change...)
11	Empty	No (Change...)
12	Empty	No (Change...)
13	Empty	No (Change...)
14	Empty	No (Change...)
15	Empty	No (Change...)
16	Empty	No (Change...)
17	Empty	No (Change...)
18	Empty	No (Change...)
19	Empty	No (Change...)

Reset and Disable All Schedules

Schedule Field Descriptions

Clicking on “Change” for a specific slot above, you will be presented with the following screen;

MCR-MGT-100903
172.16.113.79

MCR-MGT-100903 » Management Module View » Chassis » Power Schedule Slot 2

Power Schedule - Slot 2

Enable power schedule

Day	Time	
	Turn On	Turn Off
Sunday	<input checked="" type="checkbox"/> 08:30	<input checked="" type="checkbox"/> 14:00
Monday	<input type="checkbox"/> 08:30	<input type="checkbox"/> 23:00
Tuesday	<input checked="" type="checkbox"/> 10:30	<input checked="" type="checkbox"/> 18:30
Wednesday	<input type="checkbox"/> 10:30	<input type="checkbox"/> 18:30
Thursday	<input checked="" type="checkbox"/> 08:30	<input checked="" type="checkbox"/> 18:30
Friday	<input type="checkbox"/> 08:30	<input type="checkbox"/> 18:30
Saturday	<input checked="" type="checkbox"/> 08:30	<input checked="" type="checkbox"/> 18:30

Apply

Configure the following parameters:

Enable Power Scheduler Enable the scheduler feature for this slot. The power scheduler can be enabled or disabled individually for each slot.
Default: Disabled

Turn On/Turn Off For each day of the week, you can select an "ON" time and/or an "OFF" time. You can cross over one or more days. For example you could configure an "OFF" time on Friday at 17:00 (5 P.M.) and an "ON" time of Monday at 9:00. This would power the slot off on Friday afternoon until Monday morning.

Network

The Network node allows you to set up your IPv4 or IPv6 network permeates to be used on the Ethernet port of the MCR-MGT Management Module. These are used by the Management Module to access the network.

The screenshot displays the 'Network' configuration interface for the MCR-MGT-100903 device. The breadcrumb trail is 'MCR-MGT-100903 > Management Module View > Network'. The left sidebar shows a tree view with 'Network' selected. The main content area includes the following fields and options:

- System Name:** MCR-MGT-100903
- Domain:** testing
- Register Address with DNS (when DHCP is enabled)
- IP Address** (selected tab) / IPv6 Addresses
- Obtain IP Address automatically using DHCP/BOOTP
- Use the following IP Address:
 - IP Address:** 172.16.113.79
 - Subnet Mask:** 255.255.0.0
- Default Gateway:** 172.16.1.7
- DNS Server:** 0.0.0.0
- Apply** button

Configure the following parameters:

- System Name** The **System Name** is used for informational purposes by such tools as the MCR Web Manager and is also used in conjunction with the Domain field to construct a fully qualified domain name (FQDN).
Default: MCR-MGT-xxxxxx (where xxxxxx is the last 6 digits of the Management Module's MAC address).
- Domain** This field is combined with the **System Name** to construct the fully qualified domain name (FQDN). For example, if the domain is **mycompany.com** and the **Server Name** is set to **accounting**, the FQDN would be **accounting.mycompany.com**.
- Register Address in DNS** When this parameter is set, the MCR-MGT Management Module will provide the DHCP server with a fully qualified domain name (FQDN), so that the DHCP server can update the network's DNS server with the newly assigned IP address.
Default: Disabled
- Obtain IP Address automatically using DHCP/BOOTP** When enabled, the MCR-MGT Management Module will request an IP address from the DHCP/BOOTP server. When this option is enabled, the MCR-MGT Management Module will also attempt to retrieve the DNS server and default gateway from the DHCP/BOOTP server.
Default: Disabled
- Use the following IP Address** Assign a specific IP address and subnet to the MCR-MGT Management Module's Ethernet interface.

- IP Address** The IPv4 network address you wish to assign to the MCR-MGT management module's Ethernet port. For example: 172.16.113.79
- Subnet Mask** The IPv4 subnet mask you wish to assign to the MCR-MGT management module's Ethernet port. For example, 255.255.0.0
- Default Gateway** Specify the gateway IP address that will provide general access beyond the local network.
Field Format: IPv4 address
- DNS Server** Specify the IP address of a DNS host in your network for host name resolution.
Field Format: IPv4

IPv6 Addresses

Configure IPv6 settings when the MCR-MGT Management Module resides in an IPv6 network.

Field Descriptions

The screenshot shows the 'Network' configuration page for 'MCR-MGT-100903'. The 'IPv6 Addresses' tab is active. The 'Obtain IPv6 Address(es) using:' section has 'IPv6 Autoconfiguration' selected. Below it is a table for 'Custom IPv6 Address List' with one empty row and columns for 'IP Address'. There are 'Add', 'Edit', and 'Delete' buttons for this table. At the bottom, there are fields for 'Default Gateway' and 'DNS Server', and checkboxes for 'Obtain Automatically', 'IPv6 Address', and 'IPv6 Network Prefix'. An 'Apply' button is located at the bottom right of the configuration area.

Configure the following parameters:

- Obtain IPv6 Address(es) using** When enabled, you can configure the MCR-MGT Management Module to obtain the IPv6 address using IPv6 Autoconfiguration or a DHCPv6 server.
Default: Enabled

IPv6 Autoconfiguration	<p>When enabled, the MCR-MGT Management Module will send out a Router Solicitation message. If a Router Advertisement message is received, the MCR-MGT Management Module will configure the IPv6 address and configuration parameters based on the information contained in the advertisement. If no Router Advertisement message is received, the MCR-MGT Management Module will attempt to connect to a DHCPv6 server to obtain IPv6 addresses and other configuration parameters.</p> <p>Default: Enabled</p>
DHCPv6	<p>When enabled, requests IPv6 address and configuration information from the DHCPv6 server.</p> <p>Default: Disabled</p>
Custom IPv6 Address list	<p>You can manually assign one or more IPv6 addresses to the MCR-MGT management module's Ethernet port using this table. Use the "Add", "Delete" or "Edit" buttons to manipulate the table entries.</p>
Default Gateway	<p>Specify the IPv6 address of a gateway that will provide general access beyond the local network.</p> <p>Field Format: IPv6 address</p>
DNS Server	<p>Specify the IPv6 address of a DNS host in your network for host name resolution.</p> <p>Field Format: IPv6 address</p>
Obtain Automatically	<p>When DHCPv6 is enabled, you can enable this option to have the MCR-MGT Management Module receive the DNS IP address from the DHCPv6 server.</p> <p>Default: Enabled</p>
DHCPv6 Settings	
IPv6 Address	<p>When enabled, the MCR-MGT Management Module will accept IPv6 address from the DHCPv6 server.</p> <p>Default: Disabled</p>
IPv6 Network Prefix	<p>When enabled, the MCR-MGT Management Module will accept the network prefix from the DHCPv6 server.</p> <p>Default: Disabled</p>

Adding/Editing a Custom IPv6 Address

You can manually add one of the following:

- The IPv6 network prefix (and the MCR-MGT Management Module will determine an IPv6 address based on the network prefix and the MCR-MGT Management Module MAC address).
- The complete IPv6 address.

Configure the following parameters:

Create a unique IPv6 address on the network When enabled, the MCR-MGT Management Module will derive an IPv6 address from the entered network prefix and the MCR-MGT Management Module's MAC address.

Default: Enabled

Network Prefix Specify the IPv6 network prefix. The MCR-MGT Management Module will derive the complete IPv6 address from the entered network prefix and the MCR-MGT Management Module's MAC address.

Default: Enabled

Subnet Bits Specify the network prefix bits for the IPv6 address.

Range: 0-128

Default: 64

Use the following IPv6 address Enable this option when you want to enter a specific IPv6 address.

Default: Disabled

IPv6 Address Specify the complete IPv6 address.

Field Format: IPv6 address

Subnet Bits Specify the network prefix bits for the IPv6 address.

Range: 0-128

Default: 64

Advanced

MCR-MGT-100903
172.16.113.79
October 13, 2010 17:16:39 EDT
User's Guide | User: admin | Logout

MCR-MGT-100903 > Management Module View > Network > Advanced

Advanced Network Settings

Hosts Routes DNS Dynamic DNS IPv6 Tunnels

Name	IP Address/QDN
_default	172.16.1.7
lynx_po	172.16.113.117

Add Edit Delete

Apply

The **Advanced** node configures Host Table entries, Routes, DNS, Dynamic DNS and IPv6 Tunnels. Configure the parameters in the **Advanced** node if you want to

- add a specific host
- modify the host table
- add a route to an external network or host
- specify a DNS server to perform host resolution
- configure an IPv6 tunnel

Host tab

MCR-MGT-100903 > Management Module View > Network > Advanced

Advanced Network Settings

Hosts Routes DNS Dynamic DNS IPv6 Tunnels

Name	IP Address/QDN
_default	172.16.1.7
lynx_po	172.16.113.117

Add Edit Delete

Apply

The **host** tab configures Host Table entries. This can include any type of host the MCR-MGT Management Module will need to communicate with. The host is given a local name and an IP address or a fully qualified domain name which will need to be resolved using a DNS server.

Adding/Editing a Host

The screenshot shows a dialog box titled "Add Host". It has a title bar with a close button (X). The dialog contains the following fields and controls:

- Host Name:** A text input field.
- IP Address:** A radio button that is selected, followed by a text input field.
- Fully Qualified Domain Name (resolved by DNS):** A radio button that is unselected, followed by a text input field.
- Buttons:** "OK" and "Cancel" buttons at the bottom right.

Configure the appropriate parameters.

Host Name	The name of the host. This is used only for the MCR-MGT Management Module configuration. Field Format: Up to 14 characters, no spaces.
IP Address	The IP address of the Host you want to add. Field Format: IPv4 or IPv6 address
Fully Qualified Domain Name	You can configure up to four DNS servers. Field Format: IPv4 or IPv6 address

Routes tab

Entering routes in the routing list enables the identification of gateways to be used for accessing specific hosts or external networks from the MCR-MGT Management Module's local network.

There are three types of routes:

- **Default**—A route that provides general access beyond your local network.
- **Host**—A route defined for accessing a specific host external to your local network.
- **Network**—A route defined for accessing a specific network external to your local network.

Two types of gateways (method of accessing specific hosts or external networks) can be configured:

- **Host**—Specify a specify host that will provide access to the route destination.
- **Interface**—Specify the IPv6 tunnel that will provide access to the route destination.

Field Descriptions

Destination	Network Mask	Type	Gateway	Gateway Type
0.0.0.0		Default	default	Host
0.0.0.0		Default	_default	Host

The following buttons are available on this window:

- Add Button** Adds a route to the Route List.
- Edit Button** Changes an existing route in the Route List.
- Delete Button** Deletes a route from the Route List.

Adding/Editing Routes

From the **Route List** tab, if you click the **Add** or **Edit** button, you will be able to add a new or edit an existing route.

Add Route ✕

Destination

Type:

Host

Network

Default

IP Address:

IPv4 Subnet Mask / IPv6 Subnet Bits:

Gateway

Host:

Interface:

Configure the appropriate parameters.


- Type** Specify the type of route you want to configure.
- Data Options:**
- **Host**—A route defined for accessing a specific host external to your local network.
 - **Network**—A route defined for accessing a specific network external to your local network.
 - **Default**—A route which provides general access beyond your local network.
- Default:** Default

IP Address	When the route Type is defined as Host , this field will contain the IP address of the host. If the route Type is defined as Network , the network portion of the IP address must be specified and the Host port of the address will be set to 0. Example: to access network 10.10.20, the address 10.10.20.0 would be specified in this field. Format: IPv4 or IPv6 address
IPv4 Subnet Mask	When the route is a Network route, you must specify the network's subnet mask.
IPv6 Prefix Bits	If the IP address is IPv6, then you must specify the network's prefix bits. Range: 0-128
Host	Select this option when a host is being used at the route gateway. Default: Enabled, None
Interface	The Interface list is comprised of configured IPv6 tunnels. Select this option when you want to use the specified interface as the gateway to the destination. Field Option(s): IPv6 tunnels Default: Disabled

DNS tab

You can configure up to four DNS servers. If you specified a DNS server on the **Network, Advanced, DNS** tab (either IPv4 or IPv6), it will be automatically be entered into the appropriate list. If the DNS server is provided by a DHCP server, these will NOT be viewable in the list, however, you can add DNS servers to supplement the DHCP supplied server.

Field Descriptions

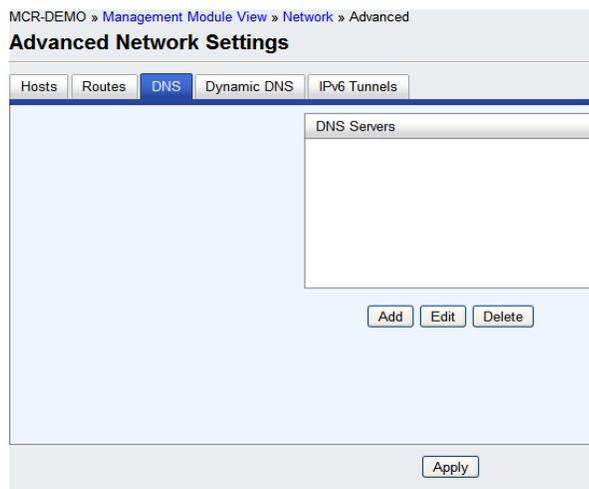

The following buttons are available on this window:

- Add DNS Button** Adds a DNS server.
- Edit DNS Button** Edits an existing DNS server.
- Delete DNS Button** Deletes a DNS server.

Editing/Adding DNS Servers

Configure the parameter:

DNS IP Address You can configure up to four DNS servers.
Field Format: IPv4 or IPv6 address

Dynamic DNS

Dynamic DNS Service providers enable users to access a server connected to the internet that has been assigned a dynamic IP address. The MCR-MGT Management Module has built-in support for the DynDNS.com service provider. Refer to www.DynDNS.com for information on setting up an account.

When the MCR-MGT Management Module is assigned a dynamic IP address, it will inform the DynDNS.com service provider of its new IP address. Users can then use DynDNS.com as a DNS service to get the IP address of the MCR-MGT Management Module. In order to take advantage of this service, the following steps need to be taken.

1. Create an account with DynDNS.com and configure the name your MCR-MGT Management Module will be known by on the internet (the **Host** name). For example, create a host name such as **yourcompanySCS.DynDNS.org**.
2. Enable the **Network Dynamic DNS** feature and configure the MCR-MGT Management Module's dynamic DNS parameters to match the **Host's** configuration on the DynDNS.com server. Every time the MCR-MGT Management Module gets assigned a new IP address, it will update DynDNS.com with the new IP address.
3. Users accessing the MCR-MGT Management Module via the internet can now access it via its fully qualified host name. For example, **telnet yourcompanySCS.DynDNS.org**.

Field Descriptions

Configure the appropriate parameters:

Enable Dynamic DNS for the system	Enables/disables the dynamic DNS feature. When Dynamic DNS is enabled, the MCR-MGT Management Module will automatically update its IP address with DynDNS.org if it changes. Default: Disabled
Service Provider	Displays the Dynamic DNS service provider. Default: DynDNS.org (permanent)
Register Host Name	Specify the registered hostname with DynDNS.org that will be updated with the MCR-MGT Management Module's IP address should it change. Put in the full name; for example, mymediaconverter.dyndns.org.
User Name	Specify the user name used to access the account set up on the DynDNS.org server.
Password	Specify the password used to access the account set up on the DynDNS.org server.
Dynamic DNS Account Settings	
System Type	Specify how your account IP address schema was set up with DynDNS.org. Refer to www.DynDNS.org for information about this parameter. Data Options: Dynamic, Static, Custom Default: Dynamic
Wildcard	Specifies whether to add an alias such as *to your Registered Host Name .yourcompanySCS.dyndns.org pointing to the same IP address as entered for yourcompanySCS.dyndns.org. Data Options: Enable, Disable, Nochange Default: Enable
Connection Method	Specify how the MCR-MGT Management Module is going to connect to the DynDNS.org server. Data Options: <ul style="list-style-type: none"> ● HTTP ● HTTP through Port 8245 ● HTTPS—for a secure connection to the DynDNS server Default: HTTPS
Cipher Suite Button	Launches the cipher information window so you can specify the type of encryption that will be used for data that is transferred between the DynDNS.org server and the MCR-MGT Management Module. See Appendix B, SSL/TLS Ciphers for more information.

- Validate Peer Certificate** Enables/disables peer validation between the DynDNS.org server and the MCR-MGT Management Module. This may be desirable, since the DynDNS user name and password are sent from the management module to the DynDNS server when the IP address needs to be updated and when an account refresh is performed. Account refreshes are done periodically to ensure that DynDNS accounts do not auto-delete should the IP address change infrequently. This parameter will only take effect if **HTTPS** is selected as the connection method.
Default: Disabled
- Validation Criteria Button** Launches the peer validation criteria window so you can specify the information used to validate the connection between the DynDNS.org server and the MCR-MGT Management Module.

Cipher Suite Field Descriptions

The SSL/TLS cipher suite is used to encrypt data between the MCR-MGT Management Module and the client. You can specify up to five cipher groups.

Encryption	Key Size		Key Exchange	HMAC
	Minimum	Maximum		
Any	40	256	Any	Any

Buttons: Add, Edit, Delete, Apply, Cancel

The following buttons are available:

- Add Button** Adds a cipher to the cipher list.
- Edit Button** Edits a cipher to the cipher list.
- Delete Button** Deletes a cipher to the cipher list.

Adding/Editing a Cipher Suite

To see a list of valid cipher suite combinations, see [Appendix B, SSL/TLS Ciphers](#).

Fields: Encryption: Any, Minimum Key Size: 40, Maximum Key Size: 40, Key Exchange: Any, HMAC: Any

Buttons: OK, Cancel

Configure the following parameters:

Encryption	<p>Select the type of encryption that will be used for the SSL connection.</p> <p>Data Options:</p> <ul style="list-style-type: none">● Any—Will use the first encryption format that can be negotiated.● AES-CBC● 3DES● Cast● ARCTWO● AES-FOUR● AES-GCM <p>Default: Any</p>
Min Key Size	<p>The minimum key size value that will be used for the specified encryption type.</p> <p>Data Options: 40, 56, 64, 128, 168, 256</p> <p>Default: 40</p>
Max Key Size	<p>The maximum key size value that will be used for the specified encryption type.</p> <p>Data Options: 40, 56, 64, 128, 168, 256</p> <p>Default: 256</p>
Key Exchange	<p>The type of key to exchange for the encryption format.</p> <p>Data Options:</p> <ul style="list-style-type: none">● Any—Any key exchange that is valid is used (this does not, however, include ADH keys).● RSA—This is an RSA key exchange using an RSA key and certificate.● EDH-RSA—This is an EDH key exchange using an RSA key and certificate.● EDH-DSS—This is an EDH key exchange using a DSA key and certificate.● ADH—This is an anonymous key exchange which does not require a private key or certificate. Choose this key if you do not want to authenticate the peer device, but you want the data encrypted on the SSL/TLS connection.● ECDH-ECDSA—This is an ECDH key exchange using a ECDSA key and certificate. <p>Default: Any</p>
HMAC	<p>Select the key-hashing for message authentication method for your encryption type.</p> <p>Data Options:</p> <ul style="list-style-type: none">● Any● MD5● SHA1● SHA256● SHA384 <p>Default: Any</p>

Validation Criteria Field Descriptions

If you choose to configure validation criteria, the information in the peer SSL/TLS certificate must match exactly the information configured in this window in order to pass peer authentication and create a valid SSL/TLS connection.

The screenshot shows a dialog box titled "SSL Validation Criteria". It contains the following fields:

- Country: [Text Input]
- State/Province: [Text Input]
- Locality: [Text Input]
- Organization: [Text Input]
- Organization Unit: [Text Input]
- Common Name: [Text Input]
- Email: [Text Input]

At the bottom of the dialog, there are two buttons: "Apply" and "Cancel".

IPv6 Tunnels

IPv6 tunnels transport IPv6 data packets from one IPv6 network to another IPv6 network over an IPv4 network. In addition to creating the IPv6 tunnel, you must also create the route that will transport the data packets through the IPv4 network in the Route List (see [Advanced](#)) for more information.

Field Descriptions

The screenshot shows the "Advanced Network Settings" window with the "IPv6 Tunnels" tab selected. The table below shows the configuration for an IPv6 tunnel:

Name	Mode	Remote Host	Gateway
ipv6_tunnel_1	Manual	_default	ethernet_1

Below the table, there are three buttons: "Add", "Edit", and "Delete". At the bottom right of the window, there is an "Apply" button.

The following buttons are available:

- Add Button** Adds an IPv6 tunnel.
- Edit Button** Edits an existing IPv6 tunnel.
- Delete Button** Deletes an IPv6 tunnel. If a tunnel is associated with a route, it cannot be deleted until the route is either changed or deleted.

Adding/Editing an IPv6 Tunnel

When you add/edit an IPv6 tunnel, you are determining how an IPv6 message will reach an IPv6 device through an IPv4 network.

Configure the following parameters:

Name	The name of the IPv6 tunnel. Field Format: Maximum 16 alphanumeric characters Default: ipv6_tunnel1
Mode	The method or protocol that is used to create the IPv6 tunnel. <ul style="list-style-type: none"> • Manual—When enabled, the MCR-MGT Management Module will manually create the IPv6 tunnel to the specified Remote Host through the specified Interface. • 6to4—When enabled, the MCR-MGT Management Module will broadcast to the multicast address 192.88.99.1 through the specified Interface. When the closest 6to4 router responds, it will create the IPv6 tunnel, encapsulating and decapsulating IPv6 traffic sent to and from the MCR-MGT Management Module. • Teredo—When enabled, the Teredo protocol encapsulates the IPv6 packet as an IPv4 UDP message, allowing it to pass through most network address translator (NAT) boxes and create an IPv6 tunnel to the specified Remote Host (a Teredo server) through the specified Interface. Default: Manual
Remote Host	The IPv4 host that can access the IPv6 network when the Mode is Manual . The Teredo server when the Mode is Teredo . Default: None
Interface	The interface that the MCR-MGT Management Module is going to use to access the Remote Host. Default: Ethernet 1

Access

The **Access** node allows you to configure which services can be used to access the MCR-MGT module as well as configuring specific parameters for Web, SSH and SNMP access. It also allows for the configuration of a filter to determine which hosts will be granted access to the Management Module.

MCR-MGT-100634 » Management Module View » Access

Management Module Access Settings

Network management services:

Service	Listening Network Port
<input checked="" type="checkbox"/> Web Manager (HTTP)	TCP 80
<input checked="" type="checkbox"/> Web Manager (HTTPS)	TCP 443
<input checked="" type="checkbox"/> SSH	TCP 22
<input checked="" type="checkbox"/> Telnet	TCP 23
<input checked="" type="checkbox"/> SNMP	UDP 161
<input checked="" type="checkbox"/> SetIP	UDP 33815

Session Inactivity Timeout: seconds

Allow Incoming Pings

Unchecking the box next to each of the services listed above, will disable this service and users will no longer be able to reach the MCR-MGT module using that service.

The session inactivity timer is only used when “Bypass login” is not enabled (i.e. login is required). If no activity is detected on the session for the amount of time configured here, the session will be terminated.

MCR Web Manager

MCR_MGT-100631 » Management Module View » Access » Web Manager

Web Manager

HTTPS

SSL Certificate Passphrase:

[Manage SSL Certificate...](#)

Configure the following parameter.

SSL Certificate Passphrase

This is the SSL/TLS passphrase used to generate an encrypted RSA/DSA private key. This private key and passphrase are required for both HTTPS and SSL/TLS connections, unless an unencrypted private key was generated, then the SSL passphrase is not required. Make sure that you download the SSL private key and certificate if you are using the secure HTTP option (HTTPS) or SSL/TLS. If both RSA and DSA private keys are downloaded to the MCR-MGT Management Module, they need to be generated using the same SSL passphrase for both to work.

SSH

The MCR-MGT Management Module contains SSH Server software that you need to configure if the MCR-MGT Management Module is going to be accessed via SSH. If you specify more than one **Authentication** method and/or **Cipher**, the MCR-MGT Management Module will negotiate with the client and use the first authentication method and cipher that is compatible with both systems.


Functionality

When you are using the SSH connection protocol, keys need to be distributed to all users and the MCR-MGT Management Module. Below is an example scenario for key/certificate distribution.

Users Logging into the MCR-MGT Management Module Using SSH

In the following example, users are connecting to the MCR-MGT Management Module via SSH from the LAN. Therefore, the following keys need to be exchanged:

- Install MCR-MGT Management Module **SSH Public Key** to each user's host machine who is connecting and logging into the MCR-MGT Management Module using SSH.
- Get the **SSH Public Key** from each user's host machine who is connecting and logging into the MCR-MGT Management Module using SSH.

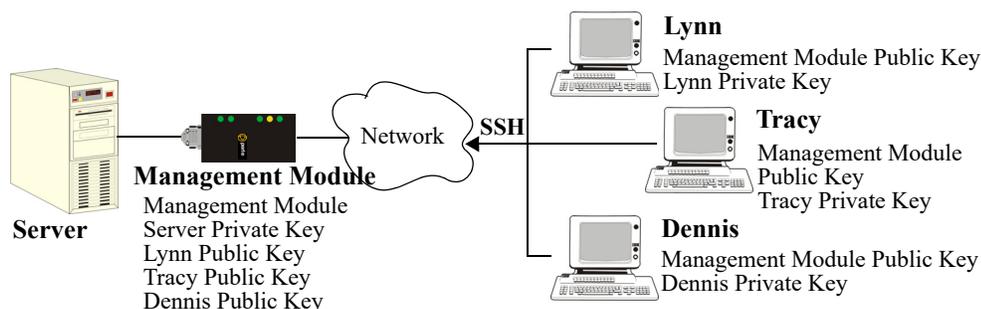

Field Descriptions

MCR-DEMO » Management Module View » Access » SSH

SSH Server

Allow SSH-1 Protocol

Authentication

RSA DSA Keyboard Interactive

Password

Ciphers

3DES Blowfish AES

CAST Arcfour

Break String:

Enable Verbose Output

Allow Compression

[Manage SSH keys...](#)

Configure the following parameters:

Allow SSH-1 Protocol	Allows the user's client to negotiate an SSH-1 connection, in addition to SSH-2. Default: Disabled
RSA	When a client SSH session requests RSA authentication, the MCR-MGT Management Module's SSH server will authenticate the user via RSA. Default: Enabled
DSA	When a client SSH session requests DSA authentication, the MCR-MGT Management Module's SSH server will authenticate the user via DSA. Default: Enabled
Keyboard-Interactive	The user types in a password for authentication. Default: Enabled

Password	The user types in a password for authentication. Default: Enabled
3DES	The MCR-MGT Management Module SSH server's 3DES encryption is enabled/disabled. Default: Enabled
CAST	The MCR-MGT Management Module SSH server's CAST encryption is enabled/disabled. Default: Enabled
Blowfish	The MCR-MGT Management Module SSH server's Blowfish encryption is enabled/disabled. Default: Enabled
Arcfour	The MCR-MGT Management Module SSH server's Arcfour encryption is enabled/disabled. Default: Enabled
AES-CBC	The MCR-MGT Management Module SSH server's AES-CBC encryption is enabled/disabled. Default: Enabled
AES-CTR	The MCR-MGT Management Module SSH server's AES-CTR encryption is enabled/disabled. Default: Enabled
AES-GCM	The Management Module SSH server's AES-GCM encryption is enabled/disabled. Default: Enabled
ChaCha20-Poly1305	The Management Module SSH server's ChaCha20-Poly1305 encryption is enabled/disabled. Default: Enabled
Enable Verbose Output	Displays debug messages on the terminal. Default: Disabled
Allow Compression	Requests compression of all data. Compression is desirable on modem lines and other slow connections, but will only slow down things on fast networks. Default: Disabled

SNMP

If you are using SNMP to manage/configure the MCR-MGT Management Module, or to view statistics or traps, you can connect to the Management Module using either of the two pre-defined communities.

Community = **public**, IP address = **0.0.0.0** (any), Permissions = **ReadOnly**

Community = **private**, IP address = **0.0.0.0** (any), Permissions = **Readwrite**

You must load the management.MIB (found on the CD-ROM packaged with the MCR-MGT Management Module) file into your SNMP manager before you connect to the MCR-MGT Management Module.

Field Descriptions

MCR-MGT-100634 » Management Module View » Access » SNMP

SNMP

Contact Information

Contact: Location:

Communities (Version 1 and Version 2)

Community	Internet Address	Permissions
<input type="text" value="public"/>	<input type="text" value="1.2.3.4"/>	<input type="text" value="Readonly"/>
<input type="text" value="private"/>	<input type="text" value="0.0.0.0"/>	<input type="text" value="Readwrite"/>
<input type="text" value="a"/>	<input type="text" value="5.6.7.8"/>	<input type="text" value="Readwrite"/>
<input type="text" value="f"/>	<input type="text" value="1.2.2.3"/>	<input type="text" value="Readwrite"/>

Users (Version 3)

	Read-Write:	Read-Only:
User:	<input type="text" value="abcd"/>	<input type="text" value="efg"/>
Security Level:	<input type="text" value="Auth/Privacy"/>	<input type="text" value="Auth/Privacy"/>
Auth Algorithm:	<input type="text" value="SHA"/>	<input type="text" value="MD5"/>
Auth Password:	<input type="text" value="*****"/>	<input type="text" value="*****"/>
Privacy Algorithm:	<input type="text" value="AES"/>	<input type="text" value="DES"/>
Privacy Password:	<input type="text" value="*****"/>	<input type="text" value="*****"/>


Configure the following parameters.

- Contact** The name and contract information of the person who manages this SNMP node.
- Location** The physical location of the SNMP node.
- Community** The name of the group that devices and management stations running SNMP belong to.
- Internet Address** The IP address of the SNMP manager that will send requests to the MCR-MGT module. If the address is 0.0.0.0, any SNMP manager matching the **Community** name configured, can access the MCR-MGT module. If you specify a network address, for example 172.16.0.0, any SNMP manager residing on the 172.16.x.x subnet with a matching **Community** name can access the MCR-MGT module.
Field Format: IPv4 or IPv6 address
- Permissions** Defines the level of access this community has.
Data Options:
- **None**—No access will be granted to members of this community.
 - **Readonly**—Read access will be granted to members of this community.
 - **Readwrite**—Read and write access will be granted to members of this community.
- Default:** None
- Users (Version 3)** This section is used to configure the attributes associated with a "read-only" type user and a "read-write" type user. For each parameter you configure an entry in either or both of these columns. It is only used to define V3 users.
- Users** Enter the user name for the SNMP v3 user. This name must match the v3 user name configured in the SNMP manager.

- Security Level** Select the security level for the user. This must match the configuration set up in the SNMP manager.
Data Options:
- **None**—No security is used.
 - **Auth**—User authentication is used.
 - **Auth/Priv**—User authentication and privacy (encryption) settings are used.
- Default:** None
- Authentication Algorithm** Specify the authentication algorithm that will be used for the user.
Data Options: MD5, SHA
Default: MD5
- Authentication Password** Type in the user’s authentication password.
- Privacy Algorithm** Specify the authentication algorithm that will be used for the user.
Data Options: MD5, SHA
Default: MD5
- Privacy Password** Type in the user’s privacy password.

Authorized Hosts

You can configure which hosts will be permitted access to the MCR-MGT module. Up to 16 hosts can be defined by IP address and an additional 16 hosts can be defined by MAC address. Hosts can include; this Authorized Host List, Host Table, DNS servers, SNMP communities, SNMP Traps, LDAP authentication server Host IP address, Email server Host IP address, and Bootup files Host IP address. When enabled, only hosts matching the IP address or MAC address of an entry in this table will be allowed to access the MCR-MGT MCR-MGT Management Module. Host IP addresses must be configured with an IP address and not using FQDN (Fully Qualified Domain Name).

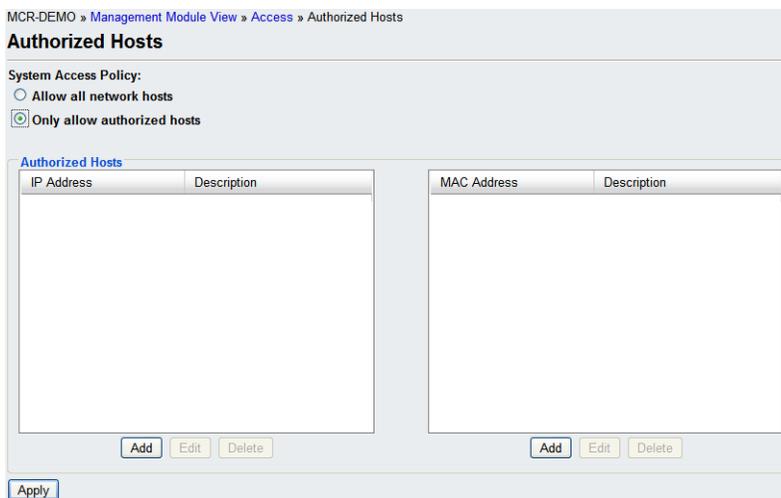

Field Descriptions

System Access Policy

Data Options:

- **Allow all network hosts**— Allows any host to connect to the MCR-MGT Management Module.
- **Only allow authorized hosts**—A security feature that when enabled, the Management Module will only accept data from or send data to hosts configured in this table, Host Table, DNS Servers, SNMP communities, SNMP Traps, LDAP authentication Host IP server address, Email server Host IP address and Bootup files Host IP address. Host IP addresses must be configured with an IP address and not using FQDN.

Add Authorized Host Adds an authorized host.

Edit Authorized Host Edits an authorized host.

Delete Authorized Host Deletes an authorized host.

Authentication and Accounting

This node allows the administrator to configure the security and accounting methods which will be used by the MCR-MGT module.

The default settings are not to have any security or accounting enabled (“Bypass login”). It is up to the administrator to lock down the access to the module if desired. When “Bypass login” is enabled, the user is never prompted with a login prompt.

If “Require Login” is enabled, users will be prompted to login to the MCR-MGT module before access is granted. The default username and password are;

User name --> admin

Password --> superuser

You can define additional users via the “User Accounts” node. The “admin” user cannot be deleted. however the password (“superuser”) can be changed.

Field Descriptions

MCR-MGT-100634 » Management Module View » Authentication and Accounting

Authentication and Accounting

Bypass Login
 Require Login

Primary Authentication Method:
 Local
RADIUS
 Kerberos
 LDAP/Active Directory
 TACACS+

Secondary Authentication Method:
 None
 Local
RADIUS
 Kerberos
 LDAP/Active Directory

Only use as backup

Configure the following parameters.

- Bypass login** When “Bypass login” is selected (enabled), a user accessing the MCR-MGT module is not asked to login.
Default: Enabled
- Require Login** When "Require Login" is selected (enabled), a user accessing the MCR-MGT module is presented with a login prompt or screen before they can obtain access to the management module. The default user name is "admin" and the default password is "superuser". The "admin" user can not be deleted, however the password for this user can be changed.
Default: Disabled
- Primary Authentication Method** Select the primary (or only if "none" is selected for the secondary) authentication method to be used to authenticate users attempting to access the MCR-MGT management module.
Data Options:
- **Local**
 - **Radius**
 - **Kerberos**
 - **LDAP/Active Directory**
 - **TACACS+**
 - **SecureID**
 - **NIS**
- Default:** Local
- Only use as backup** If this option is selected (enabled), the secondary authentication method will only be attempted if the MCR-MGT module can not reach the primary authentication host. (i.e. if the primary authentication host indicates that the user does not have access, the secondary authentication method will not be attempted). In other words, the secondary is only used as a backup to the primary in case the primary is not available.
If this options is not selected (disabled), the secondary authentication will always be tried if the primary authentication is not successful (for any reason including an indication from the primary that the user is not authenticated).
Default: Disabled (not selected).

Specific authentication methods

Local

When **Local** authentication is selected, the user must be configured in the MCR-MGT Management Module's **User Accounts** list. A maximum of 31 users can be configured in the list.

Field Descriptions

Name	Level
admin	Admin
lyn	Operator
test	Operator

Add User [X]

User Name:

Password:

Confirm Password:

Level: Operator

Configure the following parameters:

- User Name** The name of the user.
Restrictions: Do not use spaces.
- Password** The password the user will need to login into the Management Card.
- Level** The access that a user is allowed.

Data Options:

- **Admin**—The admin level user has total access to the MCR-MGT Management Module. You can create more than one admin user account but we recommend that you only have one. They can monitor and configure the MCR-MGT Management Module.
- **Operator**—The Operator level user has no write access to make configuration changes to the Management Module. They are able to read all management module configuration and to control and reset media converter modules, the management module and the chassis.

When the admin user logs into the MCR-MGT Management Module using CLI (via Telnet or SSH), the prompt ends with a #, whereas all other users' prompts ends with a \$ or £, depending on the character set.

Default: Operator

RADIUS

When setting up users on the Radius host, you can specify the permission level this user will have on the MCR-MGT Management Module (i.e. admin or operator). To do this, you need to set the radius parameter “Service_Type” to one of the following values;

<u>Service_Type Value</u>	<u>Permission</u>
1 - Login	Operator
3 - Callback-Login	Operator
6 - Administrative User	Admin
11- Callback Administrative User	Admin

If the “Service_Type” parameter is not returned by the Radius server or if it contains any other value from the one defined above, the firmware will look for a user record in the local data base. If one is found, the permission level will be extracted from this record. If no matching user is found in the local database, the user will be given the default permission of “Operator”

General Field Descriptions

MCR-DEMO » Management Module View » Users » RADIUS

RADIUS Authentication

RADIUS Settings | RADIUS Attributes

RADIUS

First Authentication Host:

Second Authentication Host:

Authentication Port:

Accounting

Enable Accounting

First Accounting Host:

Second Accounting Host:

Accounting Port:

Enable Accounting Authenticator

RADIUS Configuration

Retry: Timeout: seconds

Configure the following parameters:

First Authentication Host Name of the primary RADIUS authentication host.
Default: None

Second Authentication Host Name of the secondary RADIUS authentication host, should the first RADIUS host fail to respond.
Default: None

Authentication Port The port that the RADIUS host listens to for authentication requests.
Default: 1812

Change Secret The secret (password) shared between the MCR-MGT Management Module and the RADIUS authentication host.

Enable Accounting Enables/disables RADIUS accounting.
Default: Disabled

First Accounting Host	Name of the primary RADIUS accounting host. Default: None
Second Accounting Host	Name of the secondary RADIUS accounting host. Default: None
Accounting Port	The port that the RADIUS host listens to for accounting requests. Default: 1813
Change Secret	The secret (password) shared between the MCR-MGT Management Module and the RADIUS accounting host.
Enable Accounting Authentication	Enables/disables whether or not the MCR-MGT Management Module validates the RADIUS accounting response. Default: Enabled
Retry	The number of times the MCR-MGT Management Module tries to connect to the RADIUS server before erroring out. Range: 0-255 Default: 5
Timeout	The time, in seconds, that the MCR-MGT Management Module waits to receive a reply after sending out a request to a RADIUS accounting or authentication host. If no reply is received before the timeout period expires, the MCR-MGT Management Module will retry the same host up to and including the number of retry attempts. Range: 1-255 Default: 3 seconds

Attribute Field Descriptions

MCR-DEMO » Management Module View » Users » RADIUS

RADIUS Authentication

RADIUS Settings | RADIUS Attributes

Attributes

NAS-Identifier:

Automatically determine NAS-IP-Address
 Automatically determine NAS-IPv6-Address
 Use the following NAS-IP-Address:
 Use the following NAS-IPv6-Address:
IP Address:
IPv6 Address:

Configure the following parameters:

NAS-Identifier This is the string that identifies the Network Address Server (NAS) that is originating the Access-Request to authenticate a user.
Field Format: Maximum 31 characters, including spaces

Automatically determine NAS-IP-Address When enabled, the MCR-MGT Management Module will send the MCR-MGT Management Module's Ethernet IPv4 address to the RADIUS server.
Default: Enabled

Use the following NAS-IP-Address	When enabled, the MCR-MGT Management Module will send the specified IPv4 address to the RADIUS server. Default: Disabled
IP Address	The IPv4 address that the MCR-MGT Management Module will send to the RADIUS server. Default: 0.0.0.0
Automatically determine NAS-IPv6-Address	When enabled, the MCR-MGT Management Module will send the MCR-MGT Management Module's IPv6 address to the RADIUS server. Default: Enabled
Use the following NAS-IPv6-Address	When enabled, the MCR-MGT Management Module will send the specified IPv6 address to the RADIUS server. Default: Disabled
IPv6 Address	The IPv6 address that the MCR-MGT Management Module will send to the RADIUS server. Field Format: IPv6 address

Kerberos

Field Descriptions

MCR-DEMO > Management Module View > Users > Kerberos

Kerberos Authentication

Realm:

KDC Domain:

KDC Port:

Configure the following parameters.

Realm	The Kerberos realm is the Kerberos host domain name, in upper-case letters.
KDC Domain	The name of a host running the KDC (Key Distribution Center) for the specified realm. The host name that you specify must either be defined in the MCR-MGT Management Module's Host Table before the last reboot or be resolved by DNS.
KDC Port	The port that the Kerberos server listens to for authentication requests. Default: 88

LDAP/Microsoft Active Directory

LDAP (Lightweight Directory Access Protocol) is an application protocol for querying and modifying directory services running over TCP/IP. It is also used as a method of authenticating users. Microsoft Active Directory is an LDAP like directory service. It can be used for authenticating users in a similar fashion to LDAP. In this manual, the use of LDAP is synonymous with Microsoft Active Directory.

Field Descriptions

MCR-DEMO » Management Module View » Users » LDAP/Active Directory

LDAP/Active Directory Authentication

Host:

Port:

Base:

User Attribute:

OpenLDAP (uid)

Microsoft Active Directory (sAMAccountName)

Other:

Encrypt Passwords Using MD5 Digest

Authenticate With LDAP Server

Name:

Append Base To Name

Password:

Confirm:

Enable TLS

TLS Port:

Configure the following parameters.

- Host Name** The name or IP address of the LDAP/Microsoft Active Directory host. If you use a host name, that host must either have been defined in the MCR-MGT Management Module's **Host Table** before the last reboot or be resolved by DNS. If you are using **TLS**, you must enter the same string you used to create the LDAP certificate that resides on your LDAP/Microsoft Active Directory server.
- Port** The port that the LDAP/Microsoft Active Directory host listens to for authentication requests.
Default: 389
- Base** The domain component (dc) that is the starting point for the search for user authentication.
- User Attribute** This defines the name of the attribute used to communicate the user name to the server.
- Options:**
- **OpenLDAP(uid)**—Chose this option if you are using an OpenLDAP server. The user attribute on this server is “uid”.
 - **Microsoft Active Directory(sAMAccountName)**—Chose this option if your LDAP server is a Microsoft Active Directory server. The user attribute on this server is “sAMAccountName”.
 - **Other**—If you are running something other than a OpenLDAP or Microsoft Active Directory server, you will have to find out from your system administrator what the user attribute is and enter it in this field.
- Default:** OpenLDAP(uid)

Encrypt Passwords Using MD5 digest	Checking this parameter will cause the Management Module to encrypt the password using MD5 digest before sending it to server. If this option is not checked, the password is sent to the server in the clear. Default: Disabled
Authenticate with LDAP server	This option will cause the Management Module to authenticate with the LDAP server before the user authentication takes place. The user name/password to use for this authentication is configured below. Default: Disabled
Name	The user name associated with the Management Module.
Append Base to Name	When checked, this causes the domain component configured in the “base” parameter to be appended to the user name. This allows for a fully qualified name to be used when authenticating the Management Module. Default: Enabled but if the base parameter is not configured, it does not modify the name.
Password	The password associated with the user name for authenticating the Management Module. Default: Blank
Confirm	You must enter the exact same value as the password field. Since the password is not echoed, this ensures that the field was entered correctly. Default: Blank
Enable TLS	Enables/disables the Transport Layer Security (TLS) with the LDAP/Microsoft Active Directory host. Default: Disabled.
TLS Port	Specify the port number that LDAP/Microsoft Active Directory will use for TLS . Default: 636

If you are using LDAP or Microsoft Active Directory with **TLS**, you need to Install a CA list to the MCR-MGT Management Module that includes the certificate authority (CA) that signed the LDAP certificate on the LDAP host by selecting **Files, Keys and Certificates**. See [Appendix B, SSL/TLS Ciphers](#) for more information on the LDAP certificate.

TACACS+

Field Descriptions

MCR_MGT-100631 » Management Module View » Users » TACACS+

TACACS+ Authentication

Authentication/Authorization

Primary Host:

Secondary Host:

Port:

Secret:

Enable Authorization

Accounting

Enable Accounting

Primary Host:

Secondary Host:

Port:

Secret:

Use Alternate Service Names

Configure the following parameter.

Authentication/Authorization Primary Host	The primary TACACS+ host that is used for authentication. Default: None
Authentication/Authorization Secondary Host	The secondary TACACS+ host that is used for authentication, should the primary TACACS+ host fail to respond. Default: None
Authentication/Authorization Port	The port number that TACACS+ listens to for authentication requests. Default: 49
Authentication/Authorization Secret	The TACACS+ shared secret is used to encrypt/decrypt TACACS+ packets in communications between two devices. The shared secret can be any alphanumeric string up to 30 characters in length. Each shared secret must be configured on both client and server sides.
Enable Authorization	Enables authorization on the TACACS+ host, meaning that MCR-MGT Management Module-specific parameters set in the TACACS+ configuration file can be passed to the MCR-MGT Management Module after authentication. Default: Disabled
Enable Accounting	Enables/disables TACACS+ accounting. Default: Disabled
Accounting Primary Host	The primary TACACS+ host that is used for accounting. Default: None
Accounting Secondary Host	The secondary TACACS+ host that is used for accounting, should the primary accounting TACACS+ host fail to respond. Default: None

- Accounting Port** The port number that TACACS+ listens to for accounting requests.
Default: 49
- Accounting Secret** The TACACS+ shared secret is used to encrypt/decrypt TACACS+ packets in communications between two devices. The shared secret may be any alphanumeric string up to 30 characters. Each shared secret must be configured on both client and server sides.
- Use Alternate Service Names** The TACACS+ service name for Telnet or SSH is normally “raccess”. The service name for MCR Web Manager is “EXEC”. In some cases, these service names conflicted with services used by Cisco devices. If this is the case, checking this field will cause the service name for Telnet or SSH to be “perlecli” and the service name for MCR Web Manager to be “perleweb”.

SecurID

If you need to reset the SecurID secret, select **Administration, Authentication, Securid, Settings, Reset SecurID Node Secret**.

Field Descriptions

MCR_MGT-100631 » Management Module View » Users » SecurID

SecurID Authentication

Primary/Master Host:	None
Replica/Slave Host:	None
UDP Port:	5500
Encryption Type:	SDI
<input type="checkbox"/> Use Legacy Mode	

Configure the following parameters.

Primary/Master Host	The first SecurID server that is tried for user authentication. Default: None
Replica/Slave Host	If the first SecurID server does not respond to an authentication request, this is the next SecurID server that is tried for user authentication. Default: None
UDP Port	The port number that SecurID listens to for authentication requests. Default: 5500
Encryption Type	The type of encryption that will be used for SecurID server communication. Data Options: DES, SDI Default: SDI
Legacy	If you are running SecurID 3.x or 4.x, you need to run in Legacy Mode . If you are running SecurID 5.x or above, do not select Legacy Mode . Default: Disabled
Reset Node Secret	Resets the SecurID secret (password) in the MCR-MGT Management Module.

NIS

Field Descriptions

MCR_MGT-100631 » Management Module View » Users » NIS

NIS Authentication

NIS Domain:	<input type="text"/>
Primary NIS Host:	<input type="text" value="None"/>
Secondary NIS Host:	<input type="text" value="None"/>

Configure the following parameters.

NIS Domain The NIS domain name.

Primary NIS Host The primary NIS host that is used for authentication.

Default: None

Secondary NIS Host The secondary NIS host that is used for authentication, should the primary NIS host fail to respond.

Default: None

Alerts



The MCR-MGT Management Module supports the ability to provide notification of important events occurring in the system. The events can be communicated via one or more of the following methods;

- Local Event Log
- Email
- Syslog
- SNMP traps

For a complete list of all alerts and their associated level, please see [Appendix A, Alert Messages](#).

Local Event Log

The MCR-MGT Management Module has a built-in local event log. The event log is a circular buffer that can hold up to 200 local event messages. Once the log is full, the oldest entries will be replaced with new entries. The date and time of when the event occurred is recorded with each event.

The local event log buffer will be cleared if the Management Module is rebooted.

Field Descriptions

MCR1900-100631 » Management Module View » Alerts

Local Alerts

Log Alerts Locally

Alert Level

System-level Fault Module-level Fault Persistent Error One-time Error Significant Event Normal Operation

Apply

Configure the following parameters:

Log Alerts Locally When enabled, alert events are logged to the built-in local event log.

Alert Level Choose the alert level that will trigger a notification to be sent to the local log.

Data Options:

System-level Fault

Module Level Fault

Persistent Error

One-time error

Significant Event

Normal Operation.

The level selected is the minimum trigger level with the "Normal Operation" being the least severe and "System-level Fault" being the most severe. The level selected will include alerts of that level and all more severe levels above it.

Default: Normal Operation

Email Alerts

Email notification requires an SMTP host that is accessible by the MCR-MGT Management Module to process the email messages sent by the MCR-MGT Management Module.

Field Descriptions

MCR1900-100631 » Management Module View » Alerts » Email

Email Alerts

Send Email Alerts

Alert Level

System-level Fault Module-level Fault **Persistent Error** One-time Error Significant Event Normal Operation

Addressing

To: From:
 Subject: Reply To:

Outgoing Mail Server (SMTP):

Username:
 Password:

Encryption: Verify Peer Certificate

TCP Port:

NTLM Domain:

Configure the following parameters:

Send Email Alert Enables/disables Email Alerts.
Default: Disabled

Email Alert Level Choose the alert level that will trigger a notification to be sent to the local log.

Data Options:

System-level Fault

Module Level Fault

Persistent Error

One-time error

Significant Event

Normal Operation.

The level selected is the minimum trigger level with the "Normal Operation" being the least severe and "System-level Fault" being the most severe. The level selected will include alerts of that level and all more severe levels above it.

Default: Normal Operation

To An email address or list of email addresses that will receive the email notification.

Subject A text string, which can contain spaces, that will display in the **Subject** field of the email notification.

Reply To The email address to whom all replies to the email notification should go.

Outgoing Mail Server The SMTP host (email server) that will process the email notification request. This can be either a host name defined in the Management Module host table or the SMTP host IP address.

Username If your mail server requires you to authenticate with it before it will accept email messages, use this field to configure the authorized user name. Maximum size of user name is 64 characters.

Password	Enter the password associated with the user configured in “Username”. Maximum size of password is 64 characters.
Encryption	Choose the type of encryption desired. Valid options are; None - All information is sent in the clear. <ul style="list-style-type: none">• TLS - Select this if your email server requires TLS All data from previous connections on that serial port has drained• SSL - Select this if your email server requires SSL
Verify Peer Certificate	When checked this will enable the validation of the certificate presented by the email server. To validate the certificate, you will need to download the appropriate CA list into the Management Module. If the certificate is not found to be valid, the communication with the email server will be terminated. No authentication will take place and the email message will not be forwarded to the email server. If this option is not checked, the certificate validation will still be attempted but if it fails, a syslog message will be generated but the authentication and forwarding of the email will still take place. Default: Enabled if SSL or TLS encryption is selected. Disabled if no encryption is selected.
TCP Port	This is the TCP port used to communicate with the email server. Default: 25 for non-SSL, 465 if SSL/TLS is used
NTLM Domain	This field is only used if SPA authentication is performed with the email server. It may or may not be required. If the email server does not expect this field, it can be left blank.

Syslog

The MCR-MGT Management Module can be configured to send system log messages to a syslog daemon running on a remote host if the **Syslog** service is activated. You can configure a primary and secondary host for the syslog information and specify the level for which you want syslog information sent.

Field Descriptions

MCR_MGT-100631 » Management Module View » Alerts » Syslog

Syslog

Send syslog messages

Syslog Level

Emergency	Alert	Critical	Error	Warning	Notice	Info	Debug
System-level Fault	Module-level Fault	Persistent Error	One-time Error	Significant Event	Normal Operation		

Alert Level

Primary Host: labgw

Secondary Host: None

Apply

Configure the following parameters:

Send Syslog Alert Enable/disable syslog alert settings.
Default: Disabled

Syslog Level Choose the alert level that will trigger a syslog message to be sent.

Data Options:

- Emergency (System-level Fault)
- Alert (Module Level Fault)
- Critical (Persistent Error)
- Error (One-time error)
- Warning (Significant Event)
- Notice (Normal Operation)
- Info
- Debug

The level selected is the minimum trigger level with the "Debug" being the least severe and "System-level Fault" being the most severe. The level selected will include alerts of that level and all more severe levels above it.

Default: Normal Operation

Primary Host The Primary Host where syslog alerts will be send.

Secondary Host The Secondary Host where the syslog alerts will be send.

SNMP Traps

If MCR-MGT Management Module supports the use of SNMP traps to communicate significant events to an SNMP trap host. Up to 4 trap hosts can be defined to receive the traps. Each host can be configured independently for the version of traps that it supports.

The MCR-MGT Management Module supports v1, v2c and v3 traps.

Field Descriptions

MCR-MGT-100903 » Management Module View » Alerts » SNMP Traps

SNMP Traps

Send SNMP Traps

Alert Level

System-level Fault Module-level Fault Persistent Error One-time Error Significant Event **Normal Operation**

	Internet Address	SNMP Version	Type	Community (SNMPv1 and SNMPv2c)	UDP Port
<input checked="" type="checkbox"/>	172.16.113.117	v3	Inform		162
<input type="checkbox"/>		v1	Trap		162
<input type="checkbox"/>		v1	Trap		162
<input type="checkbox"/>		v1	Trap		162

SNMPv3 User

Username:

Security Level:

Inform Settings

Inform Timeout: milliseconds

Inform Retries:

Advanced

SNMP Engine ID:

Configure the following parameters:

Send SNMP Traps Enables/Disables SNMP Alerts.
Default: Disabled

Alert level Choose the alert level that will trigger an SNMP trap to be sent.

Data Options:

- System-level Fault
- Module Level Fault
- Persistent Error
- One-time error
- Significant Event
- Normal Operation.

The level selected is the minimum trigger level with the "Normal Operation" being the least severe and "System-level Fault" being the most severe. The level selected will include alerts of that level and all more severe levels above it.

Default: Normal Operation

Trap checkbox Check this box to enable the entry for this trap host.
Default: Disabled

Internet Address Enter the IP address of the host you wish to send the trap to.
Field Format: IPv4 or IPv6 address

SNMP Version	<p>Defines the SNMP version of the traps sent to the specified host. If v3 is selected then the SNMP trap v3 user will be used to authenticate the trap with the specified host. Valid options are v1, v2c or v3.</p> <p>Default: v1</p>
Type	<p>This field is ignored for trap host version v1"</p> <p>Data Options:</p> <p>Trap -Management module will send traps via a TRAP_PDU or TRAP2-PDU not expecting any response from the specified host.</p> <p>Inform -Management module will send traps via an INFORM_PDU, expecting a response from the specified host.</p> <p>Default: Trap</p>
Community	<p>The name of the group that devcies and management stations running SNMP belong to. This applies to SNMP version 1 and version 2c.</p>
UDP Port	<p>Enter the UDP port number that the SNMP trap host is listening on for UDP traps.</p> <p>Default: 162</p>
SNMP V3 User	<p>This section is used to configure the attributes associated with a trap "user". It is only used if the trap version is set to V3.</p>
User Name	<p>This field identifies the system sending the traps to the host receiving the traps. Same user name is used for all V3 traps sent by this system.</p>
Security Level	<p>Select the security level for the user. This must match the configuration set up in the SNMP manager.</p> <p>Data Options:</p> <ul style="list-style-type: none"> ● None—No security is used. ● Auth—User Authntication is used. ● Auth/Priv—User authentication and privacy (encryption) settings are used. <p>Default: None</p>
Authentication Algorithm	<p>Specify the authentication algorithm that will be used for the user.</p> <p>Data Options: MD5, SHA</p> <p>Default: MD5</p>
Authentication Password	<p>Type in the user's authentication password.</p>
Confirm Authentication Password	<p>Retype the user's authentication password.</p>
PrivacyAlgorithm	<p>Specify the encryption algorithm to be used with this user.</p> <p>Data Options: DES, AES</p> <p>Default: DES</p>
Privacy Password	<p>Type in the user's privacy password.</p>


- Confirm Password** Retype the privacy password.
- Inform Retires** This is only used for "Inform" traps. Select the number of seconds to wait for the acknowledgement of the trap.
Default: 1 second
- Inform Retries** This is only used for "Inform" traps. Select the number of times the trap will be sent if no acknowledgement is received.
Default: 3
- SNMP Engine ID** The engine ID is used to help identify the trap sender to the trap receiver when using v3 traps. It is a unique identifier of the SNMP agent in the domain. By default the Engine ID is composed using the serial number of the Management Module which should make it unique. If you wish to assign a different engine ID to this node, click on the "Change" button. When changing the engine ID, the string entered in this field will be combined with other required elements to form the EngineID. It is up to the user to ensure that this will be a unique string.

Date and Time

The MCR-MGT Management Module has a real-time internal clock, allowing the date and time to be set and viewed. It will maintain the time over a short power outage and after reboots of the MCR-MGT Management Module. If you do not set the time, it will start the clock at the factory set time.

Time Zone Settings

You can set standard and summer time (daylight savings time) in the MCR-MGT Management Module. You can specify the summer time settings as absolute, on a fixed date and time, or relative, on something like the third day of the third week at this time in June.

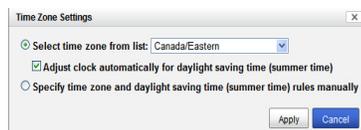

- Select time zone from list:
- Adjust clock automatically for daylight saving time
- Specific time zone and daylight saving time rules manually Time Zone/Summer Time Tab Field Descriptions

Field Descriptions

Configure the following parameters:

- Time Zone Name** The name of the time zone to be displayed during standard time.
Field Format: Maximum 4 characters and minimum 3 characters (do not use angled brackets < >)
- Time Zone Offset** The offset from UTC for your local time zone.
Field Format: Hours *hh* (valid -12 to +14) and minutes *mm* (valid 0 to 59 minutes)
- Summer Time Name** The name of the configured summer time zone; this will be displayed during the summer time setting. If this parameter is not set, then the summertime feature will not work.
Field Format: Maximum 4 characters and minimum 3 characters (do not use angled brackets < >)
- Summer Time Offset** The offset from standard time in minutes. Valid values are 0 to 180.
Range: 0-180
Default: 60
- Summer Time Mode** You can configure the summer time to take effect:
- **None**—No summer time change.
 - **Fixed**—The summer time change goes into effect at the specified time every year. For example, April 15 at 1:00 pm.
 - **Recurring**—The summer time changes goes into effect every year at same relative time. For example, on the third week in April on a Tuesday at 1:00 pm.
- Default:** None
- Fixed Start Date** Sets the exact date and time in which the MCR-MGT Management Module's clock will change to summer time (daylight saving time) hours.
- Fixed End Date** Sets the exact date and time in which the MCR-MGT Management Module's clock will end summer time hours and change to standard time.

Recurring Start Date Sets the relative date and time in which the MCR-MGT Management Module's clock will change to summer time (daylight saving time) hours. Sunday is considered the first day of the week.

Recurring End Date Sets the relative date and time in which the MCR-MGT Management Module's clock will end summer time hours and change to standard time. Sunday is considered the first day of the week.

Network Time Tab

You can configure your SNTP client in the MCR-MGT Management Module to automatically synchronize the MCR-MGT Management Module's time.

Field Descriptions

Configure the following parameters.

SNTP Mode The SNTP mode. The SNTP client listens on UDP port 123.

Data Options:

- **None**—SNTP is turned off.
- **Unicast**—Sends a request packet periodically to the Primary host. If communication with the Primary host fails, the request will be sent to the Secondary host.
- **Multicast**—Listen for any broadcasts from an SNTP server and then synchronizes its internal clock to the message.
- **Anycast**—Sends a request packet as a broadcast on the LAN to get a response from any SNTP server. The first response that is received is used to synchronize its internal clock and then operates in **Unicast** mode with that SNTP server.

Default: None

SNTP Version Version of SNTP.

Range: 1-4

Default: 4

Enable Authentication Sets SNTP server authentication on or off

Default: Off

Primary Host The name of the primary SNTP server from the MCR-MGT Management Module host table. Valid with **Unicast** and **Multicast** modes, although in **Multicast** mode, the MCR-MGT Management Module will only accept broadcasts from the specified host SNTP server.

Secondary Host	The name of the secondary SNTP server from the MCR-MGT Management Module host table. Valid with Unicast and Multicast modes, although in Multicast mode, the MCR-MGT Management Module will only accept broadcasts from the specified host SNTP server.
Key ID	Specify the key id associated with this host. This key must exist in the sntp (symmetric key) file that was downloaded to the MCR-MGT management card. Valid Key ID's: 1-65534 (Note: the structure for the sntp (symmetric key) file can be found in this guide. Appendix F, Symmetric Key File)

Display Formats

The Display Format tab allows you to customize the way date, time, temperature and power are displayed.

Field Descriptions

Configure the following parameters:

Date	The Date can be express in the following formats: <ul style="list-style-type: none"> ● MM/DD/YYYY ● DD/MM/YYYY ● YYYY-MM-DD Default: MM/DD/YYYY
Time	Time can be express in the following formats: <ul style="list-style-type: none"> ● 12-Hour Clock ● 24-Hour Clock Default: 12-Hour Clock
Temperature	Temperature can be expressed as Celsius or Fahrenheit
SFP Power Units	Power can be expressed in mW(milliwatts) or dBm (decibel milliwatts) for SFP modules.

Files



Firmware

Allows you to update new firmware to the Management Module and any installed Media Converter Modules.


You can choose to use TFTP or HTTP as the method of transferring the files. If TFTP is used, you must have a TFTP server set up with the firmware files residing on it. With HTTP, you can use the same PC as the one which your browser is running on without the need for any additional software.

You must agree to the Perle Licensing Agreement and the Privacy Policy in order to download firmware.

When the Licensing Agreement window appears, specify your country. If you reside in Germany you must select "Germany" as your country. Germany has unique licensing requirements. After selecting your country click on the I Agree button.

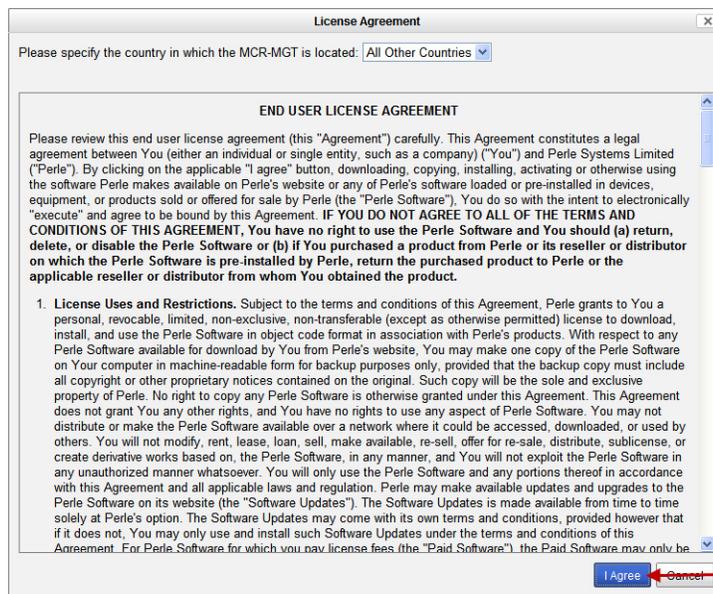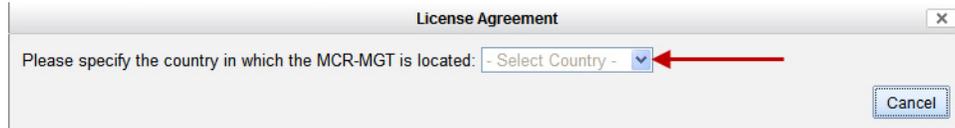


Click on the I Agree checkbox, then click Install.

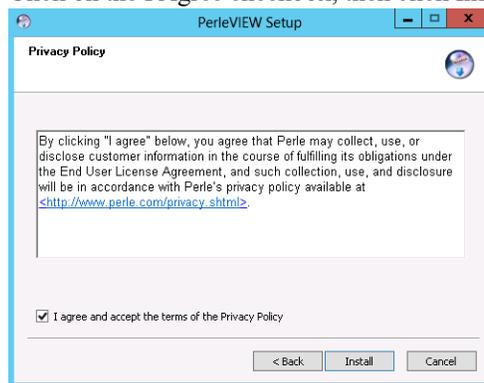

The download will now continue and firmware will be downloaded to each of the modules specified.

After the download has completed, a status dialog will appear.

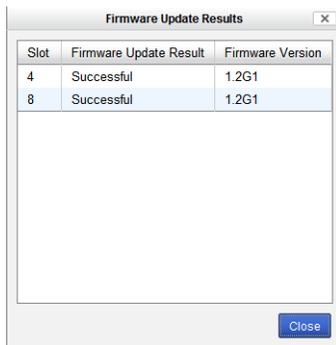

MCR 1900 Media Converter Module Firmware Update

Manual Update

Manually update one or more managed Media Converter Modules of the same type.

MCR-MGT-100634 » Management Module View » Files » Firmware » Media Converter Module

Update Media Converter Module Firmware

Choose Update Method

Automatically update media module firmware from management module
 Manually update media module firmware

Apply

Select Modules to Update

Module Type: CM-110

Update	Slot	Name	Firmware Version
<input type="checkbox"/>	10	CM-110-M2ST2	1.1G1

Select All
Clear All

Web TFTP

File: Browse...

Update Firmware

1. From the drop down box, select the Module Type.
2. Displayed is a list of slots which contain this Module Type.
3. Select Update for each module to be upgraded.
4. Either select Web or TFTP to perform the firmware update.

Automatic Update

Automatically update managed Media Converter Modules. Only media converter modules that are running older versions of the firmware will be updated.

MCR-MGT-100634 » Management Module View » Files » Firmware » Media Converter Module

Update Media Converter Module Firmware

Choose Update Method

Automatically update media module firmware from management module
 ⓘ This management module contains a bundle of firmware, which is used to automatically update installed media modules.

Automatic updates occur when:

- Management module is restarted
- Chassis is power cycled
- Media module is inserted

Media module firmware bundle is included with management module firmware.

Module Type	Firmware Version
CM-100	1.1G1
CM-110	1.1G1
CM-1000/CM-1000-SFP	1.0G2
CM-1110	1.1G1
CM-1110-SFP	1.1G1
CM-100MM	1.0A2
CM-1000MM	1.0A2

Manually update media module firmware

Change has not been applied.

The Media Converter Module firmware bundle is included with management module firmware. Automatic updates will occur when the:

- Management Module is restarted
- Chassis is power cycled
- Media Converter Module is inserted

Note: Remember to click the Apply button to save your configuration changes.

SMI Media Converter Firmware Update

Manual Update

MCR-MGT-VI » Management Module View » Files » Firmware » Media Converter Module

Update Media Converter Module Firmware

Module Information

Module Type:

Slot	Name	Firmware Version
2	CM-110-S2LC120	1.0G3

Web TFTP

File:

The managed Media Converter Module to be updated will be shown. Either select Web or TFTP to perform the firmware update.

Automatic Update

MCR-MGT-100634 » [Management Module View](#) » Files » Firmware » Media Converter Module

Update Media Converter Module Firmware

Choose Update Method

Automatically update media module firmware from management module
 ⓘ This management module contains a bundle of firmware, which is used to automatically update installed media modules.

Automatic updates occur when:

- Management module is restarted
- Chassis is power cycled
- Media module is inserted

Media module firmware bundle is included with management module firmware.

Hide Bundle Info ▲

Module Type	Firmware Version
CM-100	1.1G1
CM-110	1.1G1
CM-1000/CM-1000-SFP	1.0G2
CM-1110	1.1G1
CM-1110-SFP	1.1G1
CM-100MM	1.0A2
CM-1000MM	1.0A2

Manually update media module firmware

Apply Change has not been applied.

The Media Converter Module firmware bundle is included with management module firmware. Automatic updates will occur when the:

- Management Module is restarted
- Chassis is power cycled
- Managed Media Converter Module is inserted

Note: Remember to click the Apply button to save your configuration changes.

Configuration

This option allows you to Backup and Restore configuration files. You can choose to backup the configuration in Binary (native) format or as a text file. The text file can be viewed and edited with a standard text editor.

Keys and Certificates

Allows you to install Keys and Certificates to the MCR-MGT Management Module. See [Appendix B, SSL/TLS Ciphers](#) for more information.

Manage SSL Keys

Field Descriptions

Configure the following parameter

Key/Certificate	Select key or certificate to be transferred to or from the management module. Data Options: <ul style="list-style-type: none"> ● Get Server SSH Public Key. ● Install SSH User Public Key. ● Install SSL/TLS Private Key, required if using HTTPS and/or SSL/TLS ● Install SSL/TLS Certificate, required if using HTTPS and/or SSL/TLS. ● Install SSL/TLS CA, required if using LDAP/Microsoft Active Directory with TLS, SSL/TLS. ● Install SNTP Keys File, required if using SNTP authentication.
Key Type	Specify the key type that will be used for SSH/SSL. Data Options: <ul style="list-style-type: none"> ● RSA ● DSA
Web/TFTP	Choose the method by which to download/upload keys/certificates. TFTP requires a TFTP server to be accessible by the MCR-MGT management module.

Diagnostic File

Should the Management Module experience any problems, a Perle Technical support representative may ask you to get this file and sent it to us. Uploading this file will permanently remove it from the non-volatile memory on the MCR-MGT Management Module.

Bootup Files

Provides the ability to configure the host and file name from which the firmware and/or configuration for the MCR-MGT Management Module can be retrieved from when the module is booted. A check will be made to determine if the filename has changed since the previous load. If it matches the name of the file downloaded previously, no download will occur. The files must reside on a TFTP server which is accessible to the MCR-MGT Management Module.

TFTP Settings

Provides the ability to configure the timeout and number of retries when doing a TFTP file transfer.

MCR-MGT-100903 » [Management Module View](#) » Files » TFTP Settings

TFTP Settings

Settings for TFTP file transfers.

TFTP Retries:

TFTP Timeout: seconds



CM-100 Media Converter Module

CM-100 Media Converter Module Parameters

MCR1900 Chassis

MCR-MGT-100634 Slot 5

perle MCR-MGT-100634 172.16.22.30 March 02, 2011 4:06:35 PM EST User's Guide | User: admin | Logout

Slot 5 - CM-100-M2SC2

General Copper Port Fiber Port Alert Log Advanced Slot

Name: CM-100-M2SC2
Model: CM-100-M2SC2
Description: Fast Ethernet Media Converter Managed Module. 100BASE-TX (RJ45) [100 m/328 ft] to 100BASE-X 1310nm multimode (SC) [2 km/1.24 miles]

Hardware Setup
Configuration Jumper: Auto Current Switch Settings...

Settings Copy Settings...

CM-100 Media Converter Module

SMI Chassis

MCR-MGT-900084 Slot 2

perle MCR-MGT-900084 172.16.113.65 May 28, 2013 20:38:59 EDT User's Guide | User: admin | Logout

Slot 2 - CM-100-M2SC2

General Copper Port Fiber Port Alert Log Advanced Slot

Name: CM-100-M2SC2
Model: CM-100-M2SC2
Description: Fast Ethernet Media Converter Managed Module. 100BASE-TX (RJ45) [100 m/328 ft] to 100BASE-X 1310nm multimode (SC) [2 km/1.24 miles]


Hardware Setup
Configuration Jumper: Auto Current Switch Settings...

Settings

CM-100 Media Converter Module


General Tab

Field Descriptions

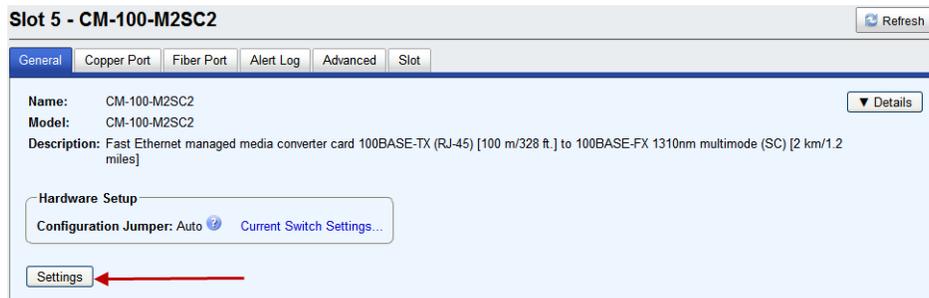

Name	Displays the configured name for this Module.
Model	Displays the module's model information.
Description	Displays a description of the Module that is inserted in this slot.
Configuration Jumper	<p>Auto: Use software configuration if present, otherwise use hardware DIP switch settings.</p> <p>Switch: Use hardware DIP switch settings.</p> <p>For detailed information on hardware DIP switch settings, see the Hardware Installation Guide.</p>
Current Switch Settings	<p>Displays the current DIP switch settings.</p> <p>For detailed information on hardware jumpers and DIP settings, see the Hardware Installation Guide.</p>
Details	Displays the firmware's details.

Settings

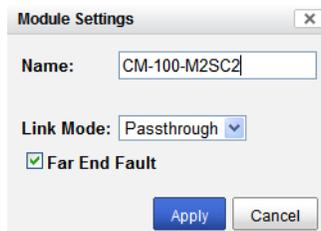

Name	Displays the configured name for this Module.
-------------	---

Link Mode

Smart Link Pass-Through: In this mode, the link state on one connection is directly reflected through the Media Converter Module to the other connection. If link is lost on one of the connections, then the other link will be brought down by the Media Converter.

Standard: In this mode, the links on the fiber and copper sides can be brought up and down independently of each other. A loss of link on either the fiber or copper port can occur without affecting the other connection.

Default: Smart Link Passthrough

Far End Fault



When enabled, if the Media Converter Module detects a loss of signal on the fiber receiver, it will transmit a FEF signal to the remote Media Converter Module. This, in effect, notifies the fiber link partner that an error condition exists on the fiber connection.

Note: This feature only takes effect if Auto Negotiation has been turned off.

When disabled, the Media Converter Module will not monitor for or generate Far End Fault.

Default: On

Copy Settings

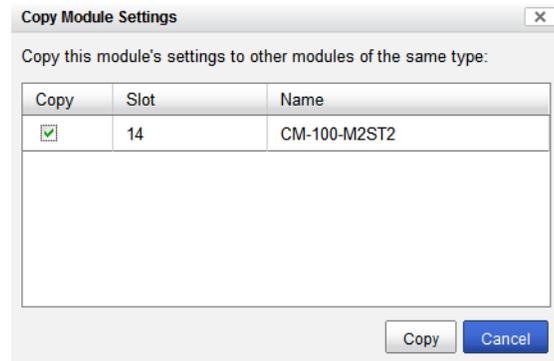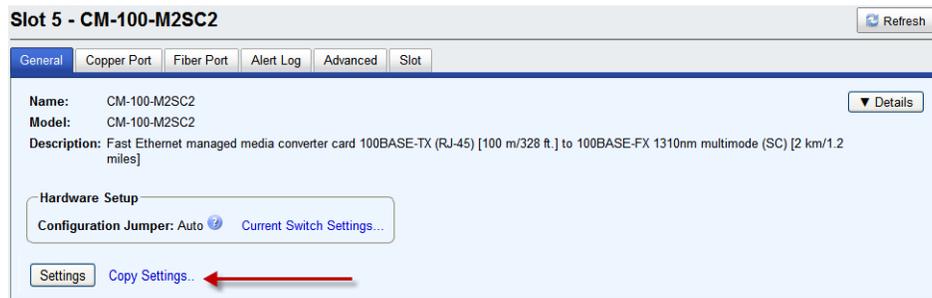

Copy Module Settings

Copy this module's settings to other modules of the same type.

Copper Port Tab

Copper Port > Settings

Slot 5 - CM-100-M2SC2

General **Copper Port** Fiber Port Alert Log Advanced Slot

Name:

Connector: RJ-45
 Link Status: Up
 Auto Negotiation: Complete
 Duplex: Full
 Pause: Symmetrical
 MDI/MDI-X: MDI

Settings

Settings

Copper Port Settings

Enable Port

Name:

Auto-Negotiation

Pause

MDI/MDI-X: Auto MDI MDI-X

Apply Cancel

Configure the following parameter.

- | | |
|-------------------------|---|
| Enable Port | Enables/Disables the copper port.
Default: Enable |
| Name | The name of the copper port.
Field Format: 8 characters |
| Auto-Negotiation | When enabled, the Media Converter Module will negotiate with its link partner to determine the most optimal parameters for this connection. |
| Pause | When enabled, the Media Converter Module will advertise its Pause capabilities. |
| MDI/MDXI | <ul style="list-style-type: none"> ● Auto-Detect— automatically detects the Ethernet's cable polarity ● MDI —the cable's polarity is straight-through ● MDI-X —the cable's polarity is crosscovered Default: Auto-Detect |

Fiber Port Tab

Fiber Port Settings

Slot 5 - CM-100-M2SC2

General Copper Port **Fiber Port** Alert Log Advanced Slot

Name:

Connector: SC
 Link Status: Up
 Far End Fault: OK
 Loopback Mode: Disabled

Settings

Settings

Fiber Port Settings

Name:

Apply Cancel

Configure the following parameter:

Name The name of the fiber port.
Field Format: 8 characters

Alert Log Tab

Field Descriptions

Slot 5 - CM-100-M2SC2 Refresh

General Copper Port Fiber Port **Alert Log** Advanced Slot

<< first < prev 1 next > last >> 10

Date	Description	Severity
2010-09-23 13:17:48	CM-100-M2SC2 (slot 5): Fiber port link status UP.	Significant Event
2010-09-23 13:17:48	CM-100-M2SC2 (slot 5): Copper port link status UP.	Significant Event
2010-09-23 13:17:48	CM-100-M2SC2 (slot 5): OK.	Significant Event
2010-09-23 13:17:48	CM-100-M2SC2 (slot 5): Has been inserted. Model=CM-100-M2SC2, S/N=101-212110M1000.	Significant Event

<< first < prev 1 next > last >> 10

Displays the current local Alerts. The local Alert buffer contains the last 200 alerts and displays these events in a wrap around fashion.

Advanced Tab

Field Descriptions

Slot 5 - CM-100-M2SC2 Refresh

General Copper Port Fiber Port Alert Log **Advanced** Slot

Restart Module

Reset to Factory Defaults

Diagnostics

Fiber Loopback: On Off


Advanced Diagnostics

Configure the following parameter:

- Restart Module** Restarts this Media Converter Module.
- Reset to Factory Defaults** Resets this Media Converter Module back to factory defaults.
- Diagnostics**
 - Fiber Loopback** **Off:** This is the normal setting. In this setting, data received on the fiber port will be passed through the Media Converter Module.
On: This is a test mode. All data received on the receive (RX) fiber connection is looped back to the transmit (TX) fiber connection.
Default: Off
 - Advanced Diagnostics, Read/Write Register** This feature should only be used if guided by a Perle Technical Support Representative. Use of this feature without guidance from a Perle Technical Support Representative could make your Media Converter Module inoperable.

Slot Tab

Field Descriptions

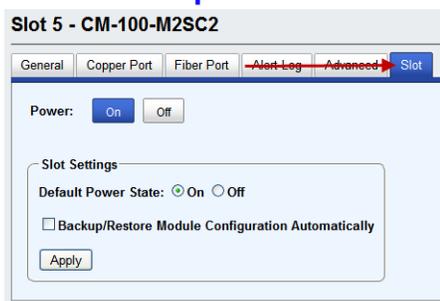

Configure the following parameters:

- Power** Immediately power the slot on or off. The current state of the slot is highlighted in BLUE.
Press the "ON" button to immediately power the slot on.
Press the "OFF" button to immediately power the slot off.
- Default Power State** This is the default power state of the slot when the chassis is powered up or restarted.
Default: On
- Backup/Restore** **Enabled:** The configuration information associated with this slot is saved on the Management Module and will be downloaded to the Media Converter Module whenever the Media Converter Module is inserted into this slot.
Disabled: The Media Converter Module configuration information is only kept on this Module.
Default: Disabled



CM-110 Media Converter Module

CM-110 Media Converter Module Parameters

MCR1900 Chassis

The screenshot shows the MCR-MGT-VI web interface. At the top, it displays the Perle logo, the device name 'MCR-MGT-VI', IP address '172.16.54.106', and the date 'March 01, 2011 15:57:31 EST'. Below this, it shows 'MCR-MGT-VI Slot 6' and a 'Hide Chassis' button. The main view is a chassis diagram with 19 slots. Slot 6 is highlighted with a red box. Below the chassis view, the configuration page for 'Slot 6 - CM-110-M2SC2' is shown. It includes tabs for 'General', 'Copper Port', 'Fiber Port', 'Alert Log', 'Advanced', and 'Slot'. The 'General' tab is active, showing the following details:

- Name: CM-110-M2SC2
- Model: CM-110-M2SC2
- Description: 10/100 Fast Ethernet Media and Rate Converter Managed Module, 10/100BASE-TX (RJ45) [100 m/328 ft] to 100BASE-X 1310nm multimode (SC) [2 km/1.24 miles]

Under the 'Hardware Setup' section, there is a 'Configuration Jumper' set to 'Auto' and a 'Settings' button. An arrow points from the red box in the chassis view to the configuration page.

CM-110 Media Converter Module

SMI Chassis

The screenshot shows the SMI Chassis management interface for Slot 2. The module is identified as CM-110-S2LC120. A red box highlights the physical ports of the module, including LK FDF PWR, LK C 100/1000, CONSOLE, MFD MIST, LK F FDF PWR, LK C FDC 100, Tx, Rx, and 10/100Base-T. An arrow points from the 'CM-110 Media Converter Module' label below to the highlighted module in the chassis view.

Slot 2 - CM-110-S2LC120

General | Copper Port | Fiber Port | Alert Log | Advanced | Slot

Name: CM-110-S2LC120
Model: CM-110-S2LC120
Description: 10/100 Fast Ethernet Media and Rate Converter Managed Module. 10/100BASE-TX (RJ45) [100 m/328 ft] to 100BASE-X 1550nm single mode (LC) [120 km/74.4 miles]

Hardware Setup
 Configuration Jumper: Auto [Current Switch Settings...](#)

[Settings](#)

CM-110 Media Converter Module

General Tab

General > Settings

The screenshot shows the General > Settings tab for Slot 6. The module is identified as CM-110-M2SC2. A red arrow points to the 'Settings' button at the bottom left of the page.

Slot 6 - CM-110-M2SC2


General | Copper Port | Fiber Port | Alert Log | Advanced | Slot

Name: CM-110-M2SC2
Model: CM-110-M2SC2
Description: 10/100 Fast Ethernet Managed Media and Rate Converter Card 10/100Base-TX (RJ-45) [100 m/328 ft.] to 100BASE-FX 1310nm multimode (SC) [2 km/1.2 miles]

Hardware Setup
 Configuration Jumper: Auto [Current Switch Settings...](#)

[Settings](#)

Name	Displays the configured name for this Module.
Model	Displays the module's model information.
Description	Displays a description of the Module that is inserted in this slot.
Configuration Jumper	<p>Auto: Use software configuration if present, otherwise use hardware DIP switch settings.</p> <p>Switch: Use hardware DIP switch settings.</p> <p>For detailed information on hardware DIP switch settings, see the Hardware Installation Guide.</p>
Current Switch Settings	<p>Displays the current DIP switch settings.</p> <p>For detailed information on hardware jumpers and DIP settings, see the Hardware Installation Guide.</p>
Details	Displays the firmware's details.

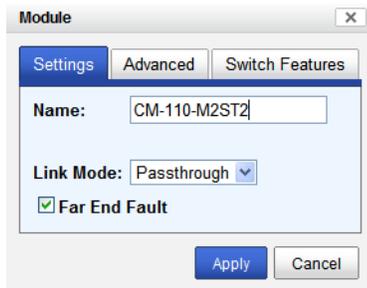


Configure the following parameters.


- Name** Displays the configured name for this Module.

- Link Mode** **Standard:** In this mode, the links on the fiber and copper sides can be brought up and down independently of each other. A loss of link on either the fiber or copper port can occur without affecting the other connection.
Smart Link Pass-Through: In this mode, the link state on one connection is directly reflected through the Media Converter Module to the other connection. If link is lost on one of the connections, then the other link will be brought down by the Media Converter.
Default: Smart Link Pass-Through

- Far End Fault** When enabled, if the Media Converter Module detects a loss of signal on the fiber receiver, it will transmit a FEF signal to the remote Media Converter Module. This, in effect, notifies the fiber link partner that an error condition exists on the fiber connection.
Note: This feature only takes effect if Auto Negotiation has been turned off. When disabled, the Media Converter Module will not monitor for or generate Far End Fault.
Default: Enabled

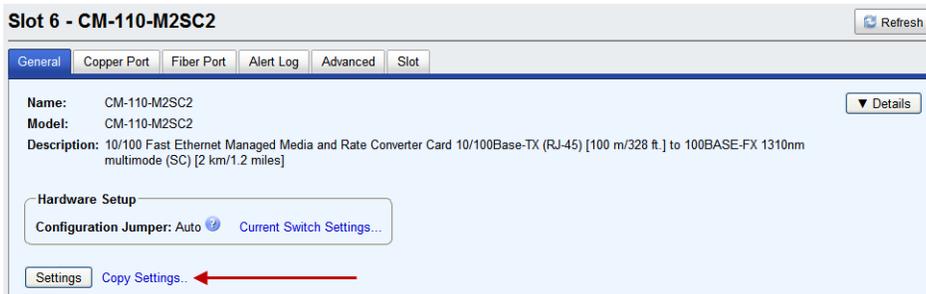


Copy Settings

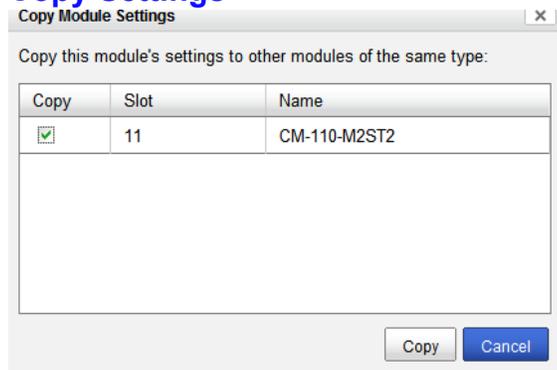

Copy Module Settings

Copy this module's settings to other modules of the same type.

General > Settings > Advanced

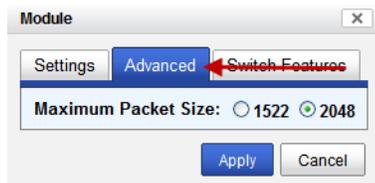


Maximum Packet Size

Select the maximum packet size.

Options: 1522 bytes or 2048 bytes

Default: 2048

General > Settings > Switch Features

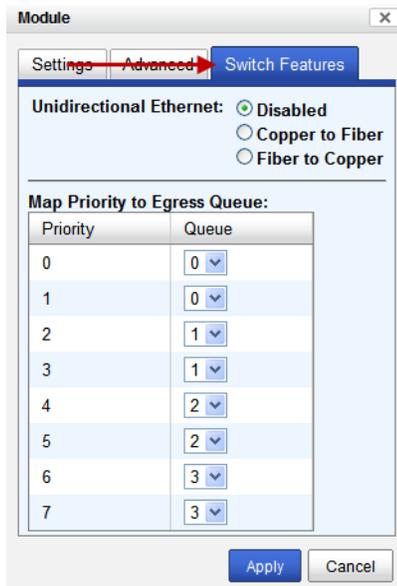

Configure the following parameters.

Unidirectional Ethernet When enabled, this feature provides the ability to restrict the flow of data between the Copper and fiber ports.

Values:

- Disabled
- Copper to Fiber
- Fiber to Copper

Default: Disabled

Map Priority to Egress This is the **default** egress priority mapping for both the copper and fiber ports.

- Priority 0 (lowest priority).....Queue 0
- Priority 1Queue 0
- Priority 2Queue 1
- Priority 3Queue 1
- Priority 4Queue 2
- Priority 5Queue 2
- Priority 6Queue 3
- Priority 7 (highest priority)Queue 3

Copper Port Tab

Copper Port > Properties

Slot 6 - CM-110-M2SC2

General **Copper Port** Fiber Port Alert Log Advanced Slot

Properties **Statistics**

Name:

Connector: RJ-45
 Link Status: Up
 Auto Negotiation: Complete
 Speed: 100
 Duplex: Full
 Pause: Symmetrical
 MDI/MDI-X: MDI-X

Settings

Copper Port - Statistics

General **Copper Port** Fiber Port Alert Log Advanced Slot

Properties **Statistics**

Basic

Bytes	Frames
Received (Good): 0	Receive Errors: 0
Received (Error): 0	Receive Filtered: 0
Transmitted: 0	Transmit Collisions: 0

Detailed

<p>Received Frames</p> <p>Good Frames</p> <p>Unicast Frames: 0 Broadcast Frames: 0 Multicast Frames: 0 Pause (Flow Control) Frames: 0</p> <p>Bad Frames</p> <p>Undersized Frames: 0 Fragment Frames: 0 Oversized Frames: 0 Jabber Frames: 0 MAC Receive Errors: 0 FCS Errors: 0</p>	<p>Transmitted Frames</p> <p>Good Frames</p> <p>Unicast Frames: 0 Broadcast Frames: 0 Multicast Frames: 0 Pause (Flow Control) Frames: 0</p> <p>FCS Errors: 0 Deferred Frames: 0 Collisions (excluding Late and Excessive): 0 Late Collisions: 0 Excessive Collisions: 0 Single Collisions: 0 Multiple Collisions: 0</p>	<p>Frame Lengths</p> <p>64 Bytes: 0 65 to 127 Bytes: 0 128 to 255 Bytes: 0 256 to 511 Bytes: 0 512 to 1023 Bytes: 0 1024 to Maximum Bytes: 0</p>
--	--	--

Copper Port > Properties

Slot 6 - CM-110-M2SC2

General **Copper Port** Fiber Port Alert Log Advanced Slot

Properties **Statistics**

Name:

Connector: RJ-45
 Link Status: Up
 Auto Negotiation: Complete
 Speed: 100
 Duplex: Full
 Pause: Symmetrical
 MDI/MDI-X: MDI-X


Settings

Copper Port > Settings (Auto negotiate speed and duplex)

Configure the following parameters.

Enable Port	Enables/Disables the copper port. Default: Enable
Name	The name of the copper port. Field Format: 8 characters
Auto Negotiate Speed and Duplex	When enabled, the Media Converter Module will negotiate with its link partner to determine the most optimal parameters for this connection. Advertise capabilities of: <ul style="list-style-type: none"> ● 10 Mbps, Full Duplex ● 100 Mbps, Full Duplex ● 10 Mbps, Half Duplex ● 100 Mbps, Half Duplex
Set Speed and Duplex Manually	When enabled, the following selections are available: Speed: 100 Mbps, 10 Mbps Duplex: Full, Half
Pause	When enabled, the Media Converter Module will advertise its Pause capabilities.
MDI/MDI-X	<ul style="list-style-type: none"> ● Auto-Detect— automatically detects the Ethernet’s cable polarity ● MDI —the cable’s polarity is straight-through ● MDI-X —the cable’s polarity is crossovered Default: Auto


Copper Port > Settings (Set speed and duplex manually)

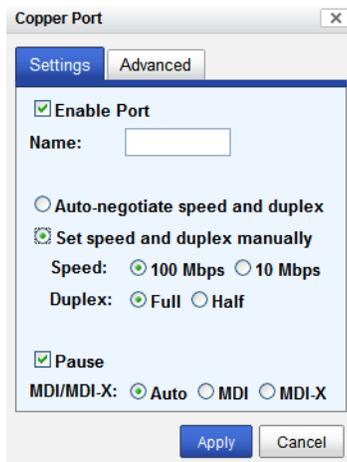

Configure the following parameters.

Set Speed and Duplex Manually When enabled, the following selections are available:
Speed: 100 Mbps, 10 Mbps
Duplex: Full, Half

Copper Port > Advanced

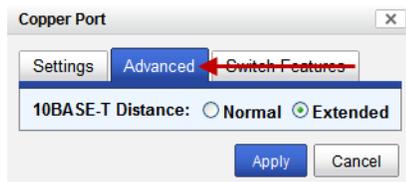

Configure the following parameters.

10BASE-T Distance **Normal:** the Media Converter copper link is in normal operating mode.
Extended: the Media Converter will boost the signal strength on its copper link.

Switch Features

Copper Port > Switch Features > Priority

Copper Port

Settings | Advanced | **Switch Features**

Priority | ~~Rate Limiting~~ | ~~VLAN Tagging~~ | Other

Use 802.1p Tag Priority
 Use IP TOS Priority
Priority Precedence: 802.1p IP TOS
Congestion Policy: Strict Queueing Weighted Queueing

Remap 802.1p Tag Priority:

Original Priority	New Priority
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7

Apply Cancel

Configure the following parameters.

- Enable 802.1p Priority** When enabled, the media converter module will use IEEE 802.1p tagged frame priority control to assign ingress frames to the appropriate priority egress queue.
Default: Enabled
- Enable IP TOS Priority** When enabled, the media converter module will use IPv4 Diffserv or IPv6 traffic class field to assign ingress frames to the appropriate priority egress queue.
Default: Enabled
- Priority Precedence** When both 802.1p priority and IP TOS priority are selected, you can select which of the two priorities takes precedence.
Default: 802.1p

Remap Priority Remap IEEE 802.1p ingress frames with a new priority tag. This new priority tag will be used to determine which queue the frame gets posted to.

Original Priority -----> New Priority

Values: 0-7

Congestion Policy Select a method to be used when determining the order by which frames are sent from the four egress queues. Setting the congestion policy on either the fiber or copper port will change the policy on both ports.

Strict Priority Queuing - The order is determined strictly by the priority of the queue. Frames in higher priority queues are always sent ahead of frames in lower priority queues.

Weighted Fair Queuing - This method allows lower priority frames to be inter-mixed with higher priority frames in the ratio of **(8, 4, 2, 1)**.

The ratio for 8 highest priority sent frames will be as follows:

8 highest priority frames from queue 3


4 frames from queue 2

2 frames from queue 1

1 frame from queue 0

Default: Strict Priority Queuing

Copper Port > Switch Features > Rate Limiting

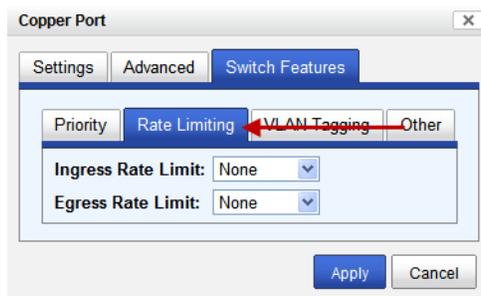

Configure the following parameters.


Ingress Rate Limit Restricts ingress frames on the copper port.
Default: None

Data Options: 64 kbps to 90 Mbps

Egress Rate Limit Restricts egress frames on the copper port.
Default: None

Data Options: 64 kbps to 90 Mbps


Copper Port > Switch Features- VLAN Tagging

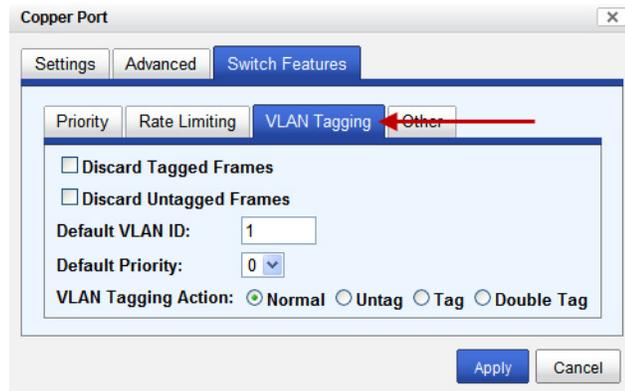

Configure the following parameters.

- | | |
|--------------------------------|--|
| Discard Tagged Frames | When enabled, discards all VLAN tagged frames.
Default: Off |
| Discard Untagged Frames | When enabled, discards all VLAN untagged frames.
Default: Off |
| Default VLAN ID | Specify a default VLAN ID to insert when tagging frames.
Default: 1
Data Options: 0-4095 |
| Default Priority | Specify a default VLAN priority to insert when tagging frames.
Default: 0
Data Options: 0-7 |
| VLAN Tagging Actions | Define the VLAN tagging action to take on a egress frame. <ul style="list-style-type: none"> ● Normal -Take no action. ● Untag - Remove any existing tag. ● Tag <ul style="list-style-type: none"> Insert tag with configured VLAN ID and VLAN priority if original frame is untagged. Replace tag with configured VLAN ID and VLAN priority if original frame is tagged. ● Double tag - Append a tag with configured VLAN ID and VLAN priority. Default: Normal |

Copper Port > Switch Features > Other

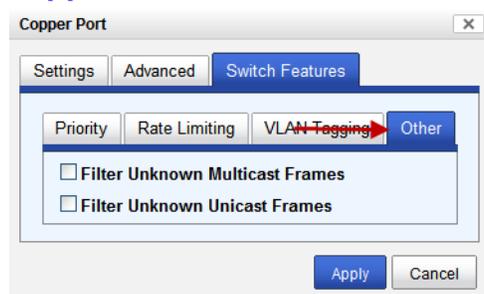

Configure the following parameters.

- Filter Unknown Multicast Frames** When enabled, multicast frames with unknown destination addresses are not allowed to egress this port.
Default: Disabled
- Filter Unknown Unicast Frames** When enabled, unicast frames with unknown destination addresses are not allowed to egress this port.
Default: Disabled

Fiber Port Tab

Field Descriptions > Properties

Slot 5 - CM-110-M2ST2

General Copper Port **Fiber Port** Alert Log Advanced Slot

Properties **Statistics**

Name:

Connector: ST

Receive Status: Fault

Link Status: Down

Far End Fault: Sending Far End Fault

Loopback Mode: Disabled

Settings ←

Fiber Port > Statistics

Slot 10 - CM-110-M2ST2 Refresh

General Copper Port **Fiber Port** Alert Log Advanced Slot

Properties **Statistics** ←

Basic

Bytes		Frames	
Received (Good):	0	Receive Errors:	0
Received (Error):	0	Receive Filtered:	0
Transmitted:	0	Transmit Collisions:	0

Detailed

Received Frames	Transmitted Frames	Frame Lengths
Good Frames	Good Frames	64 Bytes: 0
Unicast Frames: 0	Unicast Frames: 0	65 to 127 Bytes: 0
Broadcast Frames: 0	Broadcast Frames: 0	128 to 255 Bytes: 0
Multicast Frames: 0	Multicast Frames: 0	256 to 511 Bytes: 0
Pause (Flow Control) Frames: 0	Pause (Flow Control) Frames: 0	512 to 1023 Bytes: 0
Bad Frames	FCS Errors: 0	1024 to Maximum Bytes: 0
Undersized Frames: 0	Deferred Frames: 0	
Fragment Frames: 0	Collisions (excluding Late and Excessive): 0	
Oversized Frames: 0	Late Collisions: 0	
Jabber Frames: 0	Excessive Collisions: 0	
MAC Receive Errors: 0	Single Collisions: 0	
FCS Errors: 0	Multiple Collisions: 0	

Fiber Port > Properties

Slot 5 - CM-110-M2ST2

General Copper Port **Fiber Port** Alert Log Advanced Slot

Properties **Statistics**

Name:

Connector: ST
 Receive Status: Fault
 Link Status: Down
 Far End Fault: Sending Far End Fault
 Loopback Mode: Disabled

Settings

Fiber Port Settings

Fiber Port Settings [X]

Settings **Switch Features**

Enable Port

Name:

Duplex: Full Half

Apply Cancel

Configure the following parameters.

- Enable Port** Enables/Disables the fiber port.
- Name** The name of fiber port 1.
Field Format: 8 characters
- Duplex** The following Duplex modes are available:
Duplex: Full, Half
Default: Full

Switch Features

Switch Features > Priority

Fiber Port Settings

Settings Switch Features

Priority ← Rate Limiting VLAN Tagging Other

Use 802.1p Tag Priority

Use IP TOS Priority

Priority Precedence: 802.1p IP TOS

Congestion Policy: Strict Queueing Weighted Queueing

Remap 802.1p Tag Priority:

Original Priority	New Priority
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7

Apply Cancel

Configure the following parameters.

- Enable 802.1p Priority** When enabled, the media converter module will use IEEE 802.1p tagged frame priority control to assign ingress frames to the appropriate priority egress queue.
Default: Enabled
- Enable IP TOS Priority** When enabled, the media converter module will use IPv4 Diffserv or IPv6 traffic class field to assign ingress frames to the appropriate priority egress queue.
Default: Enabled
- Priority Precedence** When both 802.1p priority and IP TOS priority are selected, you can select which of the two priorities takes precedence.
Default: 802.1p

Congestion Policy Select a method to be used when determining the order by which frames are sent from the four egress queues. Setting the congestion policy on either the fiber or copper port will change the policy on both ports.

Strict Priority Queuing - The order is determined strictly by the priority of the queue. Frames in higher priority queues are always sent ahead of frames in lower priority queues.

Weighted Fair Queuing - This method allows lower priority frames to be inter-mixed with higher priority frames in the ratio of **(8, 4, 2, 1)**.

The ratio for 8 highest priority sent frames will be as follows:

8 highest priority frames from queue 3

4 frames from queue 2

2 frames from queue 1

1 frame from queue 0


Default: Strict Priority Queuing

Remap Priority Remap IEEE 802.1p ingress frames with a new priority tag. This new priority tag will be used to determine which queue the frame gets posted to.

Original Priority -----> New Priority

Values: 0-7

Switch Features > Rate Limiting

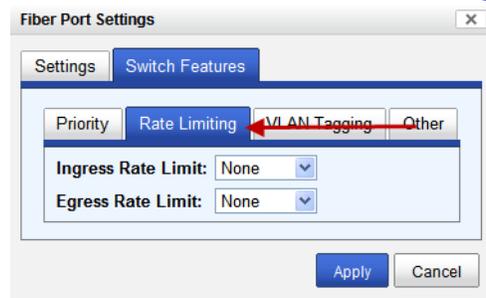

Configure the following parameters.

Ingress Rate Limit Restricts ingress frames on the fiber port.

Default: None


Data Options: 64 kbps to 90 Mbps

Egress Rate Limit Restricts egress frames on the fiber port.

Default: None

Data Options: 64 kbps to 90 Mbps

Switch Features > VLAN Tagging

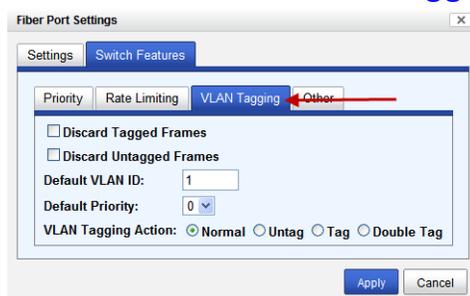


Configure the following parameters.

- Discard Tagged Frames** When enabled, discards all VLAN tagged frames.
Default: Off
- Discard Untagged Frames** When enabled, discards all VLAN untagged frames.
Default: Off
- Default VLAN ID** Specify a default VLAN ID to insert when tagging frames.
Default: 1
Data Options: 0-4095
- Default Priority** Specify a default VLAN priority to insert when tagging frames.
Default: 0
Data Options: 0-7

- VLAN Tagging Actions** Define the VLAN tagging action to take on a egress frame.
 - Normal -Take no action.
 - Untag - Remove any existing tag.
 - Tag
 - Insert tag with configured VLAN ID and VLAN priority if original frame is untagged.
 - Replace tag with configured VLAN ID and VLAN priority if original frame is tagged.
 - Double tag - Append a tag with configured VLAN ID and VLAN priority.**Default:** Normal

Switch Features > Other

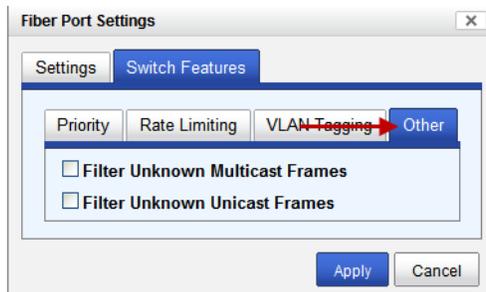

Configure the following parameters.

- Filter Unknown Multicast Frames** When enabled, multicast frames with unknown destination addresses are not allowed to egress this port.
Default: Disabled
- Filter Unknown Unicast Frames** When enabled, unicast frames with unknown destination addresses are not allowed to egress this port.
Default: Disabled

Alert Port Tab

Field Descriptions

Slot 6 - CM-110-M2SC2 Refresh

General Copper Port Fiber Port Alert Log **Advanced** Slot

<< first < prev 1 2 next > last >> 10 |

Date	Description	Severity
2010-09-23 14:55:28	CM-110-M2SC2 (slot 6): Fiber port link status UP.	Significant Event
2010-09-23 14:55:27	CM-110-M2SC2 (slot 6): Copper port link status UP.	Significant Event
2010-09-23 14:55:26	CM-110-M2SC2 (slot 6): Fiber port link status DOWN.	Significant Event
2010-09-23 14:55:26	CM-110-M2SC2 (slot 6): Copper port link status DOWN.	Significant Event
2010-09-23 14:55:26	CM-110-M2SC2 (slot 6): OK.	Significant Event
2010-09-23 14:55:26	CM-110-M2SC2 (slot 6): Has been inserted. Model=CM-110-M2SC2, S/N=101-412310M1000.	Significant Event

Displays the current local Alerts. The local Alert buffer contains the last 200 alerts and displays these events in a wrap around fashion.

Advanced Tab

Field Descriptions

Slot 6 - CM-110-M2SC2 Refresh

General Copper Port Fiber Port Alert Log **Advanced** Slot

Restart Module

Reset to Factory Defaults

Diagnostics

Fiber Loopback: On Off

Virtual Cable Test

▼ Advanced Diagnostics

Configure the following parameter:

- Restart Module** Restarts this Media Converter Module.
- Reset to Factory Defaults** Resets this Media Converter Module back to factory defaults.
- Diagnostics**
- Fiber Loopback** **Off:** This is the normal setting. In this setting, data received on the fiber port will be passed through the Media Converter Module.
On: This is a test mode. All data received on the receive (RX) fiber connection is looped back to the transmit (TX) fiber connection.
Default: Off
- Virtual Cable Test** Performs a Virtual Cable Test to remotely and non-invasively diagnose the quality and characteristics of the attached ethernet cable. This test can detect issues such as cable opens, cable shorts or any impedance mismatch in the cable and then accurately report (within one meter) the distance of the fault. In addition, this Virtual Cable Test will detect pair swaps, pair polarity reversal and excessive pair skew.
- Advanced Diagnostics, Read/Write Register** This feature should only be used if guided by a Perle Technical Support Representative. Use of this feature without guidance from a Perle Technical Support Representative could make your Media Converter Module inoperable.

Slot Tab

Field Descriptions

Slot 6 - CM-110-M2SC2

General Copper Port Fiber Port Alert Log ~~Advanced~~ **Slot**

Power:

Slot Settings

Default Power State: On Off

Backup/Restore Module Configuration Automatically

Configure the following parameters:


- Power** Immediately power the slot on or off. The current state of the slot is highlighted in BLUE.
Press the "ON" button to immediately power the slot on.
Press the "OFF" button to immediately power the slot off.
- Default Power State** This is the default power state of the slot when the chassis is powered up or restarted.
Default: On
- Backup/Restore** **Enabled:** The configuration information associated with this slot is saved on the Management Module and will be downloaded to the Media Converter Module whenever the Media Converter Module is inserted into this slot.
Disabled: The Media Converter Module configuration information is only kept on this Module.
Default: Disabled



CM-1110/CM-1110-SFP Module

CM-1110/SFP Media Converter Module Parameters

MCR1900 Chassis

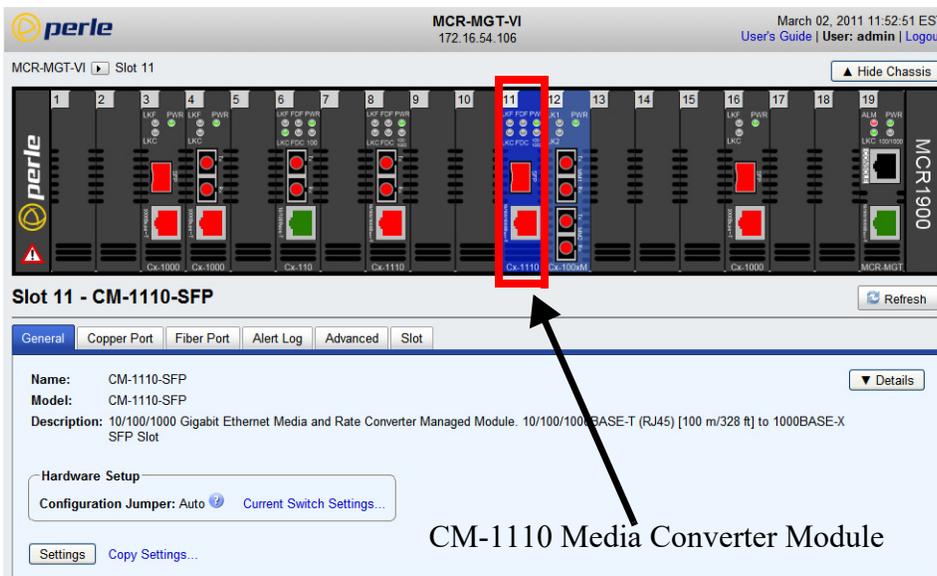

Slot 11 - CM-1110-SFP


General Copper Port Fiber Port Alert Log Advanced Slot

Name: CM-1110-SFP
Model: CM-1110-SFP
Description: 10/100/1000 Gigabit Ethernet Media and Rate Converter Managed Module. 10/100/1000BASE-T (RJ45) [100 m/328 ft] to 1000BASE-X SFP Slot

Hardware Setup
Configuration Jumper: Auto [Current Switch Settings...](#)

Settings [Copy Settings...](#)

CM-1110 Media Converter Module

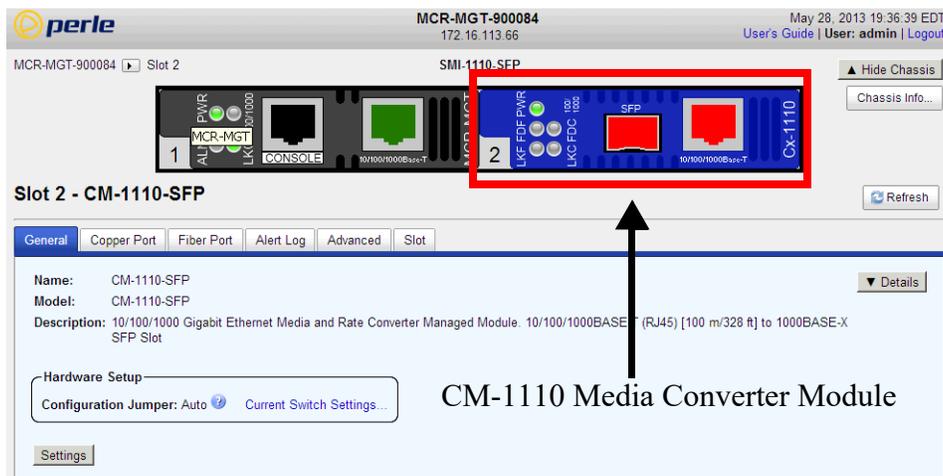

Slot 2 - CM-1110-SFP

General Copper Port Fiber Port Alert Log Advanced Slot

Name: CM-1110-SFP
Model: CM-1110-SFP
Description: 10/100/1000 Gigabit Ethernet Media and Rate Converter Managed Module. 10/100/1000BASE-T (RJ45) [100 m/328 ft] to 1000BASE-X SFP Slot


Hardware Setup
Configuration Jumper: Auto [Current Switch Settings...](#)

Settings [Copy Settings...](#)

CM-1110 Media Converter Module

General Tab


Field Descriptions

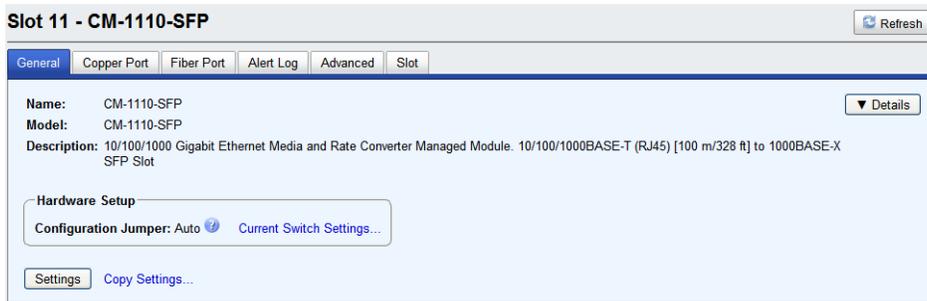


Configure the following parameters.

Name	Displays the configured name for this Module.
Description	Displays a description of the Module that is inserted in this slot.
Configuration Jumper	<p>Auto: Use software configuration if present, otherwise use hardware DIP switch settings.</p> <p>Switch: Use hardware DIP switch settings.</p> <p>For detailed information on hardware DIP switch settings, see the Hardware Installation Guide.</p>
Current Switch Settings	<p>Displays the current DIP switch settings.</p> <p>For detailed information on hardware jumpers and DIP settings, see the Hardware Installation Guide.</p>
Details	Displays the firmware's details.


Copy Settings

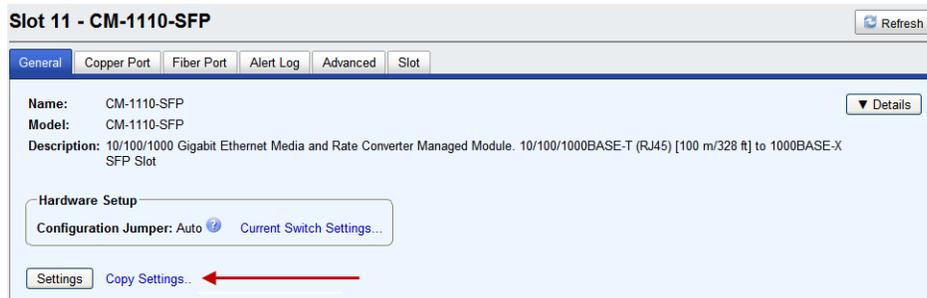

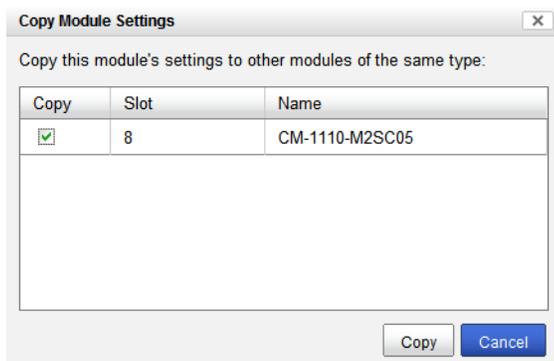

Copy Module Settings Copy this module's settings to other modules of the same type.

Settings

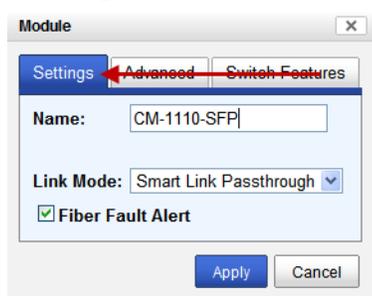


Configure the following parameters.

Name Displays the configured name for this Module.

Link Mode **Smart Link Pass-Through:** In this mode, the link state on one connection is directly reflected through the Media Converter Module to the other connection. If link is lost on one of the connections, then the other link will be brought down by the Media Converter.
Standard: In this mode, the links on the fiber and copper sides can be brought up and down independently of each other. A loss of link on either the fiber or copper port can occur without affecting the other connection.
Default: Smart Link Passthrough

Fiber Fault Alert When enabled, if the Media Converter Module detects a loss of signal on the fiber receiver, it will immediately disable its fiber transmitter signal. This in effect, notifies the fiber link partner that an error condition exists on the fiber connection.
Note: This feature only takes effect if Fiber Negotiation has been turned off. When disabled, the Media Converter Module will not monitor for or generate Fiber Fault Alert.
Default: On


Advanced

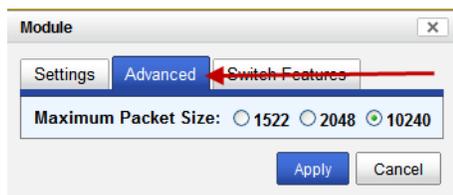

Configure the following parameter.

Maximum Packet Size Select the maximum packet size.
Options: 1522, 2048, 10240
Default: 10240

Switch Features

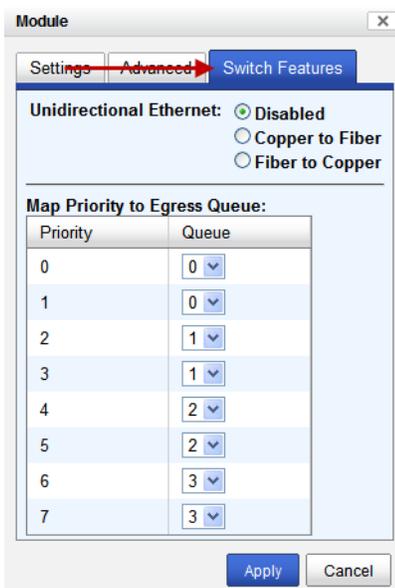

Configure the following parameters:

Unidirectional Ethernet When enabled, this feature provides the ability to restrict the flow of data between the Copper and fiber ports.

Values:

- Disabled
- Copper to Fiber
- Fiber to Copper

Default: Disabled

Map Priority to Egress Queue This is the **default** egress priority mapping for both the copper and fiber ports.

- Priority 0 (lowest priority).....Queue 0
- Priority 1Queue 0
- Priority 2Queue 1
- Priority 3Queue 1
- Priority 4Queue 2
- Priority 5Queue 2
- Priority 6Queue 3
- Priority 7 (highest priority)Queue 3

Copper Port Tab

Copper Port > Properties

Slot 11 - CM-1110-SFP

General **Copper Port** Fiber Port Alert Log Advanced Slot

Properties **Statistics**

Name:

Connector: RJ-45
 Link Status: Down
 Auto Negotiation: In Progress
 Speed: 10
 Duplex: Half
 Pause: Disabled
 Link Partner Remote Fault Status: OK
 Downshift Status: No
 MDI/MDI-X: MDI-X

Copper > Port Statistics

Slot 11 - CM-1110-SFP

General **Copper Port** Fiber Port Alert Log Advanced Slot

Properties **Statistics** ←


Basic

Bytes		Frames	
Received (Good):	0	Receive Filtered:	0
Received (Error):	0	Transmit Filtered:	0
Transmitted:	0	Receive Discards:	0


Detailed

Received Frames		Transmitted Frames		Frame Lengths	
Good Frames		Good Frames		64 Bytes:	0
Unicast Frames:	0	Unicast Frames:	0	65 to 127 Bytes:	0
Broadcast Frames:	0	Broadcast Frames:	0	128 to 255 Bytes:	0
Multicast Frames:	0	Multicast Frames:	0	256 to 511 Bytes:	0
Pause (Flow Control) Frames:	0	Pause (Flow Control) Frames:	0	512 to 1023 Bytes:	0
Bad Frames		FCS Errors:		1024 to Maximum Bytes:	0
Undersized Frames:	0	Deferred Frames:	0		
Fragment Frames:	0	Collisions (excluding Late and Excessive):	0		
Oversized Frames:	0	Late Collisions:	0		
Jabber Frames:	0	Excessive Collisions:	0		
MAC Receive Errors:	0	Single Collisions:	0		
FCS Errors:	0	Multiple Collisions:	0		

Copper Port Settings

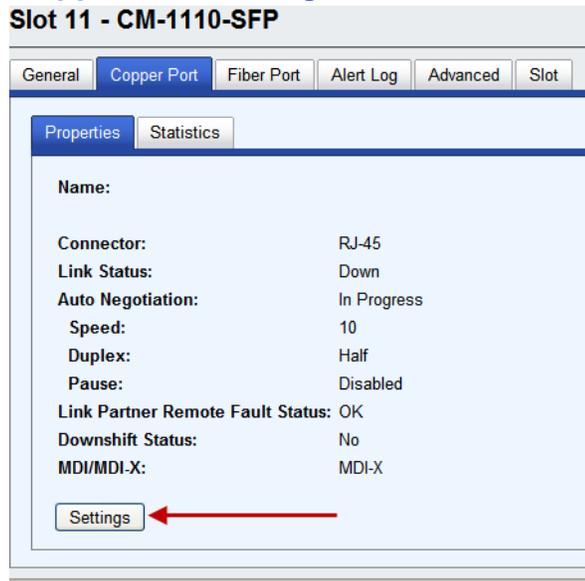

Copper Port > Settings (Auto negotiation speed and duplex)

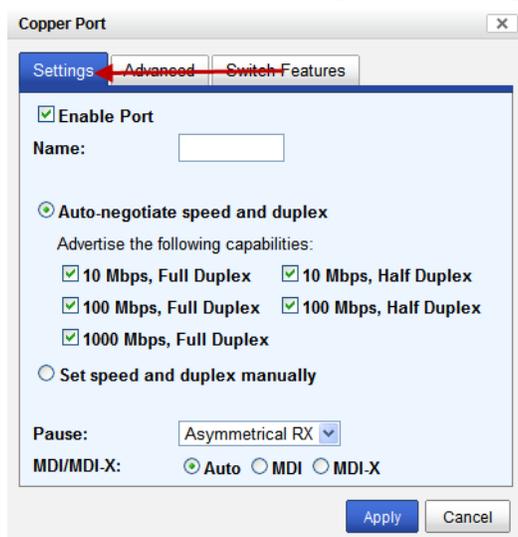

Configure the following parameters.

Enable Port Enables/Disables the copper port.
Default: Enable

Name The name of the copper port.
Field Format: 8 characters

- Auto negotiate speed and duplex** When enabled, the Media Converter Module will negotiate with its link partner to determine the most optimal parameters for this connection.
 Advertise capabilities of:

 - 10 Mbps, Full Duplex
 - 100 Mbps, Full Duplex
 - 10Mbps, Half Duplex
 - 100Mbps, Half Duplex
 - 1000Mbps, Full Duplex

- Set speed and duplex manually** When enabled, the following selections are available:
Speed: 100 Mbps, 10 Mbps
Duplex: Full, Half

- Pause** When enabled, the Media Converter Module will advertise the following Pause capabilities:

 - Symmetrical
 - Asymmetrical TX
 - Asymmetrical RX

Note: Pause feature will only work if Auto Negotiation is set to OFF on the fiber port and Duplex is set to Full.
Default: Off


- MDI/MDI-X**

 - **Auto-Detect**— automatically detects the Ethernet’s cable polarity
 - **MDI** —the cable’s polarity is straight-through
 - **MDI-X** —the cable’s polarity is crossovered

Default: Auto

 -


Copper Port > Settings (Set speed and duplex manually)

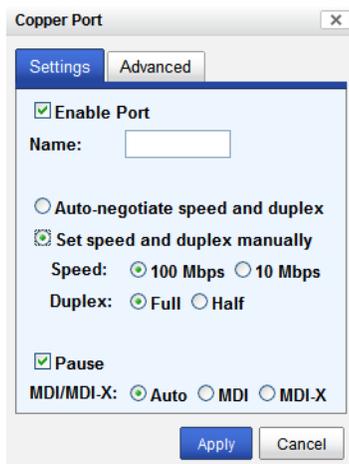

Configure the following parameters.

- Set Speed and Duplex Manually** When enabled, the following selections are available:
Speed: 100 Mbps, 10 Mbps
Duplex: Full, Half

Copper Port > Advanced

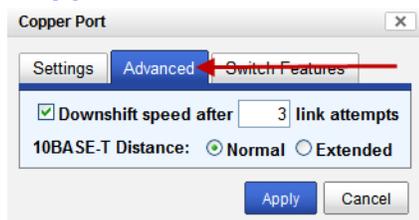

Configure the following parameter.

Downshift speed after number of link attempts

When enabled, the number of retries the Media Converter Module will attempt to establish a fiber connection at 1000 Mbps before attempting a lower speed.

Default: On

Link attempts: 1-8


10BASE-T Distance

Normal: the Media Converter copper link is in normal operating mode.

Extended: the Media Converter will boost the signal strength on its copper link.

Switch Features

Switch Features > Priority

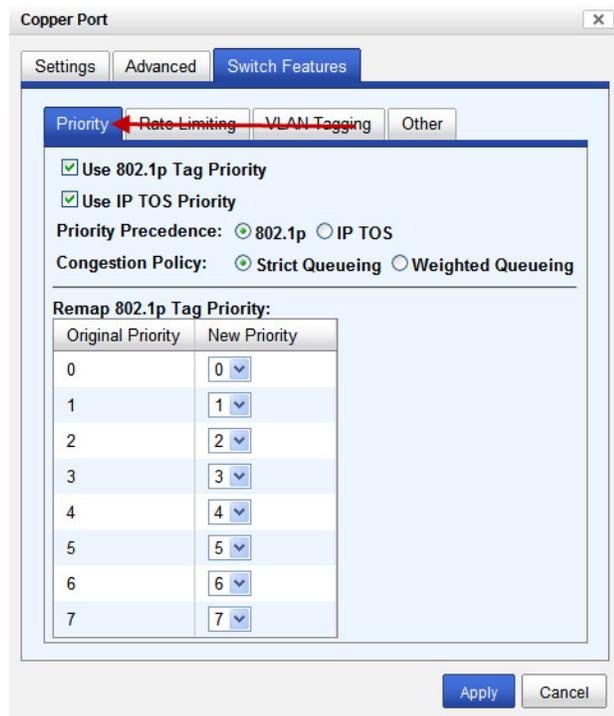

Configure the following parameters.

- Enable 802.1p Priority** When enabled, the media converter module will use IEEE 802.1p tagged frame priority control to assign ingress frames to the appropriate priority egress queue.
Default: Enabled

- Enable IP TOS Priority** When enabled, the media converter module will use IPv4 Diffserv or IPv6 traffic class field to assign ingress frames to the appropriate priority egress queue.
Default: Enabled

- Priority Precedence** When both 802.1p priority and IP TOS priority are selected, you can select which of the two priorities takes precedence.
Default: 802.1p


- Congestion Policy** Select a method to be used when determining the order by which frames are sent from the four egress queues.
Strict Priority Queuing - The order is determined strictly by the priority of the queue. Frames in higher priority queues are always sent ahead of frames in lower priority queues.
Weighted Fair Queuing - This method allows lower priority frames to be inter-mixed with higher priority frames in the ratio of **(8, 4, 2, 1)**.
The ratio for 8 highest priority sent frames will be as follows:
8 highest priority frames from queue 3
4 frames from queue 2
2 frames from queue 1
1 frame from queue 0

- Remap Priority** Remap IEEE 802.1p ingress frames with a new priority tag. This new priority tag will be used to determine which queue the frame gets posted to.

Original Priority -----> New Priority

Values: 0-7

Switch Features > Rate Limiting

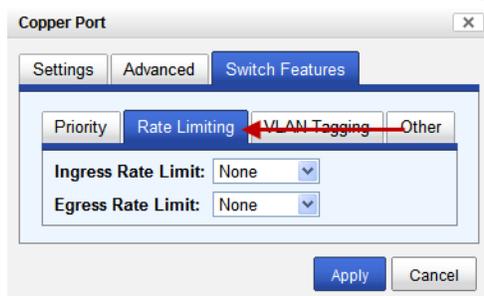


Configure the following parameters.

- Ingress Rate Limiting** Restricts ingress frames on the copper port.
Default: None
Data Options: 64 kbps to 900 mbps

- Egress Rate Limiting** Restricts egress frames on the copper port.
Default: None
Data Options: 64kbps to 900 mbps


Switch Features > VLAN Tagging

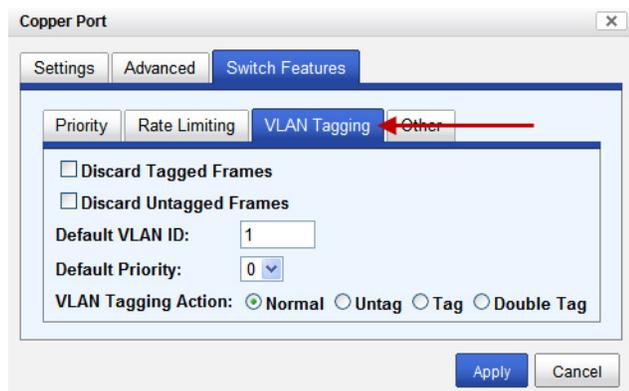

Configure the following parameters.

- | | |
|--------------------------------|--|
| Discard Tagged Frames | When enabled, discards all VLAN tagged frames.
Default: Off |
| Discard Untagged Frames | When enabled, discards all VLAN untagged frames.
Default: Off |
| Default VLAN ID | Specify a default VLAN ID to insert when tagging frames.
Default: 1
Data Options: 0-4095 |
| Default Priority | Specify a default VLAN priority to insert when tagging frames.
Default: 0
Data Options: 0-7 |
| VLAN Tagging Actions | Define the VLAN tagging action to take on a egress frame. <ul style="list-style-type: none"> ● Normal -Take no action. ● Untag - Remove any existing tag. ● Tag <ul style="list-style-type: none"> Insert tag with configured VLAN ID and VLAN priority if original frame is untagged. Replace tag with configured VLAN ID and VLAN priority if original frame is tagged. ● Double tag - Append a tag with configured VLAN ID and VLAN priority. Default: Normal |

Switch Features > Other

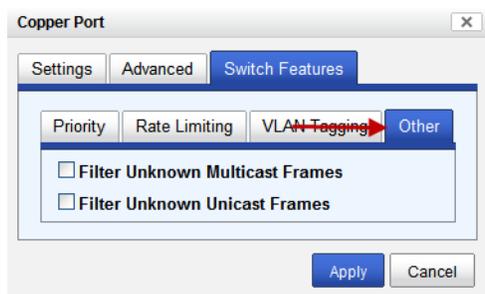

Configure the following parameters.

- Filter Unknown Multicast Frames** When enabled, multicast frames with unknown destination addresses are not allowed to egress this port.
Default: Disabled
- Filter Unknown Unicast Frames** When enabled, unicast frames with unknown destination addresses are not allowed to egress this port.
Default: Disabled

Fiber Port Tab

Fiber Port > Properties

The screenshot shows the 'Fiber Port' configuration window for Slot 11 - CM-1110-SFP. The 'Properties' tab is selected, showing the following parameters:

- Name:
- Connector: SFP
- Receive Status: Fault
- Link Status: Down
- Auto Negotiation: In Progress
- Speed: 1000
- Duplex: Half
- Pause: Disabled
- Link Partner Remote Fault Status: OK
- Loopback Mode: Disabled

A 'Settings' button is located at the bottom left of the configuration area.

Fiber Port > SFP

The screenshot shows the 'SFP' configuration window for Slot 3 - CM-1110-M2SC05. It is divided into several sections:

- Status:**
 - Module Temperature: 45 °C (High Alarm)
 - Transceiver Transmit Supply Voltage: 36 mV (High Warning)
 - Transceiver Transmit Bias Current: 11 mA (Low Warning)
 - Transceiver Transmit Power: 15.051 dBm (Low Alarm)
 - Transceiver Receive Optical Power: 13.617 dBm (Normal)
- Information:**
 - Connector: ST
 - Nominal Signaling Rate: 200 Mbps
 - Link Reach for 9125 Single Mode Fiber: 220 m
 - Link Reach for 50125 Single Mode Fiber: 220 m
 - Link Reach for 62.5125 Single Mode Fiber: 240 m
 - Fiber Wavelength: 128 nm
- Alarm and Warning Thresholds:**
 - Module Temperature:** High Alarm: 41.000 °C, High Warning: 35.000 °C, Low Warning: 25.000 °C, Low Alarm: 20.000 °C
 - Transmit Supply Voltage:** High Alarm: 41.000 mV, High Warning: 35.000 mV, Low Warning: 25.000 mV, Low Alarm: 20.000 mV
 - Transmit Bias Current:** High Alarm: 20.000 mA, High Warning: 13.000 mA, Low Warning: 12.000 mA, Low Alarm: 5.000 mA
 - Transmit Power:** High Alarm: 17.404 dBm, High Warning: 17.150 dBm, Low Warning: 16.021 dBm, Low Alarm: 15.441 dBm
 - Receive Power:** High Alarm: 14.771 dBm, High Warning: 13.802 dBm, Low Warning: 13.010 dBm, Low Alarm: 10.000 dBm

Fiber Port > Statistics

Slot 11 - CM-1110-SFP Refresh

General Copper Port **Fiber Port** Alert Log Advanced Slot

Properties SFP **Statistics**

Basic

Bytes		Frames	
Received (Good):	0	Receive Filtered:	0
Received (Error):	0	Transmit Filtered:	0
Transmitted:	0	Receive Discards:	0

Detailed

<p>Received Frames</p> <p>Good Frames</p> <p>Unicast Frames: 0</p> <p>Broadcast Frames: 0</p> <p>Multicast Frames: 0</p> <p>Pause (Flow Control) Frames: 0</p> <p>Bad Frames</p> <p>Undersized Frames: 0</p> <p>Fragment Frames: 0</p> <p>Oversized Frames: 0</p> <p>Jabber Frames: 0</p> <p>MAC Receive Errors: 0</p> <p>FCS Errors: 0</p>	<p>Transmitted Frames</p> <p>Good Frames</p> <p>Unicast Frames: 0</p> <p>Broadcast Frames: 0</p> <p>Multicast Frames: 0</p> <p>Pause (Flow Control) Frames: 0</p> <p>FCS Errors:</p> <p>Deferred Frames: 0</p> <p>Collisions (excluding Late and Excessive): 0</p> <p>Late Collisions: 0</p> <p>Excessive Collisions: 0</p> <p>Single Collisions: 0</p> <p>Multiple Collisions: 0</p>	<p>Frame Lengths</p> <p>64 Bytes: 0</p> <p>65 to 127 Bytes: 0</p> <p>128 to 255 Bytes: 0</p> <p>256 to 511 Bytes: 0</p> <p>512 to 1023 Bytes: 0</p> <p>1024 to Maximum Bytes: 0</p>
--	--	--

Fiber Port > Properties

Slot 11 - CM-1110-SFP Refresh

General Copper Port **Fiber Port** Alert Log Advanced Slot

Properties **SFP** Statistics

Name:

Connector: SFP

Receive Status: Fault

Link Status: Down

Auto Negotiation: In Progress

Speed: 1000

Duplex: Half

Pause: Disabled

Link Partner Remote Fault Status: OK

Loopback Mode: Disabled

Settings

Fiber Port > Settings

Fiber Port Settings x

Settings 1000 Mbps SFP 100 Mbps SFP Switch Features

Enable Port

Name: Fiber 1

SGMII-Interface


Apply Cancel

Configure the following parameter.

Enable Port Enables/Disables the fiber port.

- Name** The name of the fiber port.
Field Format: 8 characters
- SGMII-Interface** Select the checkbox if your SFP has a SGMII interface.


Fiber Port > 1000 MBPS SFP

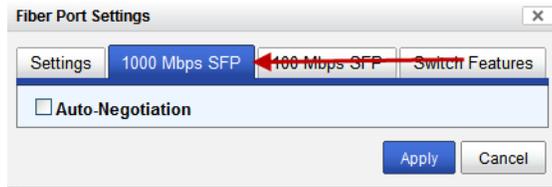

Configure the following parameter.

- Auto Negotiation** **Enabled:** The Media Converter Module will negotiate Ethernet parameters on the fiber connection. This will ensure that the most optimal connection parameters will be in effect. If connecting to another Perle Media Converter, this parameter should be set to Auto. The Media converter module will advertise 1000 Mbps, Full and Half Duplex, no Pause.
- Disabled:** The Media Converter Module's fiber will be fixed to 1000 Mbps, Full Duplex.
- Default:** Disabled

Fiber Port > 100 MBPS SFP

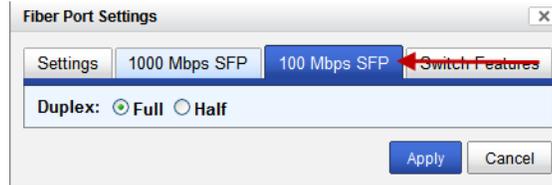

Configure the following parameter.

- Duplex** The following Duplex modes are available:
Duplex: Full, Half
Default: Full

Switch Features

Switch Features > Priority

Fiber Port Settings

Settings 1000 Mbps SFP 100 Mbps SFP Switch Features

Priority Rate Limiting VLAN Tagging Other

Use 802.1p Tag Priority
 Use IP TOS Priority
Priority Precedence: 802.1p IP TOS
Congestion Policy: Strict Queueing Weighted Queueing

Remap 802.1p Tag Priority:

Original Priority	New Priority
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7

Apply Cancel

Configure the following parameters.

Enable 802.1p Priority

When enabled, the media converter module will use IEEE 802.1p tagged frame priority control to assign ingress frames to the appropriate priority egress queue.
Default: Enabled

Enable IP TOS Priority

When enabled, the media converter module will use IPv4 Diffserv or IPv6 traffic class field to assign ingress frames to the appropriate priority egress queue.
Default: Enabled

Priority Precedence

When both 802.1p priority and IP TOS priority are selected, you can select which of the two priorities takes precedence.
Default: 802.1p

Congestion Policy Select a method to be used when determining the order by which frames are sent from the four egress queues.

Strict Priority Queuing - The order is determined strictly by the priority of the queue. Frames in higher priority queues are always sent ahead of frames in lower priority queues.

Weighted Fair Queuing - This method allows lower priority frames to be inter-mixed with higher priority frames in the ratio of **(8, 4, 2, 1)**.

The ratio for 8 highest priority sent frames will be as follows:

8 highest priority frames from queue 3

4 frames from queue 2

2 frames from queue 1


1 frame from queue 0

Remap Priority Remap IEEE 802.1p ingress frames with a new priority tag. This new priority tag will be used to determine which queue the frame gets posted to.

Original Priority -----> New Priority

Values: 0-7

Switch Features > Rate Limiting

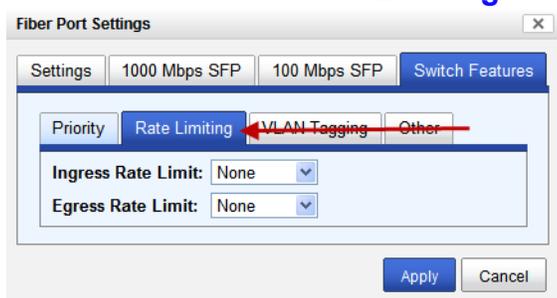

Configure the following parameters.

Ingress Rate Limit Restricts ingress frames on the fiber port.

Default: None


Data Options: 64 kbps to 900 mbps

Egress Rate Limit Restricts egress frames on the fiber port.

Default: None

Data Options: 64 kbps to 900 mbps


Switch Features > VLAN Tagging

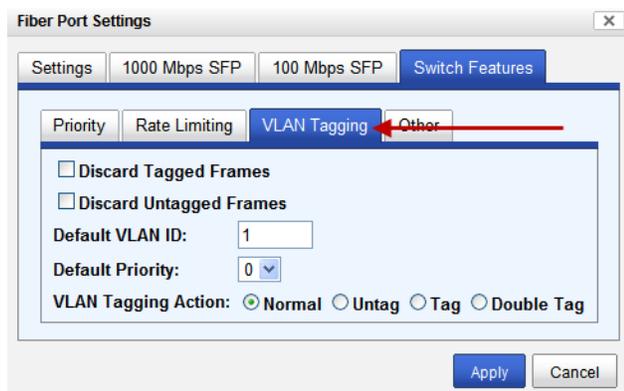

Configure the following parameters.

- | | |
|--------------------------------|--|
| Discard Tagged Frames | When enabled, discards all VLAN tagged frames.
Default: Off |
| Discard Untagged Frames | When enabled, discards all VLAN untagged frames.
Default: Off |
| Default VLAN ID | Specify a default VLAN ID to insert when tagging frames.
Default: 1
Data Options: 0-4095 |
| Default Priority | Specify a default VLAN priority to insert when tagging frames.
Default: 0
Data Options: 0-7 |
| VLAN Tagging Actions | <p>Define the VLAN tagging action to take on a egress frame.</p> <ul style="list-style-type: none"> ● Normal -Take no action. ● Untag - Remove any existing tag. ● Tag <ul style="list-style-type: none"> Insert tag with configured VLAN ID and VLAN priority if original frame is untagged. Replace tag with configured VLAN ID and VLAN priority if original frame is tagged. ● Double tag - Append a tag with configured VLAN ID and VLAN priority. <p>Default: Normal</p> |

Switch Features > Other

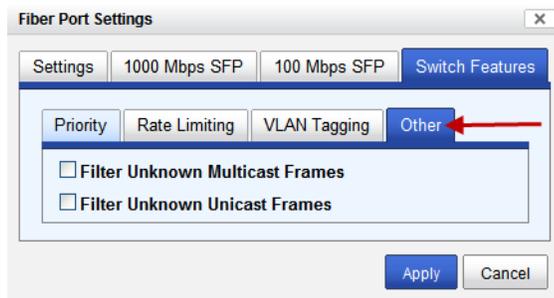

Configure the following parameters.

- | | |
|--|--|
| Filter Unknown Multicast Frames | When enabled, multicast frames with unknown destination addresses are not allowed to egress this port.
Default: Disabled |
| Filter Unknown Unicast Frames | When enabled, unicast frames with unknown destination addresses are not allowed to egress this port.
Default: Disabled |

Alert Log Tab

Field Descriptions

Slot 8 - CM-1110-M2SC05 Refresh

General Copper Port Fiber Port **Alert Log** ~~Advanced~~ ~~Slot~~

<< first < prev 1 2 3 4 5 6 next > last >> 10

Date	Description	Severity
09/21/2010 15:03:26	CM-1110-M2SC05 (slot 8): Copper port link status UP.	Significant Event
09/21/2010 15:03:24	CM-1110-M2SC05 (slot 8): Fiber port link status UP.	Significant Event
09/21/2010 15:03:24	CM-1110-M2SC05 (slot 8): Fiber port link status UP.	Significant Event
09/21/2010 15:03:24	CM-1110-M2SC05 (slot 8): Copper port link status DOWN.	Significant Event
09/21/2010 15:03:24	CM-1110-M2SC05 (slot 8): Fiber port link status DOWN.	Significant Event
09/21/2010 15:03:24	CM-1110-M2SC05 (slot 8): OK.	Significant Event
09/21/2010 14:48:35	CM-1110-M2SC05 (slot 8): Copper port link status UP.	Significant Event
09/21/2010 14:48:35	CM-1110-M2SC05 (slot 8): Copper port link status DOWN.	Significant Event
09/21/2010 14:48:33	CM-1110-M2SC05 (slot 8): Fiber port link status UP.	Significant Event
09/21/2010 14:48:33	CM-1110-M2SC05 (slot 8): Fiber port link status DOWN.	Significant Event

<< first < prev 1 2 3 4 5 6 next > last >> 10

Displays the current local Alerts. The local Alert buffer contains the last 200 alerts and displays these events in a wrap around fashion.

Advanced Tab

Field Descriptions

Slot 3 - CM-1110-M2SC05 Refresh

General Copper Port Fiber Port Alert Log **Advanced** ~~Slot~~

Restart Module

Reset to Factory Defaults

Diagnostics

Fiber Loopback: On Off

Virtual Cable Test

▼ Advanced Diagnostics

Configure the following parameter:

Restart Module Restarts this Media Converter Module.

Reset Factory Defaults Resets this Media Converter Module back to factory defaults.

Diagnostics

Fiber Loopback

Off: This is the normal setting. In this setting, data received on the fiber port will be passed through the Media Converter Module.

On: This is a test mode. All data received on the receive (RX) fiber connection is looped back to the transmit (TX) fiber connection.


Default: Off

Note: DIP switches are only active when the "Auto-Config" jumper is set to "SW". When this jumper is set to "Auto", loop-backs can only be initiated from the MCR-MGT management module.

Virtual Cable Test	Performs a Virtual Cable Test to remotely and non-evasively diagnose the quality and characteristics of the attached ethernet cable. This test can detect issues such as cable opens, cable shorts or any impedance mismatch in the cable and then accurately report (within one meter) the distance of the fault. In addition, this Virtual Cable Test will detect pair swaps, pair polarity reversal and excessive pair skew.
Advanced Diagnostics, Read/Write Register	This feature should only be used if guided by a Perle Technical Support Representative. Use of this feature without guidance from a Perle Technical Support Representative could make your Media Converter Module inoperable.

Slot Tab

Field Descriptions

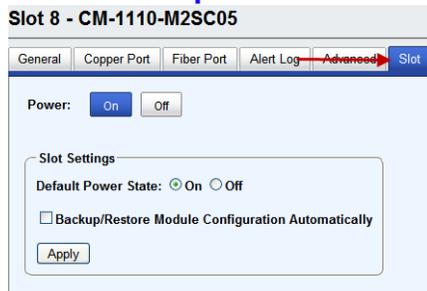

Configure the following parameters:

Power	Immediately power the slot on or off. The current state of the slot is highlighted in BLUE. Press the "ON" button to immediately power the slot on. Press the "OFF" button to immediately power the slot off.
Default Power State	This is the default power state of the slot when the chassis is powered up or restarted. Default: On
Backup/Restore Automatically	Enabled: The configuration information associated with this slot is saved on the Management Module and will be downloaded to the Media Converter Module whenever the Media Converter Module is inserted into this slot. Disabled: The Media Converter Module configuration information is only kept on this Module. Default: Disabled



CM-1000/CM-1000-SFP Module

CM-1000 Media Converter Module Parameters

MCR1900 Chassis

MCR-MGT-VI
172.16.54.106

March 02, 2011 11:16:02 EST
User's Guide | User: admin | Logout

MCR-MGT-VI Slot 16

Slot 16 - **CM-1000-SFP**

General Copper Port Fiber Port Alert Log Advanced Slot

Name: CM-1000-SFP
Model: CM-1000-SFP
Description: Gigabit Ethernet Media Converter Managed Module. 1000BASE-T (RJ45) [100 m/328 ft] to 1000BASE-X SFP Slot

Hardware Setup
Configuration Jumper: Auto Current Switch Settings...

Settings Copy Settings...

CM-1000 Media Converter Module

SMI Chassis

MCR-MGT-900084
172.16.113.66

May 28, 2013 20:22:51 EDT
User's Guide | User: admin | Logout

MCR-MGT-900084 Slot 2

SMI-1000-M2SC05

Slot 2 - **CM-1000-M2SC05**

General Copper Port Fiber Port Alert Log Advanced Slot

Name: CM-1000-M2SC05
Model: CM-1000-M2SC05
Description: Gigabit Ethernet Media Converter Managed Module. 1000BASE-T (RJ45) [100 m/328 ft] to 1000BASE-X 850nm multimode (SC) [550 m/1804 ft]


Hardware Setup
Configuration Jumper: Auto Current Switch Settings...

Settings

CM-1000


General Tab

Field Descriptions

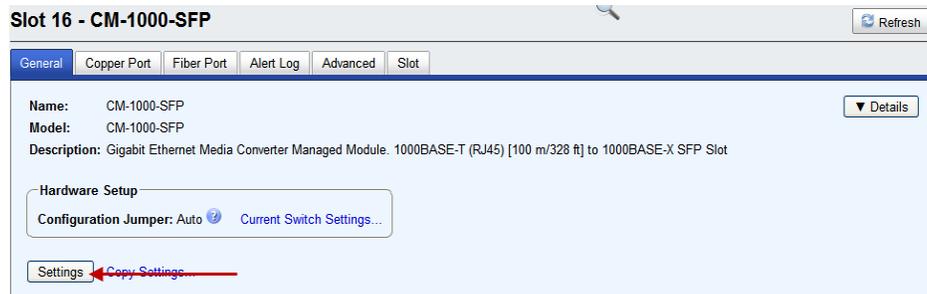

Name	Displays the configured name for this Module.
Model	Displays the module’s model information.
Description	Displays a description of the Module that is inserted in this slot.
Configuration Jumper	<p>Auto: Use software configuration if present, otherwise use hardware DIP switch settings.</p> <p>Switch: Use hardware DIP switch settings.</p> <p>For detailed information on hardware DIP switch settings, see the Hardware Installation Guide.</p>
Current Switch Settings	<p>Displays the current DIP switch settings.</p> <p>For detailed information on hardware jumpers and DIP settings, see the Hardware Installation Guide.</p>

Settings

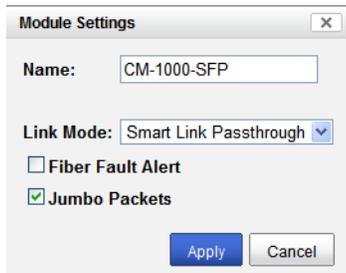

Configure the following parameters:

Name	Displays the configured name for this Module.
Link Mode	<p>Smart Link Pass-Through: In this mode, the link state on one connection is directly reflected through the Media Converter Module to the other connection. If link is lost on one of the connections, then the other link will be brought down by the Media Converter.</p> <p>Standard: In this mode, the links on the fiber and copper sides can be brought up and down independently of each other. A loss of link on either the fiber or copper port can occur without affecting the other connection.</p> <p>Default: Smart Link Passthrough</p>

Fiber Fault Alert When enabled, if the Media Converter Module detects a loss of signal on the fiber receiver, it will immediately disable its fiber transmitter signal. This in effect, notifies the fiber link partner that an error condition exists on the fiber connection.


Note: This feature only takes effect if Fiber Negotiation has been turned off. When disabled, the Media Converter Module will not monitor for or generate Fiber Fault Alert.

Default: On

Jumbo Packets Enable Jumbo Packet support.

Default: Enabled

Copy Settings

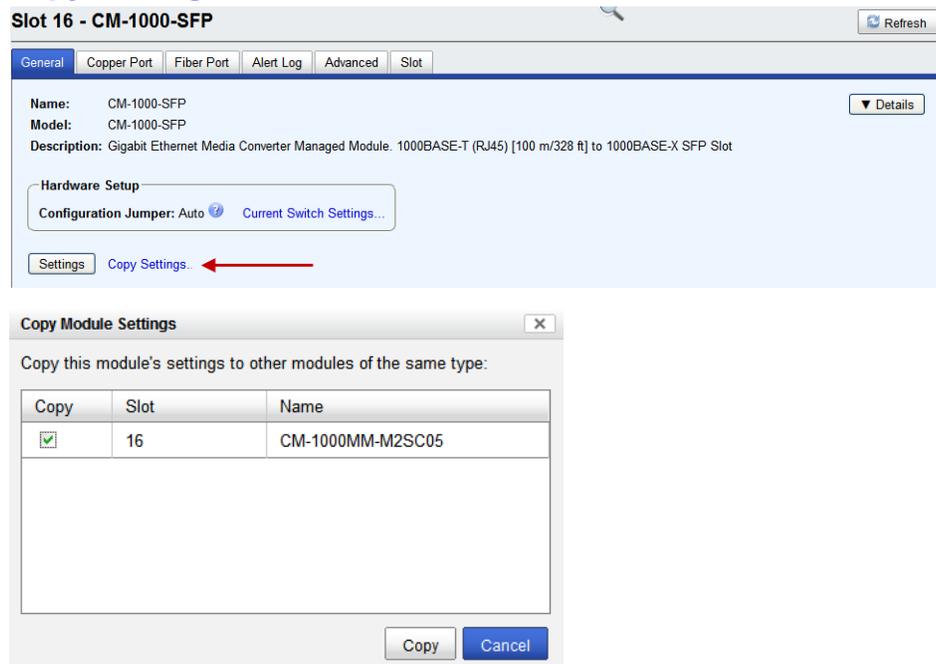

Copy Module Settings Copy this module's settings to other modules of the same type.

Copper Port Tab

Field Descriptions

Slot 16 - CM-1000-SFP

General **Copper Port** Fiber Port Alert Log Advanced Slot

Name: bmck-Cu

Connector: RJ-45

Link Status: Down

Auto Negotiation: In Progress

Speed: 1000

Duplex: Half

Pause: Disabled

Link Partner Remote Fault Status: OK

MDI/MDI-X: MDI

Settings ←

Copper Port > Settings

Copper Port Settings

Enable Port

Name:

Duplex: Auto Half

Pause: ▼

Low Power Mode

Apply Cancel

Configure the following parameters:

- Enable Port** Enables/Disables the copper port.
Default: Enable
- Name** The name of the copper port.
Field Format: 8 characters
- Duplex** The following selections are available:
Duplex: Auto, Half
Default: Auto
The following selections are available:
Duplex: Auto, Half
Default: Auto
- Pause** When enabled, the Media Converter Module will advertise the following Pause capabilities:
- Symmetrical
 - Asymmetrical TX
 - Asymmetrical RX
- Note:** Pause feature will only work if Auto Negotiation is set to OFF on the fiber port and Duplex is set to Full.
Default: Off
- Low Power Mode** If enabled, the Gigabit copper transceiver is set into low power mode which reduces the strength of the copper signal.
Default: Off

Field Descriptions

Slot 16 - CM-1000-SFP

General Copper Port **Fiber Port** Alert Log Advanced Slot

Properties SFP

Name:

Connector: SFP

Link Status: Up

Auto Negotiation: Disabled

Speed: 1000

Duplex: Full


Pause: Disabled

Link Partner Remote Fault Status: OK

Loopback Mode: Disabled

Settings ←

Fiber Port > Settings

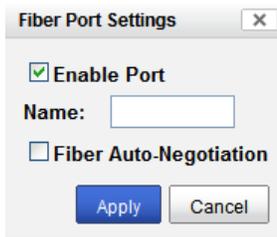

Fiber Port Settings

Enable Port

Name:

Fiber Auto-Negotiation

Apply Cancel

Configure the following parameter:

Enable Port	Enables/Disables the fiber port.
Name	The name of the fiber port. Field Format: 8 characters
Fiber Auto-Negotiation	Enabled: The Media Converter Module will negotiate Ethernet parameters on the fiber connection. This will ensure that the most optimal connection parameters will be in effect. If connecting to another Perle Media Converter, this parameter should be set to Auto. The Media converter module will advertise 1000 Mbps, Full and Half Duplex, no Pause. Disabled: The Media Converter Module's fiber will be fixed to 1000 Mbps, Full Duplex. Default: Disabled

Fiber Port > SFP (Statistics)

Slot 16 - CM-1000-SFP Refresh

General Copper Port **Fiber Port** Alert Log Advanced Slot

Properties SFP

Status

- Module Temperature: 0.000 °C (Normal)
- Transceiver Transmit Supply Voltage: 0.000 V (Normal)
- Transceiver Transmit Bias Current: 0.000 mA (Normal)
- Transceiver Transmit Power: 0.000 mW (Normal)
- Transceiver Receive Optical Power: 0.000 mW (Normal)

Information

- Connector: Unknown
- Nominal Signaling Rate: 0 Mbps
- Link Reach for 9/125 Single Mode Fiber: 0 m
- Link Reach for 50/125 Single Mode Fiber: 0 m
- Link Reach for 62.5/125 Single Mode Fiber: 0 m
- Fiber Wavelength: 0 nm

Alarm and Warning Thresholds

Module Temperature	Transmit Supply Voltage	Transmit Bias Current
High Alarm Threshold: 0.000 °C	High Alarm Threshold: 0.000 V	High Alarm Threshold: 0.000 mA
High Warning Threshold: 0.000 °C	High Warning Threshold: 0.000 V	High Warning Threshold: 0.000 mA
Low Warning Threshold: 0.000 °C	Low Warning Threshold: 0.000 V	Low Warning Threshold: 0.000 mA
Low Alarm Threshold: 0.000 °C	Low Alarm Threshold: 0.000 V	Low Alarm Threshold: 0.000 mA

Transmit Power	Receive Power
High Alarm Threshold: 0.000 mW	High Alarm Threshold: 0.000 mW
High Warning Threshold: 0.000 mW	High Warning Threshold: 0.000 mW
Low Warning Threshold: 0.000 mW	Low Warning Threshold: 0.000 mW
Low Alarm Threshold: 0.000 mW	Low Alarm Threshold: 0.000 mW

Alert Log Tab

Field Descriptions

Slot 16 - CM-1000-SFP Refresh

General Copper Port Fiber Port **Alert Log** Advanced Slot

<< first < prev 1 next > last >> 10

Date	Description	Severity
2010-09-23 15:58:34	CM-1000-SFP (slot 16): Fiber port link status UP.	Significant Event
2010-09-23 15:58:34	CM-1000-SFP (slot 16): Copper port link status UP.	Significant Event
2010-09-23 15:58:34	CM-1000-SFP (slot 16): OK.	Significant Event
2010-09-23 15:58:34	CM-1000-SFP (slot 16): Has been inserted. Model=CM-1000-SFP, S/N=102-093510M1210.	Significant Event

Displays the current local Alerts. The local Alert buffer contains the last 200 alerts and displays these events in a wrap around fashion.

Advanced Tab

Field Descriptions

Slot 16 - CM-1000-SFP Refresh

General Copper Port Fiber Port Alert Log **Advanced** Slot

Restart Module

Reset to Factory Defaults

Diagnostics

Fiber Loopback: On Off


Advanced Diagnostics

Configure the following parameter:

- Restart Module** Restarts this Media Converter Module.
- Reset Factory Defaults** Resets this Media Converter Module back to factory defaults.
- Diagnostics**
 - Fiber Loopback** **Off:** This is the normal setting. In this setting, data received on the fiber port will be passed through the Media Converter Module.
On: This is a test mode. All data received on the receive (RX) fiber connection is looped back to the transmit (TX) fiber connection.
Default: Off
- Advanced Diagnostics, Read/Write Register** This feature should only be used if guided by a Perle Technical Support Representative. Use of this feature without guidance from a Perle Technical Support Representative could make your Media Converter Module inoperable.

Slot

Field Descriptions

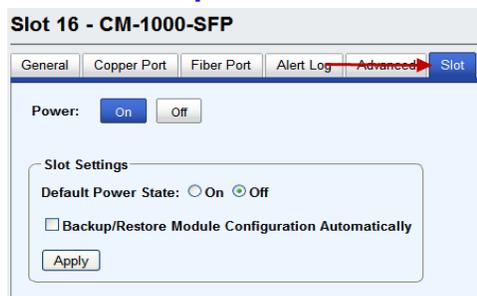

Configure the following parameters:

- Power State** Immediately power the slot on or off. The current state of the slot is highlighted in BLUE.
 Press the "ON" button to immediately power the slot on.
 Press the "OFF" button to immediately power the slot off.
- Default Power State** This is the default power state of the slot when the chassis is powered up or restarted.
Default: On
- Backup/Restore Module Configuration Automatically** **Enabled:** The configuration information associated with this slot is saved on the Management Module and will be downloaded to the Media Converter Module whenever the Media Converter Module is inserted into this slot.
Disabled: The Media Converter Module configuration information is only kept on this Module.
Default: Disabled



CM-100MM Media Converter Module

CM-100MM Media Converter Module Parameters

MCR1900 Chassis

Slot 16 - CM-100MM-M2SC2

Name: CM-100MM-M2SC2
Model: CM-100MM-M2SC2
Description: Fast Ethernet Fiber to Fiber Media Converter Managed Module. 100BASE-X 1310nm multimode (SC) [2 km/1.24 miles] to 100BASE-X 1310nm multimode (SC) [2 km/1.24 miles]

Hardware Setup
Configuration Jumper: Auto [Current Switch Settings...](#)

[Settings](#) [Copy Settings...](#)

CM-100MM Media Converter Module

SMI Chassis

Slot 2 - CM-100MM-M2SC2

Name: CM-100MM-M2SC2
Model: CM-100MM-M2SC2
Description: Fast Ethernet Fiber to Fiber Media Converter Managed Module. 100BASE-X 1310nm multimode (SC) [2 km/1.24 miles] to 100BASE-X 1310nm multimode (SC) [2 km/1.24 miles]


Hardware Setup
Configuration Jumper: Auto [Current Switch Settings...](#)

[Settings](#)

CM-100MM-M2SC2


General Tab

Field Descriptions

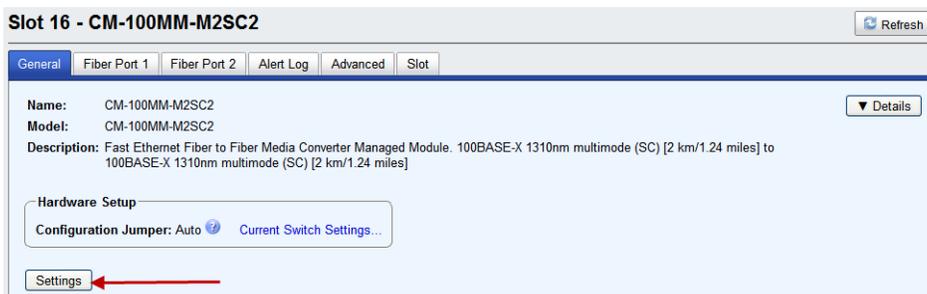

Name	Displays the configured name for this Module.
Model	Displays the module's model information.
Description	Displays a description of the Module that is inserted in this slot.
Configuration Jumper	<p>Auto: Use software configuration if present, otherwise use hardware DIP switch settings.</p> <p>Switch: Use hardware DIP switch settings.</p> <p>For detailed information on hardware DIP switch settings, see the Hardware Installation Guide.</p>
Current Switch Settings	<p>Displays the current DIP switch settings.</p> <p>For detailed information on hardware jumpers and DIP settings, see the Hardware Installation Guide.</p>
Details	Displays the firmware's details.


Settings

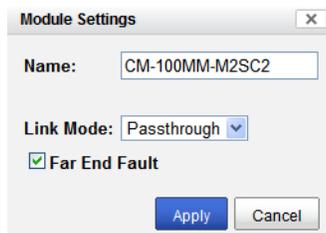

Name	Displays the configured name for this Module.
-------------	---


- Link Mode** **Link Pass-Through:** In this mode, the link state on one fiber connection is directly reflected through the Media Converter Module to the other fiber connection. If link is lost on one of the fiber connections, then the other fiber link will be brought down by the Media Converter.
- Standard:** In this mode, each fiber link can be brought up and down independently of each other. A loss of signal on either fiber connection can occur without affecting the other fiber connection.
- Default:** Link Pass-Through
-
- Far End Fault** When enabled, if the Media Converter Module detects a loss of signal on the fiber receiver, it will transmit a FEF signal to the remote Media Converter Module. This, in effect, notifies the fiber link partner that an error condition exists on the fiber connection.
- Note:** This feature only takes effect if Auto Negotiation has been turned off. When disabled, the Media Converter Module will not monitor for or generate Far End Fault.
- Default:** On

Copy Settings

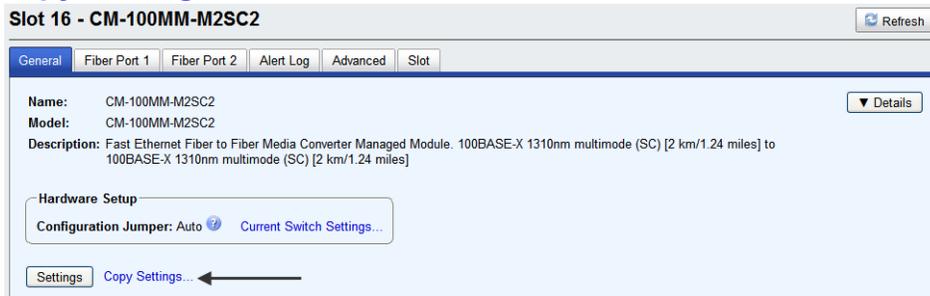


Copy Module Settings

Copy this module's settings to other modules of the same type.

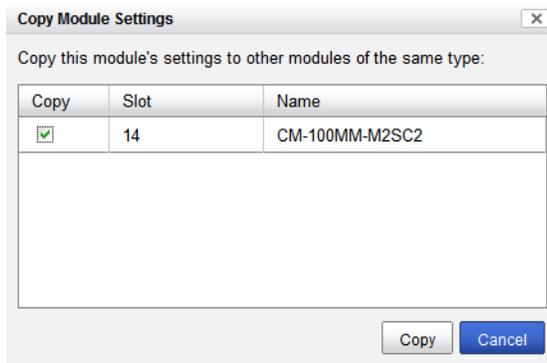


Fiber Port 1 Tab

Fiber Port 1 > Settings

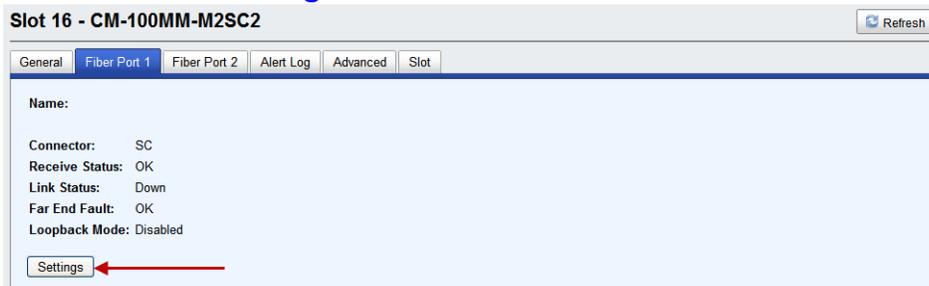

Settings

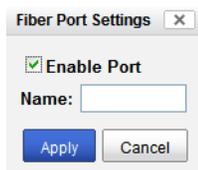

Configure the following parameters:

Settings

Enable Port Enables/Disables fiber port 1.

Name The name of fiber port 1.

Field Format: 8 characters

Fiber Port 2 Tab

Fiber Port 2 > Settings

Slot 16 - CM-100MM-M2SC2 Refresh

General | Fiber Port 1 | **Fiber Port 2** | Alert Log | Advanced | Slot

Name:

Connector: SC
 Receive Status: OK
 Link Status: Down
 Far End Fault: OK
 Loopback Mode: Disabled

←

Settings

Fiber Port Settings X

Enable Port

Name:

Configure the following parameters:

- Enable Port** Enables/Disables fiber port 2.
- Name** The name of fiber port 2.
Field Format: 8 characters

Alert Log Tab

Field Descriptions

Slot 16 - CM-100MM-M2SC2 Refresh

General | Fiber Port 1 | Fiber Port 2 | **Alert Log** | Advanced | Slot

<< first < prev 1 2 3 next > last >> 10

Date	Description	Severity
02/04/2011 17:06:03	CM-100MM-M2SC2 (slot 16): fiber1 port link status DOWN.	Significant Event
02/04/2011 17:06:03	CM-100MM-M2SC2 (slot 16): fiber2 port link status DOWN.	Significant Event
02/04/2011 17:06:03	CM-100MM-M2SC2 (slot 16): OK.	Significant Event
02/04/2011 17:06:03	CM-100MM-M2SC2 (slot 16): Has been inserted. Model=CM-100MM-M2SC2, S/N=110-000111L1210.	Significant Event
02/04/2011 17:05:29	CM-100MM-M2SC2 (slot 16): Has been removed.	Significant Event
02/04/2011 16:32:31	CM-100MM-M2SC2 (slot 16): fiber1 port link status DOWN.	Significant Event
02/04/2011 16:32:31	CM-100MM-M2SC2 (slot 16): fiber2 port link status DOWN.	Significant Event
02/04/2011 16:32:31	CM-100MM-M2SC2 (slot 16): OK.	Significant Event

Displays the current local Alerts. The local Alert buffer contains the last 200 alerts and displays these events in a wrap around fashion.

Advanced Tab

Field Descriptions

Slot 16 - CM-100MM-M2SC2 Refresh

General | Fiber Port 1 | Fiber Port 2 | Alert Log | **Advanced** | Slot

Diagnostics

Fiber Loopback: Port 1 | Port 2 | **Off**

▼ Advanced Diagnostics

Configure the following parameter:

- Restart Module** Restarts this Media Converter Module.
- Reset to Factory Defaults** Resets this Media Converter Module back to factory defaults.
- Diagnostics**
 - Fiber Loopback**

Off: This is the normal setting. In this setting, data received on the fiber port will be passed through the Media Converter Module.

Select either Port 1 or Port 2. Only one fiber port can be in loopback at one time.

Port 1: This is a test mode. All data received on the receive (RX) fiber connection is looped back to the transmit (TX) fiber connection.

Port 2: This is a test mode. All data received on the receive (RX) fiber connection is looped back to the transmit (TX) fiber connection.

Default: Off
 - Advanced Diagnostics, Read/Write Register**

This feature should only be used if guided by a Perle Technical Support Representative. Use of this feature without guidance from a Perle Technical Support Representative could make your Media Converter Module inoperable.

Slot Tab

Field Descriptions



Configure the following parameters:

- Power** Immediately power the slot on or off. The current state of the slot is highlighted in BLUE.
Press the "ON" button to immediately power the slot on.
Press the "OFF" button to immediately power the slot off.
- Default Power State** This is the default power state of the slot when the chassis is powered up or restarted.
Default: On
- Backup/Restore Module Configuration Automatically**

Enabled: The configuration information associated with this slot is saved on the Management Module and will be downloaded to the Media Converter Module whenever the Media Converter Module is inserted into this slot.

Disabled: The Media Converter Module configuration information is only kept on this Module.

Default: Disabled



CM-1000MM Media Converter Module

CM-1000MM Media Converter Module Parameters

General Tab

MCR1900 Chassis

The screenshot displays the MCR-MGT-VI web interface. At the top, it shows the Perle logo, the device name 'MCR-MGT-VI', the IP address '172.16.54.106', and the date/time 'March 02, 2011 13:27:01 EST'. Below this is a 'Hide Chassis' button. The main view shows a rack of 19 slots. Slot 4 is highlighted with a red box and a blue vertical bar. Below the chassis view, the configuration page for 'Slot 4 - CM-1000MM-M2LC05' is shown. The 'General' tab is active, displaying the following information:

- Name: CM-1000MM-M2LC05
- Model: CM-1000MM-M2LC05
- Description: Gigabit Ethernet Fiber to Fiber Media Converter Managed Module. 1000BASE-X 850nm multimode (LC) [550 m/1804 ft] to 1000BASE-X 850nm multimode (LC) [550 m/1804 ft]

Under the 'Hardware Setup' section, the 'Configuration Jumper' is set to 'Auto'. There are buttons for 'Settings' and 'Copy Settings...'. A black arrow points from the text 'CM-1000MM Media Converter Module' to the configuration page.


SMI Chassis

The screenshot displays the web management interface for a Perle SMI Chassis. At the top, the chassis model is identified as MCR-MGT-100634 with IP 172.16.28.55. The current date and time are February 18, 2013, 21:39:33 EST, and the user is logged in as 'admin'. The interface shows Slot 2 containing an SMI-1000MM-M2SC05 module. A physical diagram of the module is shown at the top, highlighting its ports: ALM, PWR, LXC, CONSOLE, MCR-MGT, LK1, LK2, Tx MM1, Rx, Tx MM2, Rx, and Cx-100xM. Below the diagram, the configuration page for Slot 2 is open, showing the following details:

- Name:** CM-1000MM-M2SC05
- Model:** CM-1000MM-M2SC05
- Description:** Gigabit Ethernet Fiber to Fiber Media Converter Managed Module. 1000BASE-X 850nm multimode (SC) [550 m/1804 ft] to 1000BASE-X 850nm multimode (SC) [550 m/1804 ft]
- Hardware Setup:** Configuration Jumper: Auto (with a globe icon) | Current Switch Settings...
- Settings:** (button)

An arrow points from the text 'CM-1000MM-M2SC05' at the bottom of the configuration page to the corresponding module in the physical diagram above.


Field Descriptions

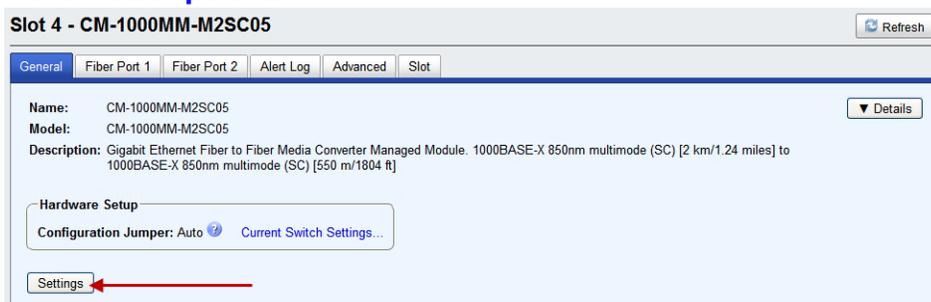

- Name** Displays the configured name for this Module.
- Model** Displays the module’s model information.
- Description** Displays a description of the Module that is inserted in this slot.
- Configuration Jumper**
 - Auto:** Use software configuration if present, otherwise use hardware DIP switch settings.
 - Switch:** Use hardware DIP switch settings.

For detailed information on hardware DIP switch settings, see the Hardware Installation Guide.
- Current Switch Settings** Displays the current DIP switch settings.
For detailed information on hardware jumpers and DIP settings, see the Hardware Installation Guide.

Settings

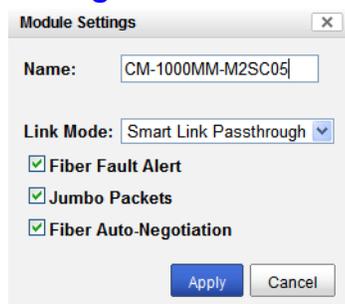


Configure the following parameters:


- Name** Displays the configured name for this Module.
- Link Mode**
 - Smart Link Pass-Through:** In this mode, the link state on one connection is directly reflected through the Media Converter Module to the other connection. If link is lost on one of the connections, then the other link will be brought down by the Media Converter.
 - Standard:** In this mode, the links on the fiber and copper sides can be brought up and down independently of each other. A loss of link on either the fiber or copper port can occur without affecting the other connection.
 - Default:** Smart Link Passthrough

- Fiber Fault Alert** When enabled, if the Media Converter Module detects a loss of signal on the fiber receiver, it will immediately disable its fiber transmitter signal. This in effect, notifies the fiber link partner that an error condition exists on the fiber connection.
Note: This feature only takes effect if Fiber Negotiation has been turned off.
 When disabled, the Media Converter Module will not monitor for or generate Fiber Fault Alert.
Default: On
- Jumbo Packets** Enable Jumbo Packet support.
Default: Enabled
- Fiber Auto-Negotiation** **Auto:** In this mode, the Media Converter will negotiate fiber parameters on both fiber connections. This will ensure the most optimal connection parameters will be in effect. If connecting to another Perle Media Converter this parameter should be set to Auto.
Off: Fiber negotiation on both fiber ports will be disabled. The switch settings for Link Mode and Fiber Fault Alert will be determined by the Module Settings parameters.
Default: Auto

Copy Settings

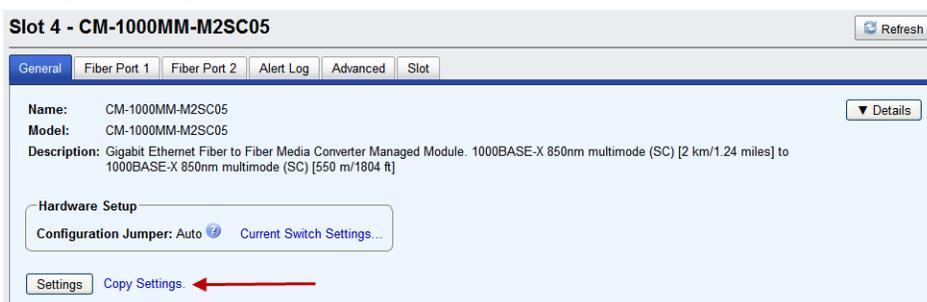

Copy Module Settings Copy this module's settings to other modules of the same type.

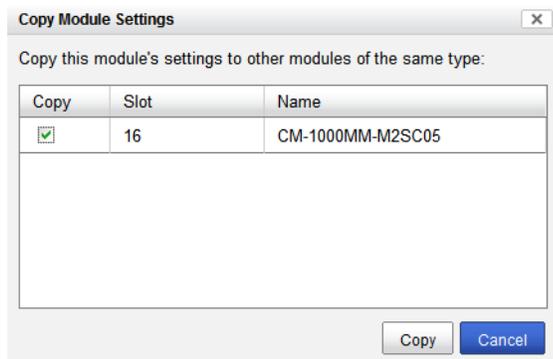

Fiber Port 1 Tab

Fiber Port 1 > Settings

Slot 4 - CM-1000MM-M2SC05

General | **Fiber Port 1** | Fiber Port 2 | Alert Log | Advanced | Slot

Name:

Connector: SC

Receive Status: OK

Link Status: Down

Auto Negotiation: In Progress

Speed: 1000

Duplex: Half

Pause: Disabled

Link Partner Remote Fault Status: OK

Loopback Mode: Disabled

Settings ←

Settings

Fiber Port Settings [X]

Enable Port

Name:

Apply Cancel

Configure the following parameter:

- Enable Port** Enables/Disables fiber port 1.
- Port Name** The name of fiber port 1.
Field Format: 8 characters

Fiber Port 2 Tab

Fiber Port 2 > Settings

Slot 4 - CM-1000MM-M2SC05

General | Fiber Port 1 | **Fiber Port 2** | Alert Log | Advanced | Slot

Name:

Connector: SC
Receive Status: OK
Link Status: Down
Auto Negotiation: In Progress
Speed: 1000
Duplex: Half
Pause: Disabled
Link Partner Remote Fault Status: OK
Loopback Mode: Disabled

Settings

Settings

Fiber Port Settings

Enable Port

Name:

Apply Cancel

Configure the following parameter:

- Enable Port** Enables/Disables fiber port 2.
- Name** The name of fiber port 2.
Field Format: 8 characters

Alert Log Tab

Field Descriptions

Slot 4 - CM-1000MM-M2SC05 Refresh

General | Fiber Port 1 | Fiber Port 2 | **Alert Log** | Advanced | Slot

<< first < prev 1 next > last >> 10

Date	Description	Severity
01/31/2011 09:47:55	CM-1000MM-M2SC05 (slot 4): fiber1 port link status DOWN.	Significant Event
01/31/2011 09:47:55	CM-1000MM-M2SC05 (slot 4): fiber2 port link status DOWN.	Significant Event
01/31/2011 09:47:55	CM-1000MM-M2SC05 (slot 4): OK.	Significant Event
01/31/2011 09:47:55	CM-1000MM-M2SC05 (slot 4): Has been inserted. Model=CM-1000MM-M2SC05, S/N=107-000111L1210.	Significant Event

<< first < prev 1 next > last >> 10

Displays the current local Alerts. The local Alert buffer contains the last 200 alerts and displays these events in a wrap around fashion.

Advanced Tab

Field Descriptions



Configure the following parameter:

- Restart Module** Restarts this Media Converter Module.


- Reset Factory Defaults** Resets this Media Converter Module back to factory defaults.

- Diagnostics**
- Fiber Loopback** **Off:** This is the normal setting. In this setting, data received on the fiber port will be passed through the Media Converter Module.
 Select either Port 1 or Port 2. Only one fiber port can be in loopback at one time.
Port 1: This is a test mode. All data received on the receive (RX) fiber connection is looped back to the transmit (TX) fiber connection.
Port 2: This is a test mode. All data received on the receive (RX) fiber connection is looped back to the transmit (TX) fiber connection.
Default: Off

- Advanced Diagnostics, Read/Write Register** This feature should only be used if guided by a Perle Technical Support Representative. Use of this feature without guidance from a Perle Technical Support Representative could make your Media Converter Module inoperable.

Slot

Field Descriptions

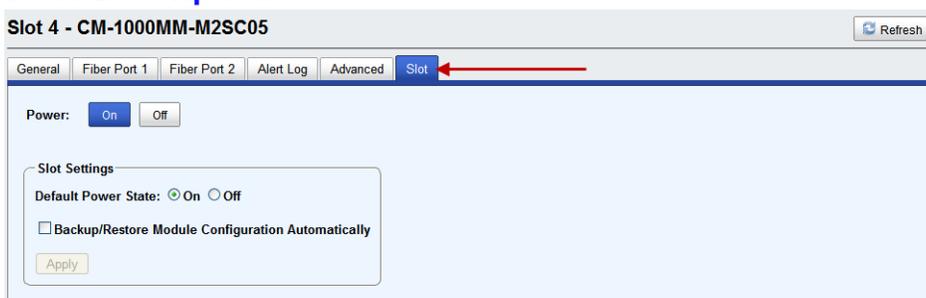

Configure the following parameters:

- Power State** Immediately power the slot on or off. The current state of the slot is highlighted in BLUE.
 Press the "ON" button to immediately power the slot on.
 Press the "OFF" button to immediately power the slot off.

Default Power State	This is the default power state of the slot when the chassis is powered up or restarted. Default: On
Backup/Restore Module Configuration Automatically	Enabled: The configuration information associated with this slot is saved on the Management Module and will be downloaded to the Media Converter Module whenever the Media Converter Module is inserted into this slot. Disabled: The Media Converter Module configuration information is only kept on this Module. Default: Disabled



CM-10G Media Converter Modules

Standard Models

- CM-10G-STS - This model contains two SFP+ pluggable transceivers. These pluggable transceiver ports can be populated with either:
 - two (1 gigabit SFP modules)
 - two (10 gigabit SFP+ modules).
- CM-10G-XTS - This model contains one SFP+ pluggable transceiver port and one XFP pluggable transceiver port.
- CM-10G-XTX - This model contains two XFP pluggable transceiver ports.

High Power Models

- CM-10G-XTSH - This model contains one SFP+ pluggable transceiver port and one XFP pluggable transceiver port. This module takes 2 slots within a Perle chassis.
- CM-10G-XTXH - This model contains two high power XFP pluggable transceiver ports. parameters. This module takes 2 slots within a Perle chassis.

CM-10G Modules Parameters

MCR1900 Chassis


The screenshot shows the management interface for a Perle MCR1900 chassis. At the top, the header includes the Perle logo, the device name 'tmc-mcr-mgt' with IP '172.16.22.30', and the date 'September 17, 2012 10:06:30 EDT'. Below the header, a row of 19 slots is visible. Slot 4 is highlighted with a red box. Below the chassis view, the configuration for 'Slot 4 - CM-10G-XTSH' is shown. The 'General' tab is active, displaying the module name 'CM-10G-XTSH', model 'CM-10G-XTSH', and description 'High Power Ten Gigabit Media Converter Managed Module. XFP Slot to SFP Plus Slot'. A 'Hardware Setup' section shows 'Configuration Jumper: Auto'. A list of module types is provided: CM-10G-STS Module, CM-10G-XTS Module, CM-10G-XTX Module, CM-10G-XTSH Module (Shown), and CM-10G-XTXH Module.

SMI Chassis

The screenshot shows the management interface for a Perle SMI chassis. The header includes the Perle logo, the device name 'MCR-MGT-900085' with IP '172.16.21.250', and the date 'May 01, 2013 13:22:49 EDT'. Below the header, a row of 2 slots is visible. Slot 2 is highlighted with a red box. Below the chassis view, the configuration for 'Slot 2 - CM-10G-XTS' is shown. The 'General' tab is active, displaying the module name 'CM-10G-XTS', model 'CM-10G-XTS', and description '10 Gigabit Media Converter Managed Module. XFP Slot to SFP+ Slot'. A 'Hardware Setup' section shows 'Configuration Jumper: Auto'. A list of module types is provided: CM-10G-STS Module, CM-10G-XTS Module, CM-10G-XTX Module, CM-10G-XTSH Module, and CM-10G-XTXH Module.


General Tab

Field Descriptions

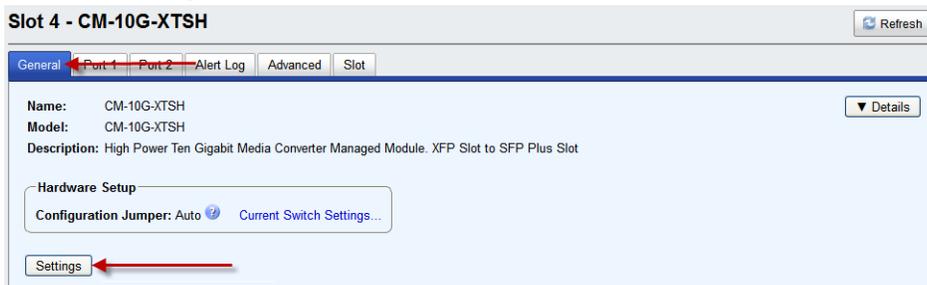

Name	Displays the configured name for this Module.
Model	Displays the module's model information.
Description	Displays a description of the Module that is inserted in this slot.
Configuration Jumper	<p>Auto: Use software configuration if present, otherwise use hardware DIP switch settings.</p> <p>Switch: Use hardware DIP switch settings.</p> <p>For detailed information on hardware DIP switch settings, see the Hardware Installation Guide.</p>
Current Switch Settings	<p>Displays the current DIP switch settings.</p> <p>For detailed information on hardware jumpers and DIP settings, see the Hardware Installation Guide.</p>

Settings

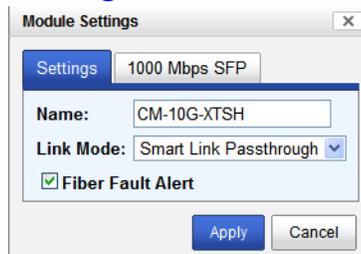

Configure the following parameters:


Name	Displays the configured name for this Module.
Link Mode	<p>Smart Link Pass-Through: In this mode, the link state on one connection is directly reflected through the Media Converter Module to the other connection. If link is lost on one of the connections, then the other link will be brought down by the Media Converter.</p> <p>Standard: In this mode, the links on the fiber and copper sides can be brought up and down independently of each other. A loss of link on either the fiber or copper port can occur without affecting the other connection.</p> <p>Default: Smart Link Passthrough</p>

Fiber Fault Alert When enabled, if the Media Converter Module detects a loss of signal on the fiber receiver, it will immediately disable its fiber transmitter signal. This in effect, notifies the fiber link partner that an error condition exists on the fiber connection.

Note: This feature only takes effect if Fiber Negotiation has been turned off. When disabled, the Media Converter Module will not monitor for or generate Fiber Fault Alert.


Default: On

1000 Mbps only SFP

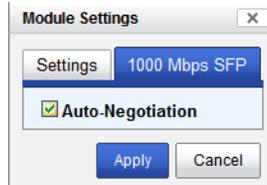


Auto-Negotiation When enabled, the Media Converter Module will negotiate with its link partner to determine the most optimal parameters for this connection.

Copy Settings

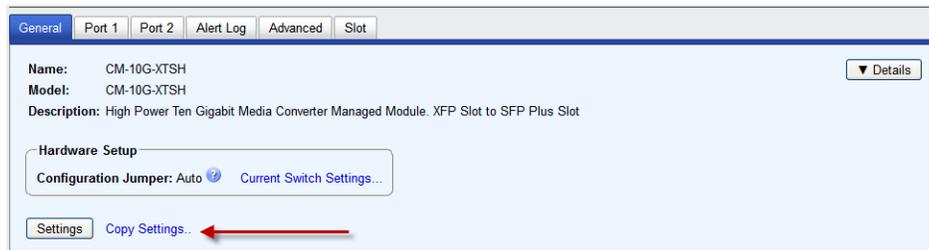


Copy Module Settings Copy this module's settings to other modules of the same type.

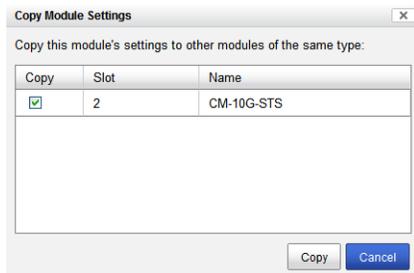


Port 1 Tab

Field Descriptions

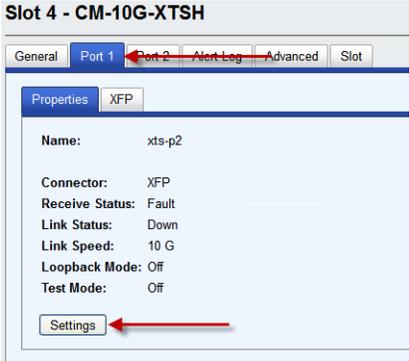

Port 1 > Properties

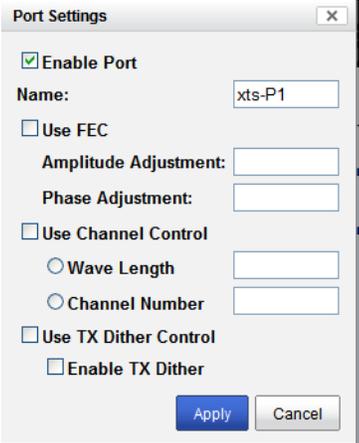

Configure the following parameter:

- Enable Port** Enables/Disables the fiber port.
- Name** The name of the fiber port.
Field Format: 8 characters
- Use FEC*** *** Note: See manufacturers documentation for parameter settings.**
- Use Channel Control*** *** Note: See manufacturers documentation for parameter settings.**
- Use TX Dither Control*** *** Note: See manufacturers documentation for parameter settings.**

Port 1 > XFP

The screenshot shows the configuration page for Port 1, XFP. The 'Properties' tab is active, and the 'XFP' sub-tab is selected. The page is divided into three main sections: Information, Status, and Alarm and Warning Thresholds.

Information

Connector:	LC
Fiber Mode:	Single-mode
Fiber Wavelength:	1550 nm
Minimum Signaling Rate:	9900 Mbps
Maximum Signaling Rate:	11100 Mbps
Link Reach for 9/125 Single-mode Fiber:	40000 m
Serial Number:	122-081412Y10001
Manufacturer:	Perle Systems

Status

Module Temperature:	31.250 °C (Normal)
Transceiver Transmit Bias Current:	67.726 mA (Normal)
Transceiver Transmit Power:	1.276 mW (Normal)
Transceiver Receive Optical Power:	0.000 mW (Low Alarm)
Laser Temperature	40.203 C (Normal)
TEC Current	-41.500 mA (Normal)

Alarm and Warning Thresholds

Parameter	High Alarm Threshold	High Warning Threshold	Low Warning Threshold	Low Alarm Threshold
Module Temperature	85.000 °C	80.000 °C	-5.000 °C	-10.000 °C
Transmit Bias Current	130.000 mA	128.000 mA	12.000 mA	10.000 mA
Transmit Power	3.000 mW	2.000 mW	0.000 mW	0.000 mW
Receive Power	1.000 mW	0.000 mW	0.000 mW	0.000 mW

Port 2 Tab

Field Descriptions

The screenshot shows the configuration page for Port 2, SFP. The 'Properties' tab is active, and the 'SFP' sub-tab is selected. The page displays the following field descriptions:

Slot 1 - CM-10G-XTSH

General | Port 1 | Port 2 | Alert Log | Advanced | Slot

Properties | SFP

Name: Port 2

Connector: SFP+

Receive Status: Fault

Link Status: Down

Link Speed: 10 G

Loopback Mode: Off

Test Mode: Off

Settings

Port 2 > Settings


- Enable Port** Enables/Disables the fiber port.
- Name** The name of the fiber port.
Field Format: 8 characters
- EDC Mode*** *** Note: See manufacturers documentation for parameter settings.**
- Use Channel Control*** *** Note: See manufacturers documentation for parameter settings.**
- Use TX Dither Control*** *** Note: See manufacturers documentation for parameter settings.**

Port 2 > SFP

Note: The View Module Memory feature should only be used if guided by a Perle Technical Support Representative.

Alert Log Tab

Field Descriptions

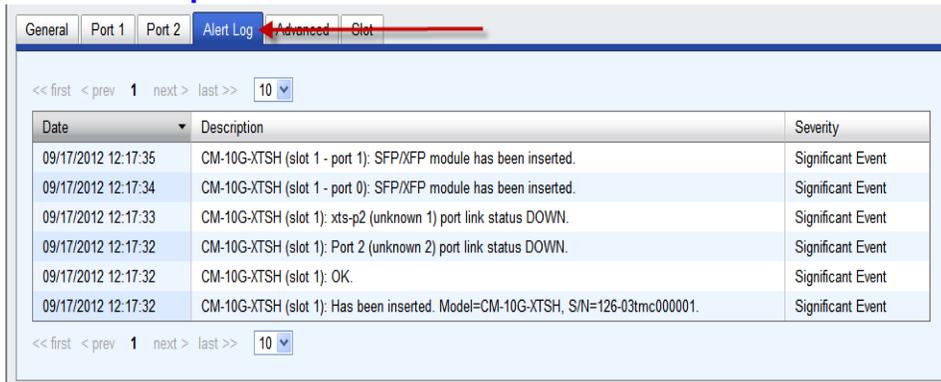

Displays the current local Alerts. The local Alert buffer contains the last 200 alerts and displays these events in a wrap around fashion.

Advanced Tab

Field Descriptions



Configure the following parameter:

Restart Module Restarts this Media Converter Module.

Reset Factory Defaults Resets this Media Converter Module back to factory defaults.

Diagnostics

Fiber Loopback **Port 1:** Port 1 will be in loopback mode. All data received on the receive (RX) fiber connection is looped back to the transmit (TX) fiber connection.

Port 2: Port 2 will be in loopback mode. All data received on the receive (RX) fiber connection is looped back to the transmit (TX) fiber connection.

Off: Loop back mode is off.

(Note: only one port can be in loopback mode at a time)

Link Test This command enables a port on a Perle 10G media converter module to generate test patterns to a remote media converter module. If the remote media converter module is a Perle 10G then the remote end will automatically be put into loopback mode. This test is used to help identify link issues.

Link Test

Test Port This is the port that will generate the test patterns to be sent to the remote media converter. The other port will be disabled during the running of these tests.

Values: port 1 or port 2

Packet Size The test will use this packet size when running the tests.

Values: 256-8960 bytes

Default: 256 bytes

Data Type Specify how the tests will run.

Values: Random, Sequential, Alternating (0101)

Default: 256 bytes

Advanced Diagnostics, Read/Write Register

This feature should only be used if guided by a Perle Technical Support Representative. Use of this feature without guidance from a Perle Technical Support Representative could make your Media Converter Module inoperable.

Slot

Field Descriptions

Configure the following parameters:

- Power State** Immediately power the slot on or off. The current state of the slot is highlighted in BLUE.
Press the "ON" button to immediately power the slot on.
Press the "OFF" button to immediately power the slot off.
- Default Power State** This is the default power state of the slot when the chassis is powered up or restarted.
Default: On
- Backup/Restore Module Configuration Automatically** **Enabled:** The configuration information associated with this slot is saved on the Management Module and will be downloaded to the Media Converter Module whenever the Media Converter Module is inserted into this slot.
Disabled: The Media Converter Module configuration information is only kept on this Module.
Default: Disabled

14

CM-10GT Media Converter Modules

Commercial Model

- CM-10GT-SFP - This model contains one pluggable transceiver port that permits insertion of one low power SFP+ fiber module and one integrated RJ-45 (copper) port.

High Power Model

- CM-10GT-XFP - This model contains one pluggable transceiver port that permits insertion of one high powered XFP fiber module and one integrated RJ-45 (copper) port.

CM-10GT Module Parameters

MCR1900 Chassis

The screenshot displays the web management interface for the MCR-MGT-900085 chassis. At the top, the Perle logo and chassis details are visible: MCR-MGT-900085, IP 172.16.21.250, and a timestamp of April 30, 2013 13:37:16 EDT. Below this, a row of 18 slots is shown. Slot 18 is highlighted with a red box and labeled 'Cx-10GT'. An arrow points from this slot to the configuration page below.


Slot 18 - CM-10GT-SFP

General | Port 1 | Port 2 | Alert Log | Advanced | Slot

Name: CM-10GT-SFP
Model: CM-10GT-SFP
Description: 10 Gigabit Media Converter Managed Module. SFP+ Slot to 1000BASE-T (RJ-45)


Hardware Setup
Configuration Jumper: Auto Current Switch Settings...

Settings

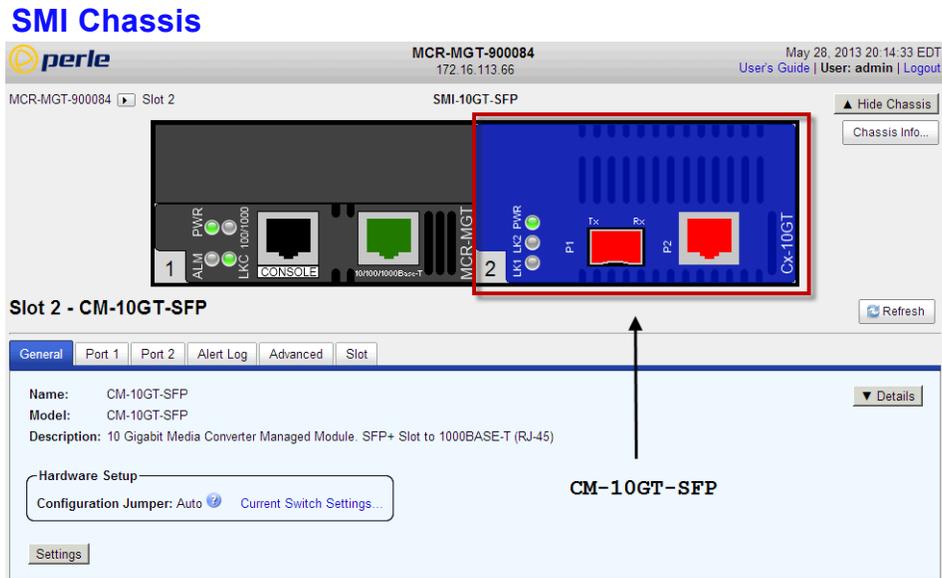

General Tab

Field Descriptions

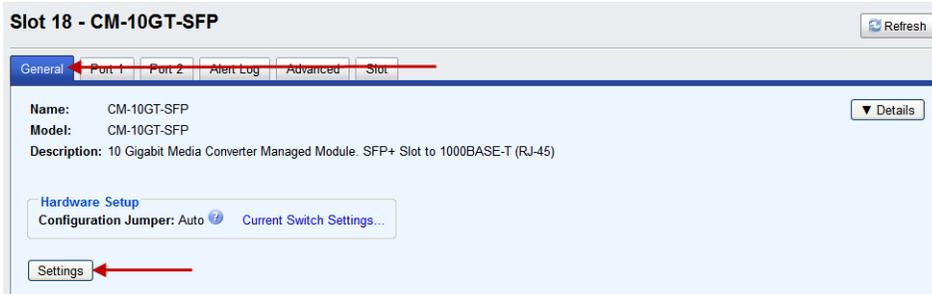

Name	Displays the configured name for this Module.
Model	Displays the module's model information.
Description	Displays a description of the Module that is inserted in this slot.
Configuration Jumper	<p>Auto: Use software configuration if present, otherwise use hardware DIP switch settings.</p> <p>Switch: Use hardware DIP switch settings.</p> <p>For detailed information on hardware DIP switch settings, see the Hardware Installation Guide.</p>
Current Switch Settings	<p>Displays the current DIP switch settings.</p> <p>For detailed information on hardware jumpers and DIP settings, see the Hardware Installation Guide.</p>

General > Settings > Module Settings

Configure the following parameters:

- Name** Displays the configured name for this Module.
- Link Mode** **Smart Link Passthrough:** In this mode, the link state on one port connection is directly reflected through the media converter to the other port. If the link is lost on one of the connections, then the other link will be brought down by the media converter.
Standard Mode: In this mode, the links can be brought up and down independently of each other. A loss of link on either connection can occur without affecting the other fiber connection.
Default: Smart Link Pass-through
- Fiber Fault Alert** **Enabled:** If the media converter detects a loss of signal on the fiber port, the media converter notifies the link partner on that same port that an error condition exists by bringing down the link.
Disabled: The media converter will not monitor for fiber fault.
Default: Disabled


Copy Settings

Copy	Slot	Name
<input checked="" type="checkbox"/>	2	CM-10GT-XFPH


- Copy Module Settings** Copy this module's settings to other modules of the same type.

Port 1 Tab (SFP installed)

Port 1 > Properties > Settings

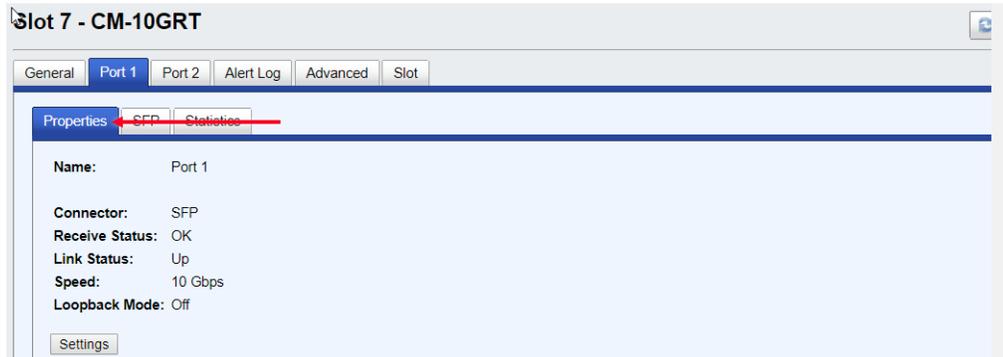


Port 1 Settings (SFP)

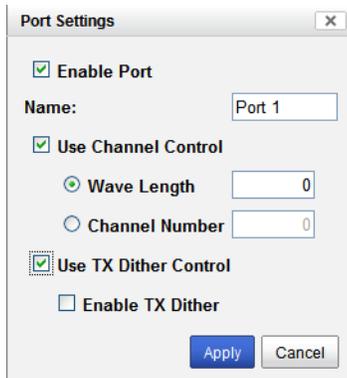

- Enable Port** Enables/Disables the fiber port.
- Name** The name of the fiber port.
Field Format: 8 characters
- Use Channel Control** **Settings:**
Wave length: 0-65535
Channel Number: 1-65535
Default: Off
*** Note:** See manufacturers documentation for parameter settings.
- Use Dither Control** **Default:** Disable
*** Note:** See manufacturers documentation for parameter settings.


Settings > 1000 Mbps SFP

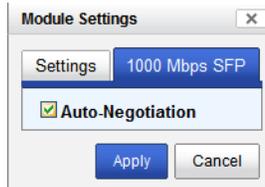

Auto-Negotiation When enabled, the Media Converter Module will negotiate with its link partner to determine the most optimal parameters for this connection. This applies to 1000 SFP modules only.

Default: Enabled

Port 1 > SFP

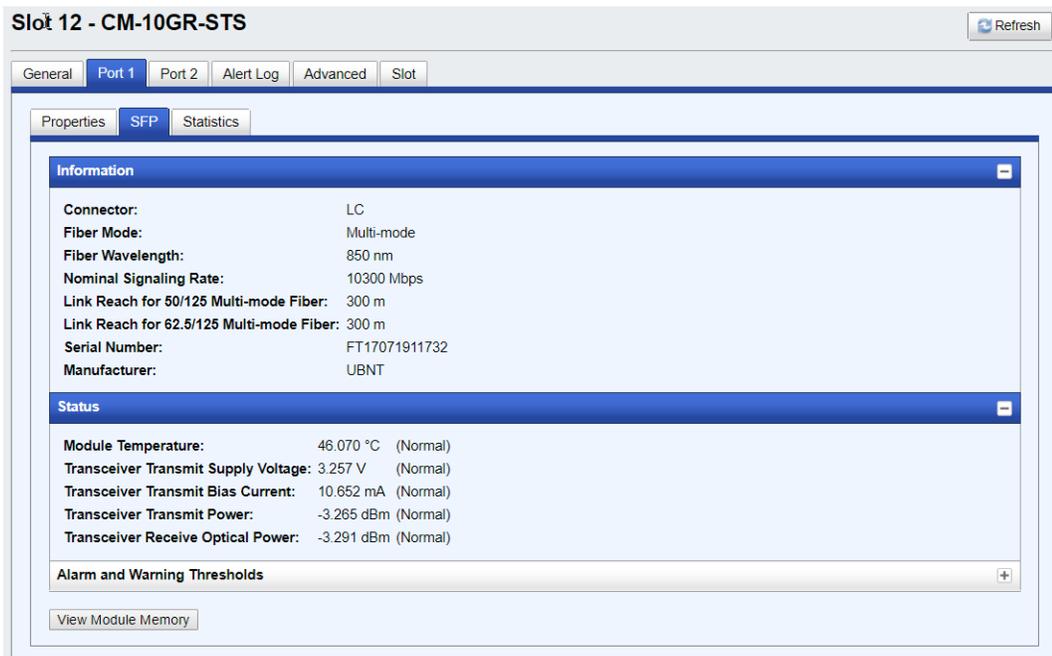

Port 1 Tab (XFP installed)


Port 1 > Properties > Settings



Port 1 Settings (XFP)


- | | |
|----------------------------|--|
| Enable Port | Enables/Disables the fiber port. |
| Name | The name of the fiber port.
Field Format: 8 characters |
| Use FEC | Settings:
Amplitude Adjustment: -128 to 127
Phase Adjustment: -128 to 127
Default: Disabled
* Note: See manufacturers documentation for parameter settings. |
| Use Channel Control | Settings:
Wave length: 0-65535
Channel Number: 1-65535
Default: Off
* Note: See manufacturers documentation for parameter settings. |
| Use TX Dither | Default: Disable
* Note: See manufacturers documentation for parameter settings. |

Port 1 > XFP

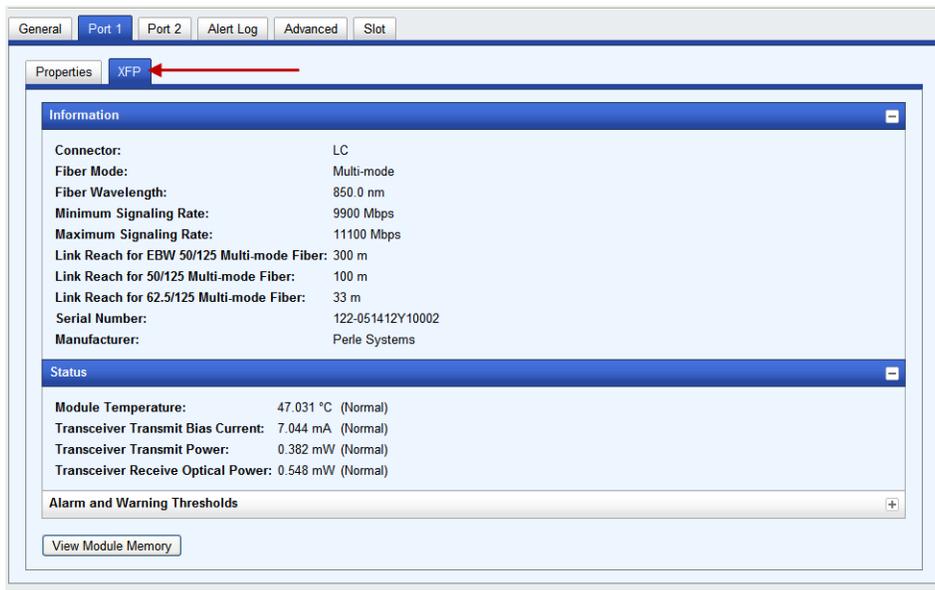


Port 2 Tab (Copper)

Port 2 > Settings

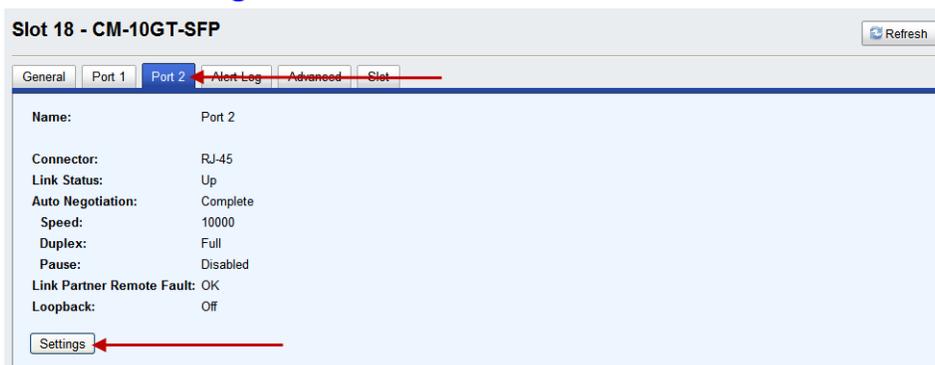

Port 2 > Copper Port Settings

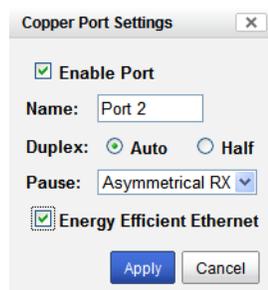

Enable Port Enables/Disables the copper port.
Default: Enable

Name The name of the copper port.
Field Format: 8 characters

- Duplex** **The following selections are available:**
Duplex: Auto, Half
Default: Auto
 This duplex configuration parameter will only be used for 1 gigabit SPF modules. For 10 gigabit modules, full duplex will always be advertised
- Pause** When enabled, the Media Converter Module will advertise the following Pause capabilities:
 - Symmetrical
 - Asymmetrical TX
 - Asymmetrical RX**Note: Pause feature will only work if Auto Negotiation is set to OFF on the fiber port and Duplex is set to Full.**
Default: Off
- Energy Efficient Ethernet (EEE)** **Enabled:** When enabled, the media converter module will auto negotiate EEE with the attached EEE compliant devices/servers.
Disabled: The media converter module will not auto negotiate EEE with attached the EEE compliant devices/servers.
Default: Enabled

Alert Log Tab

Field Descriptions

Slot 18 - CM-10GT-SFP Refresh

General Port 1 Port 2 **Alert Log** Advanced Slot

<< first < prev 1 2 3 4 next > last >> 10


Date	Description	Severity
04/30/2013 14:23:41	CM-10GT-SFP (slot 18): Port 2 (copper 2) port link status UP.	Significant Event
04/30/2013 14:23:37	CM-10GT-SFP (slot 18): Port 2 (copper 2) port link status DOWN.	Significant Event
04/30/2013 14:23:23	CM-10GT-SFP (slot 18): Port 2 (copper 2) port link status UP.	Significant Event
04/30/2013 14:23:19	CM-10GT-SFP (slot 18): Port 2 (copper 2) port link status DOWN.	Significant Event
04/30/2013 14:23:04	CM-10GT-SFP (slot 18): Port 2 (copper 2) port link status UP.	Significant Event
04/30/2013 14:22:46	CM-10GT-SFP (slot 18): Port 2 (copper 2) port link status DOWN.	Significant Event
04/30/2013 14:22:31	CM-10GT-SFP (slot 18): Port 2 (copper 2) port link status UP.	Significant Event
04/30/2013 14:22:19	CM-10GT-SFP (slot 18): Port 2 (copper 2) port link status DOWN.	Significant Event
04/30/2013 14:22:03	CM-10GT-SFP (slot 18): Port 2 (copper 2) port link status UP.	Significant Event
04/30/2013 14:21:36	CM-10GT-SFP (slot 18): Port 2 (copper 2) port link status DOWN.	Significant Event

<< first < prev 1 2 3 4 next > last >> 10

Displays the current local Alerts. The local Alert buffer contains the last 200 alerts and displays these events in a wrap around fashion.

Advanced Tab

Field Descriptions

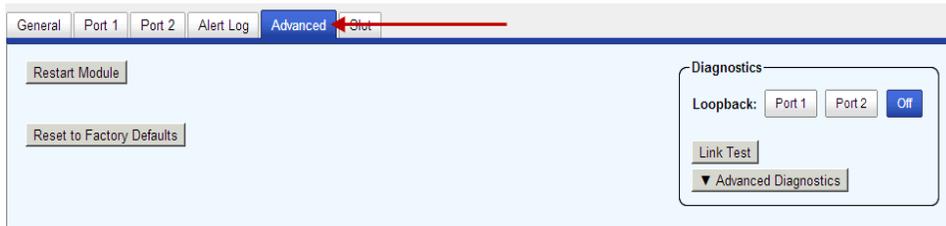

Restart Module Restarts this Media Converter Module.

Reset Factory Defaults Resets this Media Converter Module back to factory defaults.

Diagnostics

Loopback

Port 1: Port 1 (fiber) will be in loopback mode. Data received on the receive (RX) fiber connection is looped back to the transmit (TX) fiber connection.

Port 2: Port 2 (copper) will be in loopback mode. Data received on the TXD lines are looped back to the RXD lines.

Off: Loop back mode is off.

(Note: only one port can be in loopback mode at a time)


Note: DIP switches are only active when the "Auto-Config" jumper is set to "SW". When this jumper is set to "Auto", loop-backs can only be initiated from the MCR-MGT management module.

Link Test The Link Test involves sending a pattern to the remote peer, having him validate the pattern and send back a response indicating whether he received the pattern correctly or not. Based on the response from the peer, the local module is able to obtain one of three statuses for that transaction (which is repeated every second). See [Link Test Responses](#).

Advanced Diagnostics, Read/Write Register This feature should only be used if guided by a Perle Technical Support Representative. Use of this feature without guidance from a Perle Technical Support Representative could make your Media Converter Module inoperable.

Note: The View Module Memory feature under the Advanced Diagnostics menu should only be used if guided by a Perle Technical Support Representative.

Link Test

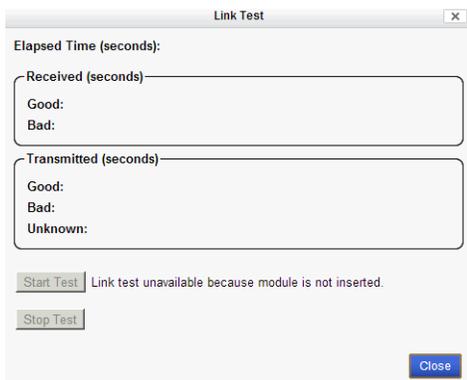

Link Test Responses**Received**


- **Good** - The local module received a “good” response from the peer.
- **Bad** - The response received from the peer was received in error or not received at all

Transmitted:

- **Good** - The remote peer indicated that the data sent by the local module was received correctly.
- **Bad** - The remote peer indicated that the data sent by the local module was received in error
- **Unknown** - The local module was unable to decode the message sent by the remote peer (this is a “bad” receive status). Since the local module is unable to decode what the peer sent back, it is unable to determine if the data it transmitted to the peer was received correctly.

Slot

Field Descriptions

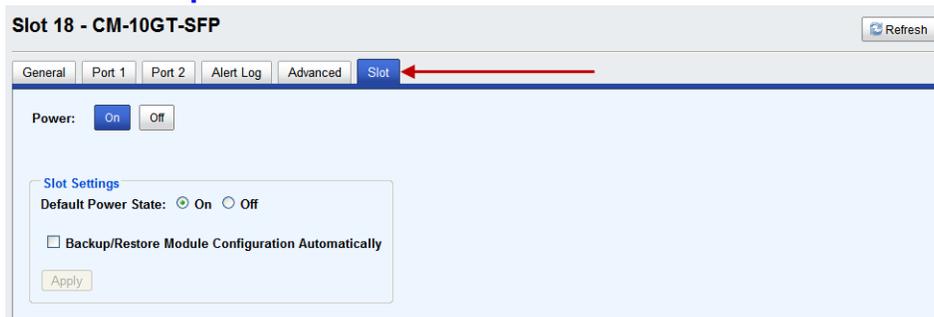

Power State Immediately power the slot on or off. The current state of the slot is highlighted in BLUE.
Press the "ON" button to immediately power the slot on.
Press the "OFF" button to immediately power the slot off.

Default Power State This is the default power state of the slot when the chassis is powered up or restarted.

Default: On

Backup/Restore Module

Enabled: The configuration information associated with this slot is saved on the Management Module and will be downloaded to the Media Converter Module whenever the Media Converter Module is inserted into this slot.

Disabled: The Media Converter Module configuration information is only kept on this Module.

Default: Disabled

15

eX-1CM110/1110 Ethernet Extender Modules

eX-1CM110/1110 Models

- eX-CM110 - This model contains one Ethernet port and one VDSL Line port with Ethernet speeds of 10/100 megabits.
- eX-CM1110 - This model contains one Ethernet port and one VDSL Line port with Ethernet speeds of 10/100/1000 megabits.
- Both models can be ordered either with an RJ-45, BNC or Terminal Block connector for the VDSL line port.

MCR1900 Chassis


The screenshot shows the web interface for the MCR-MGT-100634 chassis. The top navigation bar includes the Perle logo, chassis ID, IP address (172.16.28.55), and date/time (February 15, 2013 01:27:09 EST). Below the chassis overview, Slot 2 is highlighted, containing an eX-1CM1110-RJ module. A detailed view of this module is shown below, with tabs for General, InterLink Port, Ethernet Port, Alert Log, Advanced, and Slot. The General tab is active, displaying the module's name, model, and description. Hardware setup options like Configuration Jumper and Settings are also visible.

SMI Chassis

The screenshot shows the web interface for the SMI chassis. The top navigation bar includes the Perle logo, chassis ID, IP address (172.16.28.55), and date/time (February 18, 2013 21:13:14 EST). Below the chassis overview, Slot 2 is highlighted, containing an eX-1SM1110-RJ module. A detailed view of this module is shown below, with tabs for General, InterLink Port, Ethernet Port, Alert Log, Advanced, and Slot. The General tab is active, displaying the module's name, model, and description. Hardware setup options like Configuration Jumper and Settings are also visible.


General Tab

Field Descriptions

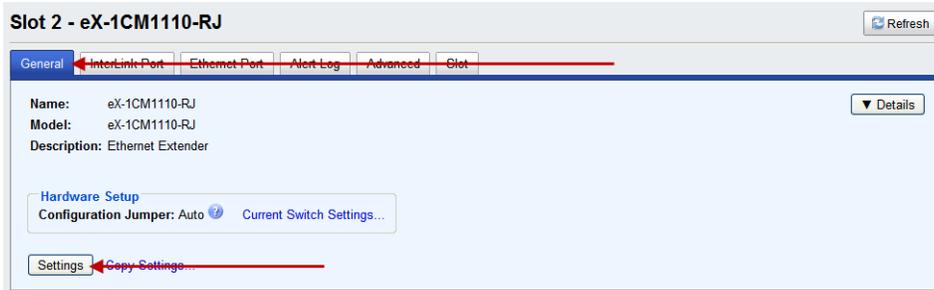

Name	Displays the configured name for this Module.
Model	Displays the module's model information.
Description	Displays a description of the Module that is inserted in this slot.
Configuration Jumper	Auto: Use software configuration if present, otherwise use hardware DIP switch settings. Switch: Use hardware DIP switch settings. For detailed information on hardware DIP switch settings, see the Hardware Installation Guide.
Current Switch Settings	Displays the current DIP switch settings. For detailed information on hardware jumpers and DIP settings, see the Hardware Installation Guide.

General > Settings

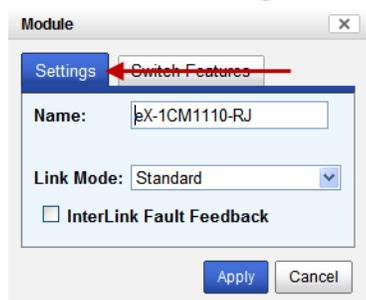

Name	Displays the configured name for this Module.
Link Mode	Standard Mode: In this mode, the Ethernet Extender module will not pass the state of the Ethernet interface across the Line connection to its peer. A loss on the Ethernet interface can occur without affecting the peer connection. Link Pass-Through: In this mode, the Ethernet Extender will keep the Ethernet interface in a down state until the VDSL link comes up. At this point, if the link is loss on the Ethernet connection then the peer Ethernet connection will be brought down by the Ethernet Extender. This is accomplished by signaling Link Pass-Through across the VDSL line without bring down the link. Default: Standard Mode


Interlink Fault Feedback

In this mode, the Ethernet Link will reflect the VDSL status. If the VDSL link is down the Ethernet Link will be down. If the VDSL link is up the Ethernet Link will be up.

When Interlink Fault Feedback is unchecked, the status of the VDSL interface will not be passed to its Ethernet interface.

Default: unchecked

General > Switch Settings

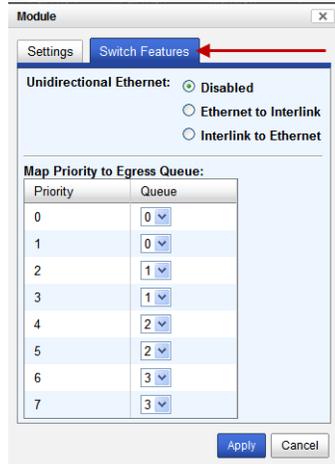

Unidirectional Ethernet

When enabled, this feature provides the ability to restrict the flow of data between the Ethernet and Interlink port.

Values:

- Disabled
- Ethernet to Interlink
- Interlink to Ethernet


Default: Disabled


Map Priority to Egress Queue

This is the **default** egress priority mapping for both the Ethernet and Interlink port.

- Priority 0 (lowest priority)... Queue 0
- Priority 1... Queue 0
- Priority 2... Queue 1
- Priority 3... Queue 1
- Priority 4... Queue 2
- Priority 5... Queue 2
- Priority 6... Queue 3
- Priority 7... (highest priority)...Queue 3


Copy Settings

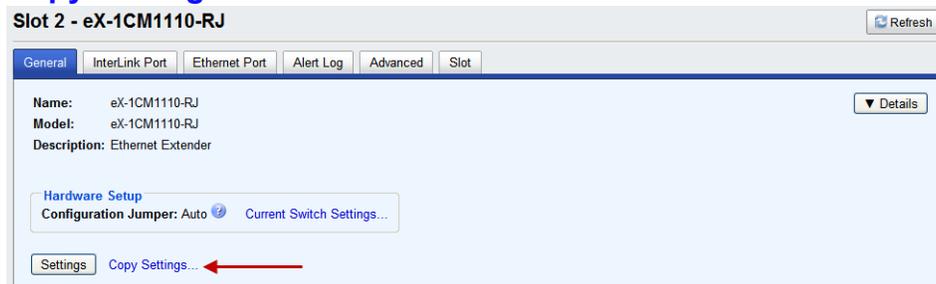

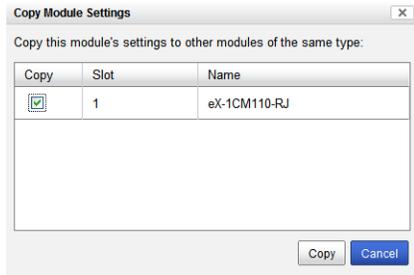


Copy Module Settings Copy this module's settings to other modules of the same type.

Interlink Port > Properties > Settings

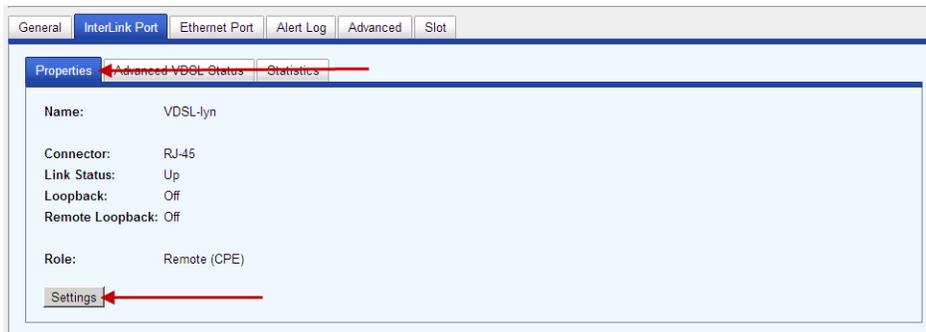

Settings

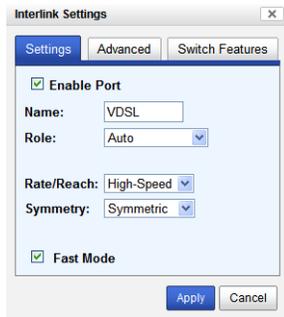

Enable Port Enable/Disable Interlink port.

Default: Enabled

Name The name of the Interlink port.

Length: characters (1-8)

Role	<p>Auto: If at least one Ethernet Extender is configured for Auto mode, a proprietary method of detection is implemented for each attempt to synchronize one side of the link to local and the other side of the link to remote. However, it is preferable to configure one Ethernet Extender to Local and the other Ethernet Extender to Remote since this may result in slightly faster training times and direct control over their roles.</p> <p>Local (C0): This Ethernet Extender is set to the Local mode of operation.</p> <p>Remote (CPE): This Ethernet Extender is set to the Remote mode of operation.</p> <p>Note: Ethernet Extender modules work in pairs. If both Ethernet Extenders are not set to Auto, then one side of the link must be set to Local/Auto and the other end must be set to Remote/CPE.</p>
Rate/Reach	<p>High Speed: In this mode, the VDSL connection will be optimized for maximum attainable speeds.</p> <p>Long Range: In this mode, the VDSL connection will be optimized for distance and the achievable distance will be up to 1 mile (3 km).</p>
Symmetry	<p>Symmetric: Set this mode to Symmetric if your network data needs are almost equal for uploads and downloads (both directions).</p> <p>Asymmetric: Set this mode to Asymmetric if your network data needs are primarily for downloads. Data direction is towards the remote Ethernet Extender.</p>
Fast Mode	<p>Fast mode reduces frame latency when using shorter cable distances.</p> <p>Default: Enabled</p> <p>Note: Using Interlink override values for upstream and downstream SNR and/or INP may disable Fast Mode.</p>

Note: The actual distance and rates may vary depending on the environment and type/gauge of wire used. There will always be a compromise between speed and range. For more information on hardware specifications see the Perle website at www.perle.com.

Interlink Port > Properties > Settings > Advanced

The screenshot shows the 'Interlink Settings' dialog box with the 'Advanced' tab selected. A red arrow points to the 'Switch Features' button. The 'Select VDSL profile manually' option is chosen, and the profile dropdown is set to '32 - AnnexC_POTS_25-276_b'. The 'Override advanced VDSL profile settings' checkbox is checked. The settings for upstream and downstream are as follows:

Parameter	Upstream	Downstream
Signal-to-Noise Ratio	90 x 0.1 dB	90 x 0.1 dB
Minimum Datarate	128 kbps	128 kbps
Maximum Datarate	101064 kbps	101064 kbps
Maximum Interleave Delay	8 ms	8 ms
Minimum INP	4	4

At the bottom, there are checkboxes for 'Low Bandwidth Alarm (upstream)' and 'Low Bandwidth Alarm (downstream)', each with an input field for kbps values (1 - 90000).

Select VDSL Profile Automatically "Select VDSL profile automatically" to use the configured settings for Rate and Symmetry on the settings tab.

Select VDSL Profile Manually "Select VDSL profile manually" to override the configured settings for Rate and Symmetry on the settings tab. Then select a profile from the drop down list. For a description of the VDSL profiles, refer to the ITU-T recommendation G.993.2.

Override advanced VDSL profile settings Select this checkbox to override specific parameters associated with the VDSL line.

Note: Advanced settings for VDSL are only valid if your Ethernet Extender has been configured with a role of Local.

Signal to Noise Ratio Configure the value to be used for Signal to Noise Ratio.

The Ethernet Extender module will attempt to maintain the desired SNR value by adjusting line settings. A larger dB number will result in less line errors and a more stable connection, but may result in slower speeds.

If Rate/Reach is set to High Speed the default value is 90dB for both upstream and downstream data.

If Rate/Reach is set to Long Range the default value is 60dB for both upstream and downstream data.

Values: Upstream/Downstream: 30 - 240 (3 - 24 dB)

Minimum Data Rate The minimum data rate of the VSDL link.

Values: Upstream/Downstream 128 - 101064 kbps

Maximum Data Rate The maximum data rate of the VSDL link.

Values: Upstream/Downstream 128 - 101064 kbps

Maximum Interleave Delay Interleaving is a method of taking packets, chopping them up into smaller bits and then rearranging them so that once contiguous data is now spaced further apart into a noncontinuous stream. This provides better noise protection but increases latency.

Enter the maximum acceptable gap in the data.

Values: Upstream/Downstream 0-16 ms

Minimum Impulse Noise Protection (INP)

This is a measure of minimum amount of protection, in terms of the discrete multi-tone (DMT) symbols that can be recovered if impulse noise occurs in a burst.

Fast Mode

Values: Upstream/Downstream 1-18

Bitswapping

As line conditions change, bit swapping allows the modem to swap bits around different channels without retraining as each channel becomes more or less capable. If bit swapping is disabled, the modem will need to retrain in order to adapt to changing line conditions.

Low Bandwidth Alarm (up)

When the Upstream link is established the Ethernet Extender module will check the low bandwidth value. If the data rate is below the threshold value, an SNMP trap will be generated.


Values: 1-90000 kbps

Low Bandwidth Alarm (down)

When the Downstream link is established the Ethernet Extender module will check the low bandwidth value. If the data rate is below the threshold value, an SNMP trap will be generated.

Values: 1-90000 kbps

Interlink Port > Properties > Settings > Switch Features > Priority

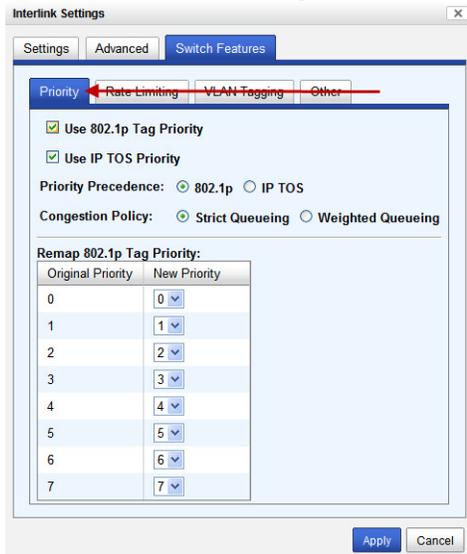

Enable 802.1p Priority

When enabled, the media converter module will use IEEE 802.1p tagged frame priority control to assign ingress frames to the appropriate priority egress queue.
Default: Enabled

Enable IP TOS Priority

When enabled, the media converter module will use IPv4 Diffserv or IPv6 traffic class field to assign ingress frames to the appropriate priority egress queue.
Default: Enabled

Priority Precedence

When both 802.1p priority and IP TOS priority are selected, you can select which of the two priorities takes precedence.
Default: 802.1p

Remap 802.1p Tag Priority Remap IEEE 802.1p ingress frames with a new priority tag. This new priority tag will be used to determine which queue the frame gets posted to.

Original Priority -----> New Priority

Values: 0-7

Congestion Policy Select a method to be used when determining the order by which frames are sent from the four egress queues. Setting the congestion policy on either the Interlink or Ethernet port will change the policy on both ports.

Strict Priority Queuing - The order is determined strictly by the priority of the queue. Frames in higher priority queues are always sent ahead of frames in lower priority queues.

Weighted Fair Queuing - This method allows lower priority frames to be inter-mixed with higher priority frames in the ratio of **(8, 4, 2, 1)**.

The ratio for 8 highest priority sent frames will be as follows:


8 highest priority frames from queue 3

4 frames from queue 2

2 frames from queue 1

1 frame from queue 0

Interlink Port ->Properties ->Settings ->Switch Features ->Rate Limiting

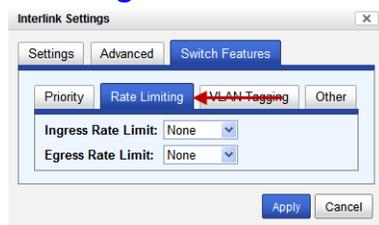


Ingress Rate Limit Restricts ingress frames on the Interlink port.
Default: None

Data Options: none to 90 Mbps

Egress Rate Limit Restricts egress frames on the Interlink port.
Default: None

Data Options: none to 90 Mbps

Interlink Port > Properties > Settings > Switch Features > VLAN Tagging

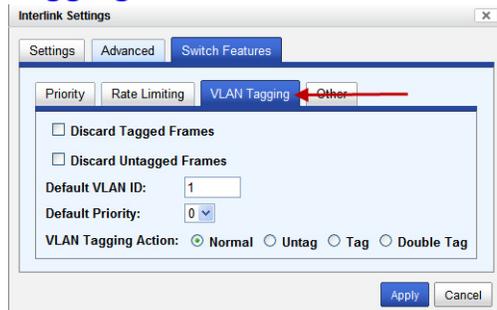

Discard Tagged Frames

When enabled, discards all VLAN tagged frames.

Default: Off

Discard Untagged Frames

When enabled, discards all VLAN untagged frames.

Default: Off

Default VLAN ID

Specify a default VLAN ID to insert when tagging frames.

Default: 1

Data Options: 0-4095

Default Priority

Specify a default VLAN priority to insert when tagging frames.

Default: 0

Data Options: 0-7

VLAN Tagging Actions

Define the VLAN tagging action to take on a egress frame.

- Normal - Take no action.
- Untag - Remove any existing tag.
- Tag


Insert tag with configured VLAN ID and VLAN priority if original frame is untagged.

Replace tag with configured VLAN ID and VLAN priority if original frame is tagged.

- Double tag - Append a tag with configured VLAN ID and VLAN priority.

Default: Normal

Interlink Port -> Properties -> Settings -> Switch Features -> Other

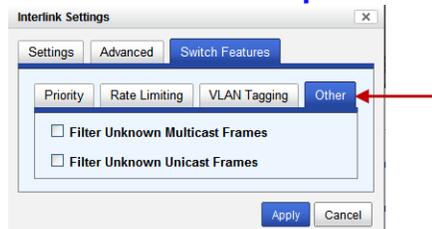

Filter Unknown Multicast Frames

When enabled, multicast frames with unknown destination addresses are not allowed to egress this port.

Default: Disabled

Filter Unknown Unicast Frames

When enabled, unicast frames with unknown destination addresses are not allowed to egress this port.

Default: Disabled

Interlink Port - Advanced VDSL Status

Displays the current statuses for the VDSL port.

	Upstream	Downstream
Attainable Data Rate	17221	83470 kbps
Actual Data Rate	17221	83470 kbps
Previous Data Rate	0	0 kbps
Actual Signal-To-Noise Ratio	89	59 x 0.1 dB
US0	0	x 0.1 dB
US1 DS1	89	60 x 0.1 dB
US2 DS2	0	58 x 0.1 dB
US3 DS3	0	0 x 0.1 dB
US4 DS4	0	0 x 0.1 dB
Actual Signal Attenuation	0	0 x 0.1 dB
US0	20	x 0.1 dB
US1 DS1	0	0 x 0.1 dB
US2 DS2	0	0 x 0.1 dB
US3 DS3	0	0 x 0.1 dB
US4 DS4	0	0 x 0.1 dB
Actual Line Attenuation	0	0 x 0.1 dB
US0	20	x 0.1 dB
US1 DS1	0	0 x 0.1 dB
US2 DS2	0	0 x 0.1 dB
US3 DS3	0	0 x 0.1 dB
US4 DS4	0	0 x 0.1 dB
Actual Interleave Delay	0	0 ms
Actual INP	0	0
Actual Interleaving Depth	1	1
Actual Interleaving Block	255	255
Actual Transmit Power	17	66 x 0.1 dBm
Maximum Data Rate	200000	200000 kbps
Minimum Data Rate	128	128 kbps
Target Signal-To-Noise Ratio	60	60 x 0.1 dB
Maximum Interleave Delay	8	8 ms
Minimum INP	4	4

Interlink Port - Statistics

General InterLink Port Ethernet Port Alert Log Advanced Slot

Properties Advanced VDSL Status **Statistics**

Basic

Bytes

Received (Good): 0
 Received (Error): 0
 Transmitted: 2216012

Frames

Receive Filtered: 0
 Transmit Filtered: 0
 Receive Discards: 0

Detailed

Received Frames

Good Frames

Unicast Frames: 0
 Broadcast Frames: 0
 Multicast Frames: 0
 Pause (Flow Control) Frames: 0

Bad Frames

Undersized Frames: 0
 Fragment Frames: 0
 Oversized Frames: 0
 Jabber Frames: 0
 MAC Receive Errors: 0
 FCS Errors: 0

Transmitted Frames

Good Frames

Unicast Frames: 0
 Broadcast Frames: 33163
 Multicast Frames: 528
 Pause (Flow Control) Frames: 0

FCS Errors: 0
 Deferred Frames: 0
 Collisions (excluding Late and Excessive): 0
 Late Collisions: 0
 Excessive Collisions: 0
 Single Collisions: 0
 Multiple Collisions: 0

Frame Lengths

64 Bytes: 32641
 65 to 127 Bytes: 848
 128 to 255 Bytes: 115
 256 to 511 Bytes: 83
 512 to 1023 Bytes: 0
 1024 to Maximum Bytes: 4

VDSL

Period: Since linkup

	Local	Remote
Full Init:	1	1
Code Violation:	0	0
Corrected:	0	0
Forward Error Correction Seconds:	0	0
Errored Seconds:	0	0
Severely Errored Seconds:	0	0
Loss Of Signal Seconds:	0	0
Unavailable Seconds:	18	18

Reset Basic and Detailed Counters

Note: Resetting Basic and Detailed counters will not reset the VDSL counters. The VDSL counters are automatically reset when the VDSL link is reset.

Ethernet Port > Properties

General InterLink Port **Ethernet Port** Alert Log Advanced Slot

Properties **Statistics**

Name: Ethernet

Connector: RJ45

Link Status: Up

Auto Negotiation: Complete

Speed: 1 Gbps

Duplex: Full

Pause: Disabled


Link Partner Remote Fault Status: OK

Downshift Status: No


MDI/MDI-X: MDI

Settings

Ethernet Port > Properties > Settings

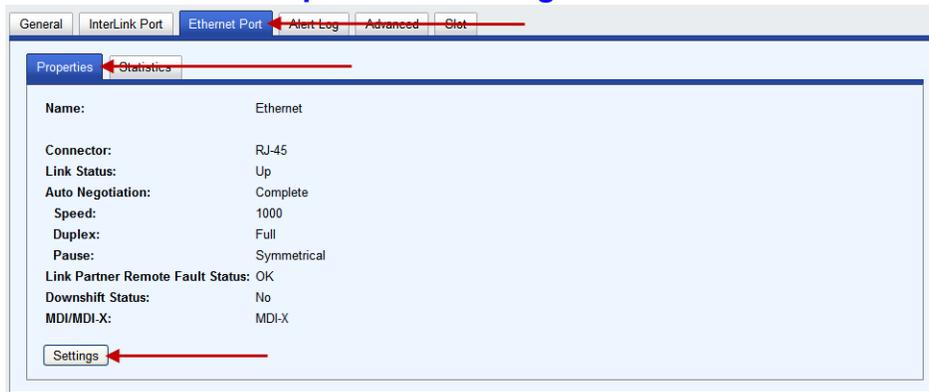


Settings

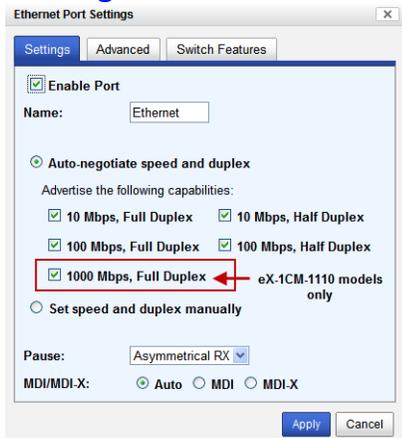

- Enable Port** Enables/Disables the Ethernet port.
Default: Enable
- Name** The name of the Ethernet port.
Data Values: 1-8 characters
- Auto Negotiate Speed and Duplex** Define the Ethernet connection.
Data Options:
- **Auto**—automatically detects the Ethernet interface speed and duplex
 - 10 Mbps/Half Duplex
 - 10 Mbps/Full Duplex
 - 100 Mbps/Half Duplex
 - 100 Mbps/Full Duplex
 - 1000 Mbps/Half Duplex (applies to eX-1CM-1110 models only)
- Default:** Auto
- Set Speed and Duplex Manually** When enabled, the following selections are available:
Speed: 100 Mbps, 10 Mbps
Duplex: Full, Half


- Pause** When enabled, the Media Converter Module will advertise its Pause capabilities.
- MDI/MDI-X**
- **Auto-Detect**— automatically detects the Ethernet’s cable polarity
 - **MDI** —the cable’s polarity is straight-through
 - **MDI-X** —the cable’s polarity is crossovered
- Default:** Auto

Ethernet Port > Properties > Settings > Set speed and duplex manually

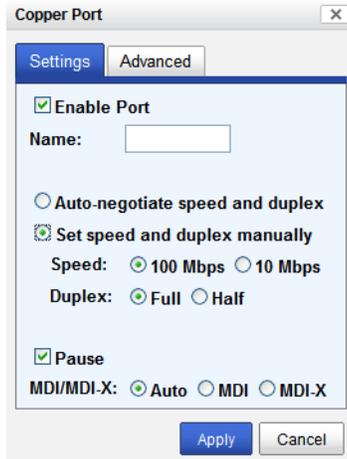

- Set Speed and Duplex Manually** When enabled, the following selections are available:
- Speed:** 100 Mbps, 10 Mbps
- Duplex:** Full, Half

Ethernet Port > Properties > Settings > Advanced

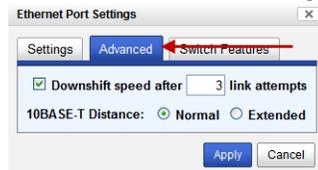

- Downshift speed after number of link attempts** When enabled, the number of retries the Media Converter Module will attempt to establish a fiber connection at 1000 Mbps before attempting a lower speed.
- Default:** On
- Link attempts:** 1-8

- 10BASE-T Distance Normal:** the Media Converter copper link is in normal operating mode.
- Extended:** the Media Converter will boost the signal strength on its copper link.

Ethernet Port ->Properties ->Settings ->Switch Features ->Priority



Enable 802.1p Priority

When enabled, the media converter module will use IEEE 802.1p tagged frame priority control to assign ingress frames to the appropriate priority egress queue.
Default: Enabled

Enable IP TOS Priority

When enabled, the media converter module will use IPv4 Diffserv or IPv6 traffic class field to assign ingress frames to the appropriate priority egress queue.
Default: Enabled

Priority Precedence

When both 802.1p priority and IP TOS priority are selected, you can select which of the two priorities takes precedence.
Default: 802.1p

Remap 802.1p Tag Priority

Remap IEEE 802.1p ingress frames with a new priority tag. This new priority tag will be used to determine which queue the frame gets posted to.

Original Priority -----> New Priority

Values: 0-7

Congestion Policy

Select a method to be used when determining the order by which frames are sent from the four egress queues. Setting the congestion policy on either the Interlink or Ethernet port will change the policy on both ports.


Strict Priority Queuing - The order is determined strictly by the priority of the queue. Frames in higher priority queues are always sent ahead of frames in lower priority queues.

Weighted Fair Queuing - This method allows lower priority frames to be inter-mixed with higher priority frames in the ratio of **(8, 4, 2, 1)**.

The ratio for 8 highest priority sent frames will be as follows:

- 8** highest priority frames from queue 3
- 4** frames from queue 2
- 2** frames from queue 1
- 1** frame from queue 0

Ethernet Port ->Properties ->Settings ->Switch Features ->Rate Limiting

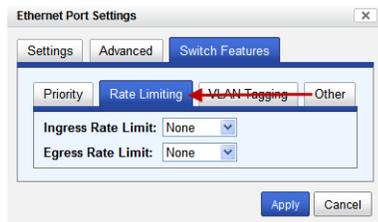

Ingress Rate Limit Restricts ingress frames on the Interlink port.

Default: None


Data Options: none to 90 Mbps

Egress Rate Limit Restricts egress frames on the Interlink port.

Default: None

Data Options: none to 90 Mbps

Ethernet Port ->Properties ->Settings ->Switch Features ->VLAN Tagging

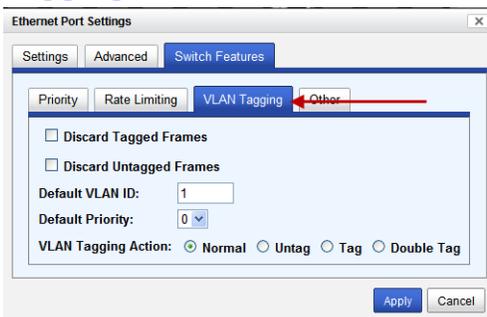

Discard Tagged Frames When enabled, discards all VLAN tagged frames.

Default: Off

Discard Untagged Frames When enabled, discards all VLAN untagged frames.

Default: Off

Default VLAN ID Specify a default VLAN ID to insert when tagging frames.

Default: 1

Data Options: 0-4095

Default Priority Specify a default VLAN priority to insert when tagging frames.

Default: 0

Data Options: 0-7

VLAN Tagging Actions Define the VLAN tagging action to take on a egress frame.

- Normal -Take no action.
- Untag - Remove any existing tag.
- Tag


Insert tag with configured VLAN ID and VLAN priority if original frame is untagged.

Replace tag with configured VLAN ID and VLAN priority if original frame is tagged.

- Double tag - Append a tag with configured VLAN ID and VLAN priority.

Default: Normal


Ethernet Port ->Properties ->Settings ->Switch Features ->Other

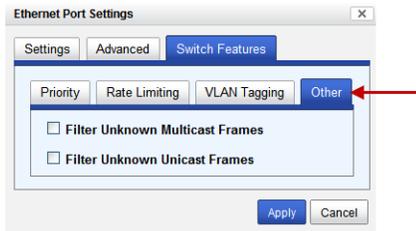

Filter Unknown Multicast Frames When enabled, multicast frames with unknown destination addresses are not allowed to egress this port.
Default: Disabled

Filter Unknown Unicast Frames When enabled, unicast frames with unknown destination addresses are not allowed to egress this port.
Default: Disabled

Alert Log

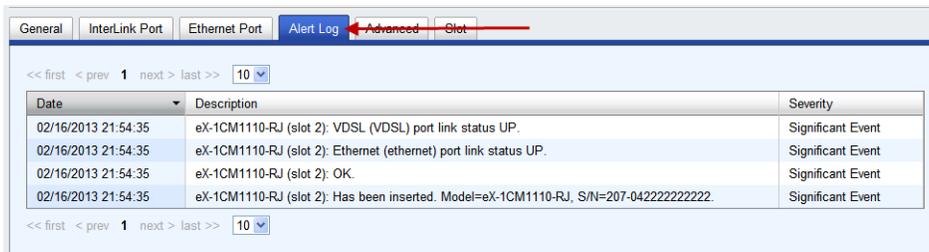

Displays the current local Alerts. The local Alert buffer contains the last 200 alerts and displays these events in a wrap around fashion.

Advanced



Restart Module Restarts this Media Converter Module.

Restart Remote Module The local Ethernet Extender module sends a restart sequence to the remote Ethernet Extender to restart.

Reset to Factory Defaults Resets this Media Converter Module back to factory defaults.

Diagnostics

(Local) Loopback In local loopback mode any data received on the VDSL line from the remote Ethernet Extender module will be looped back to the remote Ethernet Extender module.

(Remote) Loopback

In remote loopback mode any data received on the VDSL line from the local Ethernet Extender module will be looped back to the local Ethernet Extender module.

Virtual Cable Test

Performs a Virtual Cable Test to remotely and non-evasively diagnose the quality and characteristics of the attached ethernet cable. This test can detect issues such as cable opens, cable shorts or any impedance mismatch in the cable and then accurately report (within one meter) the distance of the fault. In addition, this Virtual Cable Test will detect pair swaps, pair polarity reversal and excessive pair skew.

Advanced Diagnostics, Read/Write Register

This feature should only be used if guided by a Perle Technical Support Representative. Use of this feature without guidance from a Perle Technical Support Representative could make your Media Converter Module inoperable.

Slot



Power

Immediately power the slot on or off. The current state of the slot is highlighted in BLUE.

Press the "ON" button to immediately power the slot on.

Press the "OFF" button to immediately power the slot off.

Default Power State

This is the default power state of the slot when the chassis is powered up or restarted.

Default: On

Backup/Restore

Enabled: The configuration information associated with this slot is saved on the Management Module and will be downloaded to the Media Converter Module whenever the Media Converter Module is inserted into this slot.

Disabled: The Media Converter Module configuration information is only kept on this Module.

Default: Disabled



CM-4GPT-DSFP Media Converter Module

This module allows connections and cross connections of fiber networks of different types to each other.

- protocol independent module using two standard SFP+ modules with speeds up to 4.25 Gbps.

CM-4GPT-DSFP Media Module Parameters

MCR1900 Chassis

MCR1900 Chassis Configuration

perle MCR-MGT-100634 172.16.28.55 February 18, 2013 01:07:48 EST
[User's Guide](#) | [User: admin](#) | [Logout](#)

MCR-MGT-100634 Slot 4 [▲ Hide Chassis](#)

Slot 4 - CM-4GPT-DSFP [Refresh](#)

General | Port 1 | Port 2 | Alert Log | Advanced | Slot

Name: CM-4GPT-DSFP
Model: CM-4GPT-DSFP
Description: Media Converter Managed Module. SFP Slot to SFP Slot

Hardware Setup
 Configuration Jumper: Auto [Current Switch Settings...](#)

[Settings](#) [▼ Details](#)

Cx-4GPT-DSFP

SMI Chassis

SMI Chassis Configuration

perle MCR-MGT-100634 172.16.28.55 February 18, 2013 20:49:41 EST
[User's Guide](#) | [User: admin](#) | [Logout](#)

MCR-MGT-100634 Slot 2 SMI-4GPT-DSFP [▲ Hide Chassis](#)

Slot 2 - CM-4GPT-DSFP [Refresh](#)

General | Port 1 | Port 2 | Alert Log | Advanced | Slot

Name: CM-4GPT-DSFP
Model: CM-4GPT-DSFP
Description: Media Converter Managed Module. SFP Slot to SFP Slot


Hardware Setup
 Configuration Jumper: Auto [Current Switch Settings...](#)

[Settings](#) [▼ Details](#)

CM-4GPT-DSFP

General Tab

Field Descriptions


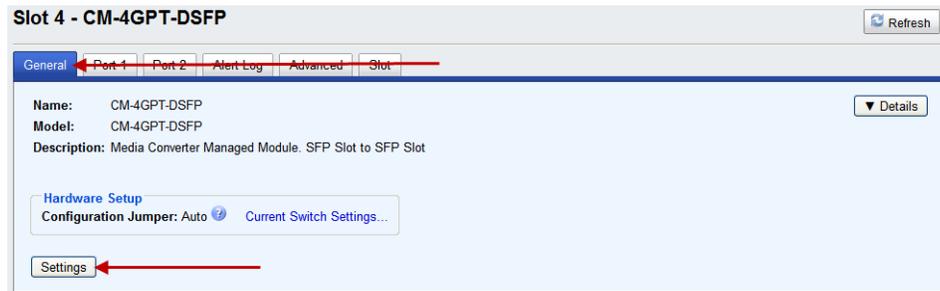


Name	Displays the configured name for this Module.
Model	Displays the module's model information.
Description	Displays a description of the Module that is inserted in this slot.
Configuration Jumper	<p>Auto: Use software configuration if present, otherwise use hardware DIP switch settings.</p> <p>Switch: Use hardware DIP switch settings.</p> <p>For detailed information on hardware DIP switch settings, see the Hardware Installation Guide.</p>
Current Switch Settings	<p>Displays the current DIP switch settings.</p> <p>For detailed information on hardware jumpers and DIP settings, see the Hardware Installation Guide.</p>

Module Settings

Name	Displays the configured name for this Module.
Link Mode	<p>Smart Link Pass-Through: In this mode, the fiber link state on one fiber connection is directly reflected through the media converter module to the other fiber connection. Since this media converter module is protocol independent, it monitors the Signal Detect indicator from the SFP and reflects this on the TX port of the other SFP by turning off the transmitter. When the signal (Link) gets restored and Signal Detect becomes active, the affected transmitter will get re-enabled.</p> <p>Standard Mode: In Standard Mode the media converter module will monitor the fiber link in the same manner. If Signal Detect goes down the media converter module will output a 25MHz signal on the TX port of the other SFP.</p> <p>Default: Smart-Link Passthrough</p>
Fiber Fault Alert	<p>Enabled: If the media converter module detects a loss of fiber signal on its fiber receiver, it will disable its fiber transmitter on the same SFP. This, in effect, notifies the fiber link partner that an error condition exists on the fiber connection.</p> <p>Disabled: The module will take no action when a loss of signal is detected.</p> <p>Default: Disabled</p> <p>Note: If two media converters are connected to each other, FFA should not be enabled on both since this could create a "deadlock" state.</p>
Rate Select	<p>High Speed: when a multi-rate SFP is inserted, it is enabled for the higher speed of operation.</p> <p>Low Speed: when a multi-rate SFP is inserted, it is enabled for the slower speed of operation.</p> <p>Default: High</p>

Copy Settings

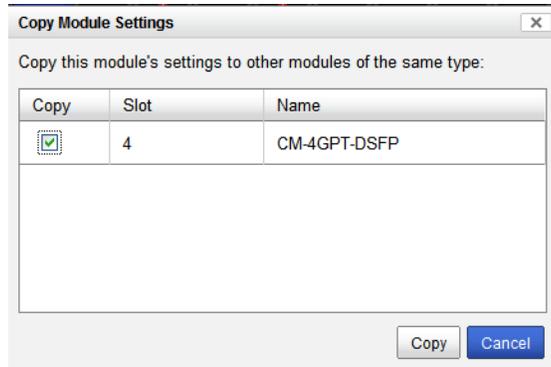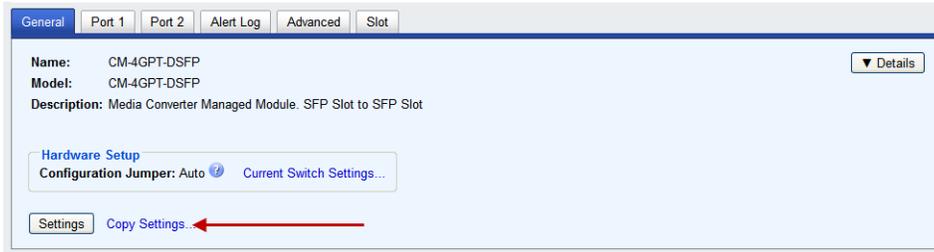


Copy Module Settings Copy this module's settings to other modules of the same type.

Port 1


Port 1 > Properties > Settings



Settings

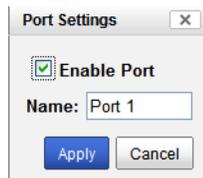

Port 1 SFP

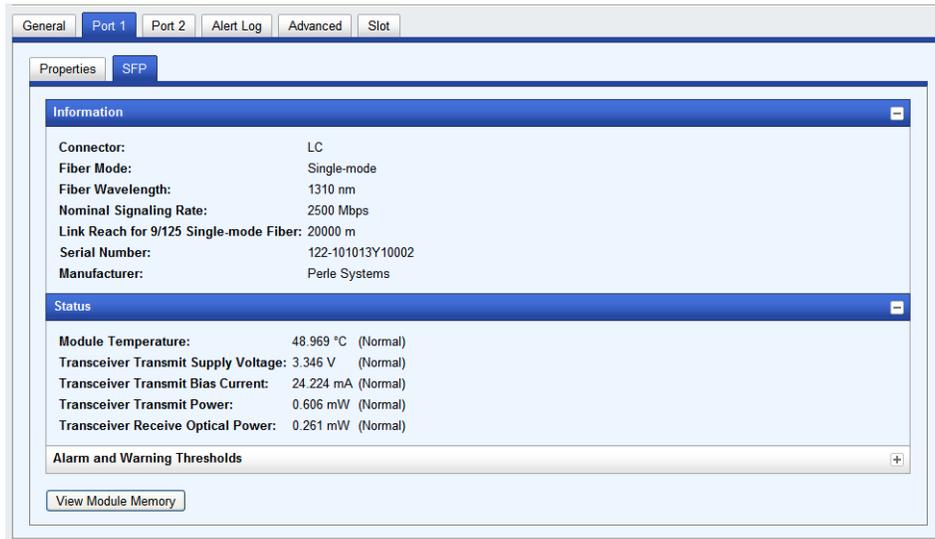


Note: The View Module Memory feature should only be used if guided by a Perle Technical Support Representative.

Port 2

Port 2 > Properties > Settings



Settings

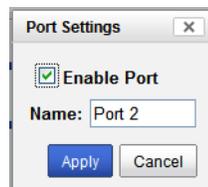

Port 2 SFP


Note: The View Module Memory feature should only be used if guided by a Perle Technical Support Representative.

Alert Log

Date	Description	Severity
02/18/2013 02:07:39	CM-4GPT-DSFP (slot 4): Port 1 (fiber 1) port link status UP.	Significant Event
02/18/2013 02:07:39	CM-4GPT-DSFP (slot 4): Port 1 (fiber 1) port link status DOWN.	Significant Event
02/18/2013 02:07:38	CM-4GPT-DSFP (slot 4): Port 1 (fiber 1) port link status UP.	Significant Event
02/18/2013 02:07:37	CM-4GPT-DSFP (slot 4): Port 1 (fiber 1) port link status DOWN.	Significant Event
02/18/2013 02:07:37	CM-4GPT-DSFP (slot 4): Port 1 (fiber 1) port link status UP.	Significant Event
02/18/2013 02:07:36	CM-4GPT-DSFP (slot 4): Port 1 (fiber 1) port link status DOWN.	Significant Event
02/18/2013 02:07:36	CM-4GPT-DSFP (slot 4): Port 1 (fiber 1) port link status UP.	Significant Event
02/18/2013 02:07:35	CM-4GPT-DSFP (slot 4): Port 1 (fiber 1) port link status DOWN.	Significant Event
02/18/2013 02:07:35	CM-4GPT-DSFP (slot 4): Port 1 (fiber 1) port link status UP.	Significant Event
02/18/2013 02:07:34	CM-4GPT-DSFP (slot 4): Port 1 (fiber 1) port link status DOWN.	Significant Event

Displays the current local Alerts. The local Alert buffer contains the last 200 alerts and displays these events in a wrap around fashion.

Advanced Tab

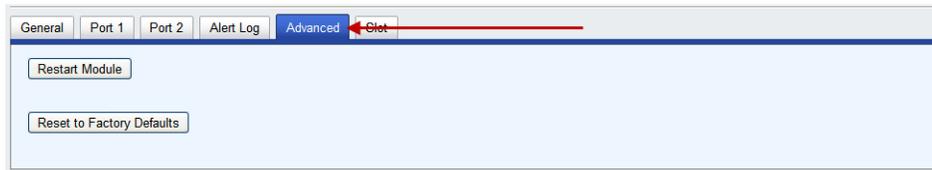

Restart Module Restarts this Media Converter Module.

Reset Factory Defaults Resets this Media Converter Module back to factory defaults.

Slot



Power State Immediately power the slot on or off. The current state of the slot is highlighted in BLUE.
Press the "ON" button to immediately power the slot on.
Press the "OFF" button to immediately power the slot off.

Default Power State This is the default power state of the slot when the chassis is powered up or restarted.

Default: On

Backup/Restore Module Configuration Automatically

Enabled: The configuration information associated with this slot is saved on the Management Module and will be downloaded to the Media Converter Module whenever the Media Converter Module is inserted into this slot.

Disabled: The Media Converter Module configuration information is only kept on this Module.

Default: Disabled

17

CM-10GRT Media Converter Modules

This module contains one pluggable transceiver port that permits insertion of one low power SFP/SFP+ fiber module and one integrated RJ-45 (copper) port.

CM-10GRT-SFP Media Converter Parameters

MCR1900

The screenshot shows the management interface for an MCR1900 chassis. At the top, it displays the chassis name 'MCR-MGT-232323', IP address '172.16.28.222', and the date 'November 09, 2017 17:49:42 EST'. Below this, a row of 19 slots is shown. Slot 7 is highlighted with a red box and labeled 'C-10GRT-SFP'. The interface for Slot 7 is titled 'Slot 7 - CM-10GRT' and includes tabs for 'General', 'Port 1', 'Port 2', 'Alert Log', 'Advanced', and 'Slot'. The 'General' tab is active, showing the following details:

- Name: CM-10GRT
- Model: CM-10GRT-SFP
- Description: Rate Converting 10G Managed Module. SFP Slot to (RJ-45)

Below the details, there is a 'Hardware Setup' section with a 'Configuration Jumper' set to 'Auto' and a link to 'Current Switch Settings...'. A 'Refresh' button is located at the bottom right of the slot configuration area.

SMI Chassis


The screenshot shows the management interface for an SMI Chassis. At the top, it displays the chassis name 'MCR-MGT-900098', IP address '172.16.113.29', and the date 'November 13, 2017 13:56:05 EST'. Below this, a row of 2 slots is shown. Slot 2 is highlighted with a red box and labeled 'C-10GRT-SFP'. The interface for Slot 2 is titled 'Slot 2 - CM-10GRT-SFP' and includes tabs for 'General', 'Port 1', 'Port 2', 'Alert Log', 'Advanced', and 'Slot'. The 'General' tab is active, showing the following details:

- Name: CM-10GRT-SFP
- Model: CM-10GRT-SFP
- Description: Rate Converting 10G Managed Module. SFP Slot to (RJ-45)

Below the details, there is a 'Hardware Setup' section with a 'Configuration Jumper' set to 'Auto' and a link to 'Current Switch Settings...'. A 'Refresh' button is located at the bottom right of the slot configuration area.


General Tab

Module ->General Tab

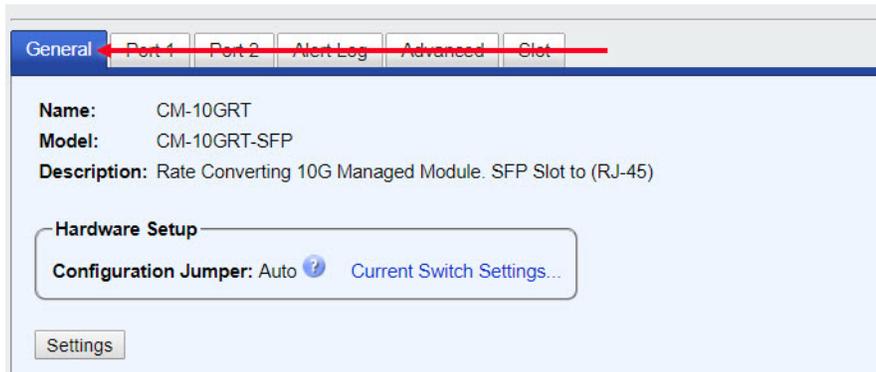

Name	Displays the configured name for this Module.
Model	Displays the module's model information.
Description	Displays a description of the Module that is inserted in this slot.
Configuration Jumper	<p>Auto: Use software configuration if present, otherwise use hardware DIP switch settings.</p> <p>Switch: Use hardware DIP switch settings.</p> <p>For detailed information on hardware DIP switch settings, see the Hardware Installation Guide.</p>
Current Switch Settings	<p>Displays the current DIP switch settings.</p> <p>For detailed information on hardware jumpers and DIP settings, see the Hardware Installation Guide.</p>

General > Settings > Module Settings

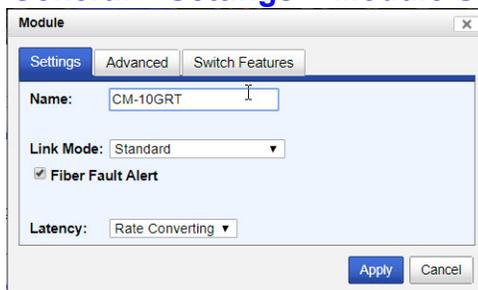

Name	Displays the configured name for this Module.
Link Mode	<p>Smart Link Passthrough: In this mode, the link state on one port connection is directly reflected through the media converter to the other port. If the link is lost on one of the connections, then the other link will be brought down by the media converter.</p> <p>Standard Mode: In this mode, the links can be brought up and down independently of each other. A loss of link on either connection can occur without affecting the other fiber connection.</p> <p>Default: Smart Link Pass-through</p>


- Fiber Fault Alert** **Enabled:** If the media converter detects a loss of signal on the fiber port, the media converter notifies the link partner on that same port that an error condition exists by bringing down the link.
Disabled: The media converter will not monitor for fiber fault.
Default: Disabled
- Latency** **Rate Converting:** Both ports can operate at the same or different speeds.
Cut Through: Both ports need to be the same speed and in full duplex mode. Energy Efficient Ethernet must be disabled
Default: Rate Converting

General > Settings-> Module ->Advanced



- Maximum Packet Size** Select the maximum packet size.
Options: 1522, 2048, 10240
Default: 10240

General > Settings-> Module ->Switch Features

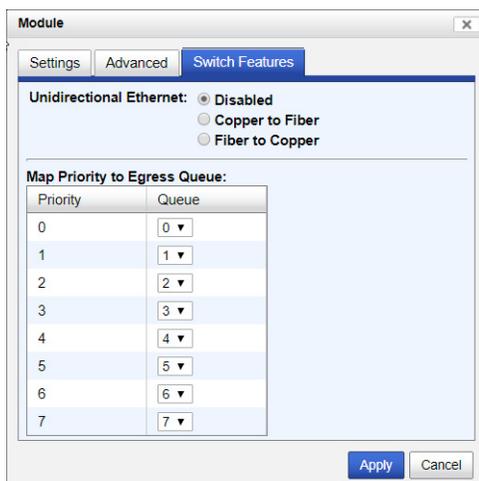


- Unidirectional Ethernet** When enabled, this feature provides the ability to restrict the flow of data between the Copper and fiber ports.
Values:
- Disabled
 - Copper to Fiber
 - Fiber to Copper
- Default:** Disabled

Map Priority to Egress Queue


This is the **default** egress priority mapping for both the copper and fiber ports.

- Priority 0 (lowest priority).....Queue 0
- Priority 1Queue 0
- Priority 2Queue 1
- Priority 3Queue 1
- Priority 4Queue 2
- Priority 5Queue 2
- Priority 6Queue 3
- Priority 7 (highest priority)Queue 3

General > Settings Copy Settings

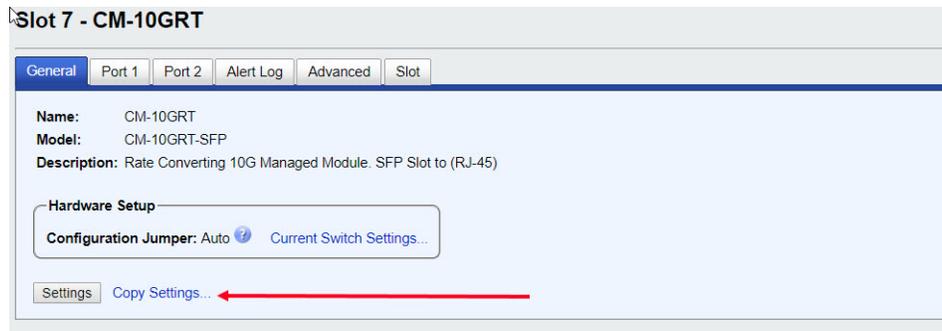

Copy Module Setting

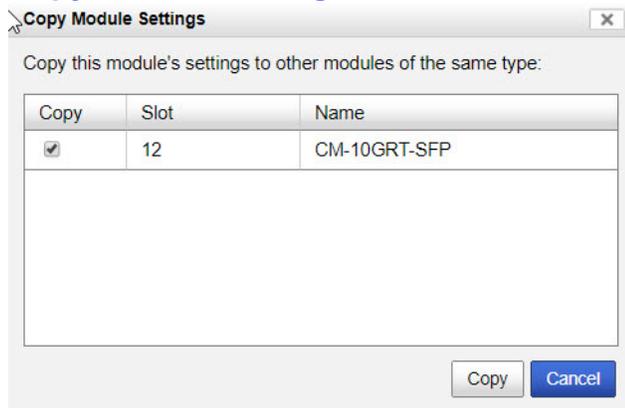

Copy Module Settings

Copy this module's settings to other modules of the same type.

Port 1 Tab (SFP installed)

Port 1 -> Properties

Slot 7 - CM-10GRT

General Port 1 Port 2 Alert Log Advanced Slot

Properties SFP Statistics

Name: Port 1

Connector: SFP

Receive Status: OK

Link Status: Up

Speed: 10 Gbps

Loopback Mode: Off

Settings

Port 1 > SFP

Slot 7 - CM-10GRT

General Port 1 Port 2 Alert Log Advanced Slot

Properties SFP Statistics

Information

Connector: LC

Fiber Mode: Multi-mode

Fiber Wavelength: 850 nm

Nominal Signaling Rate: 10300 Mbps

Link Reach for 50/125 Multi-mode Fiber: 80 m

Link Reach for 62.5/125 Multi-mode Fiber: 30 m

Serial Number: ALT05NP

Manufacturer: Intel Corp

Status

Module Temperature: 46.203 °C (Normal)

Transceiver Transmit Supply Voltage: 3.311 V (Normal)

Transceiver Transmit Bias Current: 8.178 mA (Normal)

Transceiver Transmit Power: -2.079 dBm (Normal)

Transceiver Receive Optical Power: -3.177 dBm (Normal)

Alarm and Warning Thresholds

View Module Memory

Port 1 > Statistics

Slot 7 - CM-10GRT

General Port 1 Port 2 Alert Log Advanced Slot

Properties SFP Statistics

Basic

Bytes		Frames	
Received (Good):	22234	Receive Filtered:	0
Received (Error):	0	Transmit Filtered:	0
Transmitted:	19330	Receive Discards:	0


Detailed

Reset Counters

Port 1 -> Properties -> Settings (SFP)




Port Settings

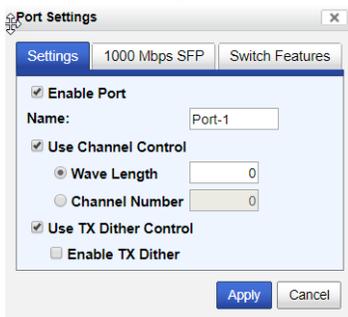

- Enable Port** Enables/Disables the fiber port.
- Name** The name of the fiber port.
Field Format: 8 characters
- Use Channel Control** **Settings:**
Wave length: 0-65535
Channel Number: 1-65535
Default: Off
* **Note:** See manufacturers documentation for parameter settings.
- Use Dither Control** **Default:** Disable
* **Note:** See manufacturers documentation for parameter settings.


1000 Mbps SFP Settings

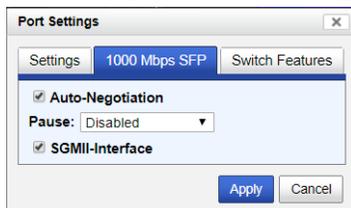

- Auto-Negotiation** The media converter module will auto link parameters.
Default: Enabled

- Pause** When enabled, the Media Converter Module will advertise the following Pause capabilities:
- Symmetrical
 - Asymmetrical TX
 - Asymmetrical RX
- Note: Pause feature will only work if Auto Negotiation is set to OFF on the fiber port and Duplex is set to Full.**
- Default: Off**
- SGMII-interface** When enable, the Media Converter Module supports SGMII (1000 Mbps) on the SFP interface.
- When disabled, the Media Converter Module does not support SGMII on the SFP interface.
- Default: Disable**

Switch Features -> Priority

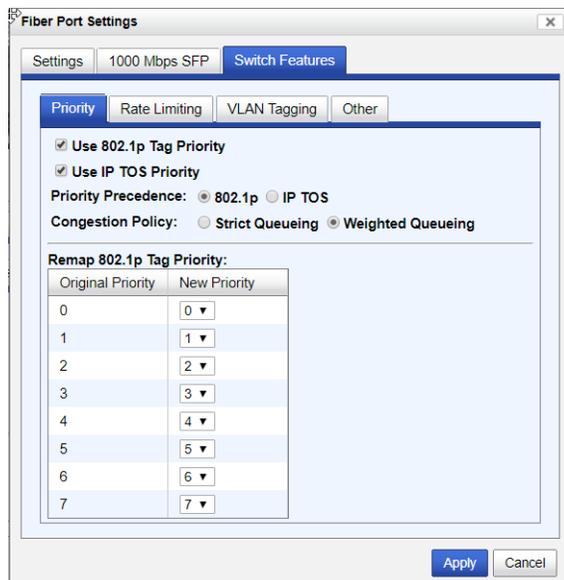

- Use 802.1p Priority** When enabled, the media converter module will use IEEE 802.1p tagged frame priority control to assign ingress frames to the appropriate priority egress queue.
- Default: Enabled**
- Use IP TOS Priority** When enabled, the media converter module will use IPv4 Diffserv or IPv6 traffic class field to assign ingress frames to the appropriate priority egress queue.
- Default: Enabled**
- Priority Precedence** When both 802.1p priority and IP TOS priority are selected, you can select which of the two priorities takes precedence.
- Default: 802.1p**

Remap 802.1p Tag Priority Remap IEEE 802.1p ingress frames with a new priority tag. This new priority tag will be used to determine which queue the frame gets posted to.

Original Priority -----> New Priority

Values: 0-7

Congestion Policy Select a method to be used when determining the order by which frames are sent from the four egress queues. Setting the congestion policy on either the Interlink or Ethernet port will change the policy on both ports.

Strict Priority Queuing - The order is determined strictly by the priority of the queue. Frames in higher priority queues are always sent ahead of frames in lower priority queues.

Weighted Fair Queuing - This method allows lower priority frames to be inter-mixed with higher priority frames in the ratio of **(8, 4, 2, 1)**.

The ratio for 8 highest priority sent frames will be as follows:


8 highest priority frames from queue 3

4 frames from queue 2

2 frames from queue 1

1 frame from queue 0

Switch Feature ->Rate Limiting

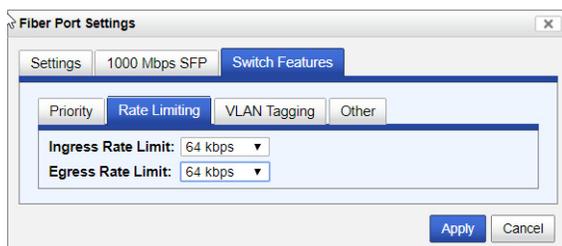

Ingress Rate Limit Restricts ingress frames on the Interlink port.

Default: None


Data Options: none to 900 Mbps

Egress Rate Limit Restricts egress frames on the Interlink port.

Default: None


Data Options: none to 900 Mbps

Switch Feature ->VLAN tagging

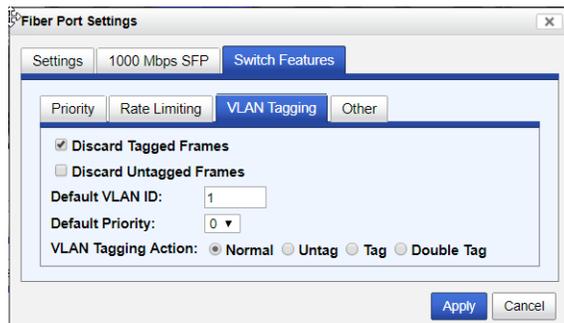

- Discard Tagged Frames** When enabled, discards all VLAN tagged frames.
Default: Off
- Discard Untagged Frames** When enabled, discards all VLAN untagged frames.
Default: Off
- Default VLAN ID** Specify a default VLAN ID to insert when tagging frames.
Default: 1
Data Options: 0-4095
- Default Priority** Specify a default VLAN priority to insert when tagging frames.
Default: 0
Data Options: 0-7
- VLAN Tagging Actions** Define the VLAN tagging action to take on a egress frame.
- Normal -Take no action.
 - Untag - Remove any existing tag.
 - Tag
 - Insert tag with configured VLAN ID and VLAN priority if original frame is untagged.
 - Replace tag with configured VLAN ID and VLAN priority if original frame is tagged.
 - Double tag - Append a tag with configured VLAN ID and VLAN priority.
- Default:** Normal

Switch Feature ->Other

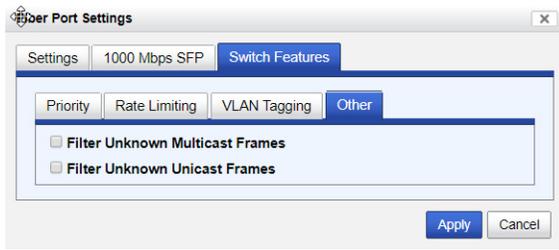


Filter Unknown Multicast Frames When enabled, multicast frames with unknown destination addresses are not allowed to egress this port.
Default: Disabled


Filter Unknown Unicast Frames When enabled, unicast frames with unknown destination addresses are not allowed to egress this port.
Default: Disabled

Port 2 Tab (Copper)


Port 2 ->Properties

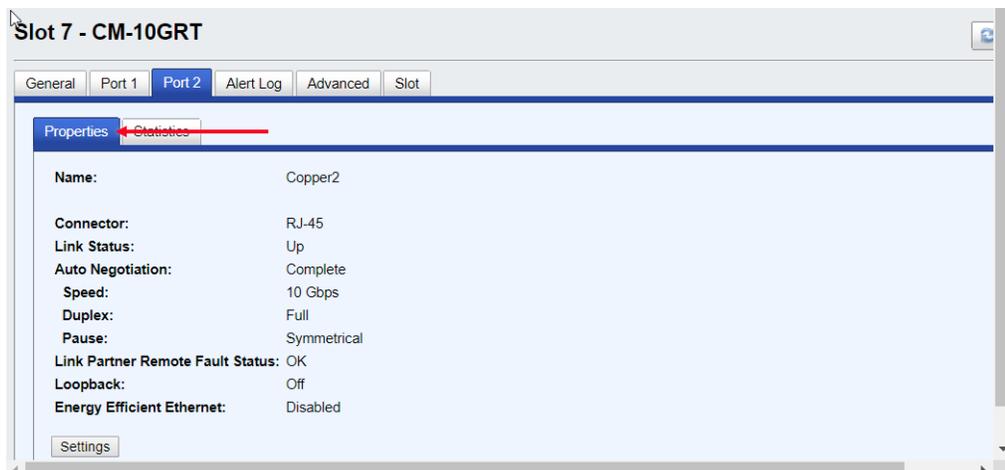


Port 2 ->Statistics

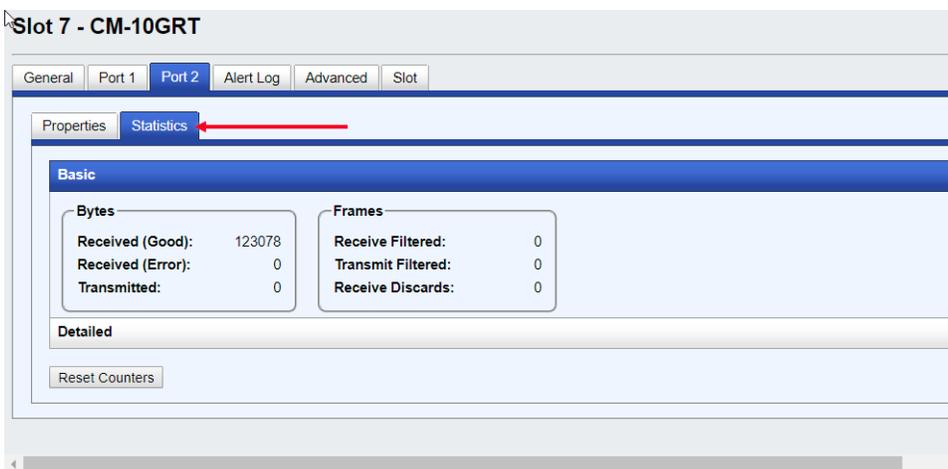

Port 2 ->Properties->Settings

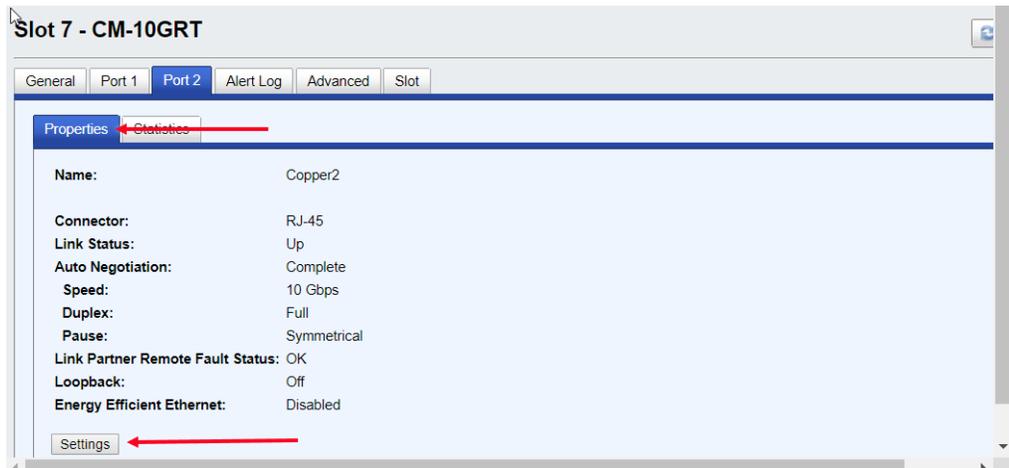

Port 2 ->Settings

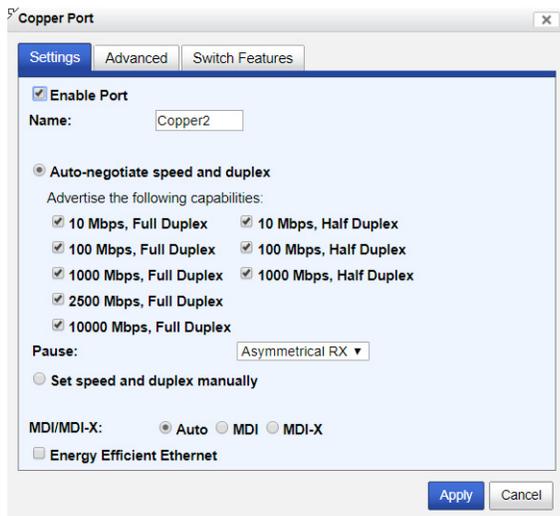

Enable Port Enables/Disables the copper port.


Default: Enable

Name The name of the copper port.

Field Format: 8 characters

Auto-negotiation speed and duplex	Enabled: The Media Converter Module will negotiate Ethernet parameters on the fiber connection. This will ensure that the most optimal connection parameters will be in effect.
	Disabled: The Media Converter Module will advertise the duplex and speeds selected.
	Values:
	10Mbps, Full Duplex
	10 Mbps, Half Duplex
	100 Mbps, Full Duplex
	100 Mbps, Half Duplex
	1000 Mbps, Full Duplex
	1000 Mbps, Half Duplex
	2500 Mbps, Full Duplex
	10000 Mbps, Full Duplex
Pause	When enabled, the Media Converter Module will advertise the following Pause capabilities:
	<ul style="list-style-type: none"> ● Symmetrical ● Asymmetrical TX ● Asymmetrical RX
	Note: Pause feature will only work if Auto Negotiation is set to OFF on the fiber port and Duplex is set to Full.
	Default: Off
Speed	The following selections are available:
	Speed 100 Mbps or 10 Mbps
	Default: 10 Mbps
Duplex	The following selections are available:
	Duplex: Auto, Half
	Default: Auto
	This duplex configuration parameter will only be used for 1 gigabit SFP modules. For 10 gigabit modules, full duplex will always be advertised
Energy Efficient Ethernet (EEE)	Enabled: When enabled, the media converter module will auto negotiate EEE with the attached EEE compliant devices/servers.
	Disabled: The media converter module will not auto negotiate EEE with attached the EEE compliant devices/servers.
	Default: Enabled

Port 2 ->Properties ->Advanced

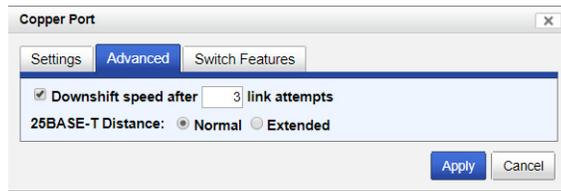

Downshift speed after number of link attempts

When enabled, the number of retries the Media Converter Module will attempt to establish a fiber connection at 25 Mbps before attempting a lower speed.


Default: On

Link attempts: 1-8


25BASE-T Distance Normal: the Media Converter copper link is in normal operating mode.

Extended: the Media Converter will boost the signal strength on its copper link.

Port 2 ->Properties ->Switch Features ->Priority

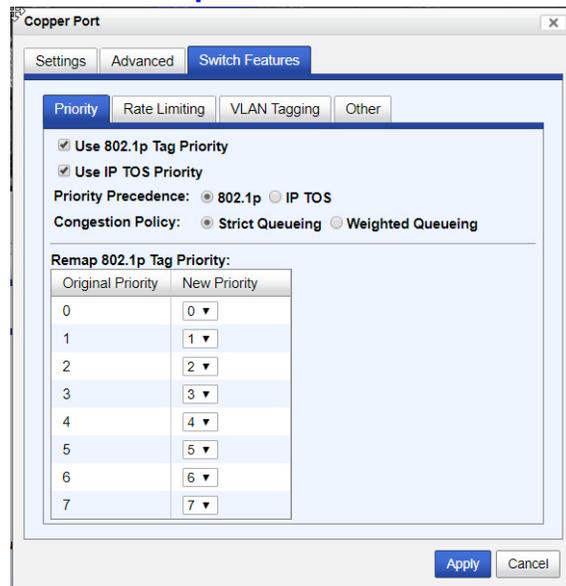

Port 2 ->Properties ->Switch Features ->Rate Limiting

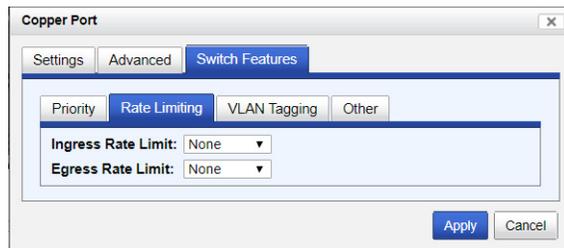

Ingress Rate Limit Restricts ingress frames on the Interlink port.

Default: None


Data Options: none to 900 Mbps

Egress Rate Limit Restricts egress frames on the Interlink port.

Default: None

Data Options: none to 900 Mbps

Port 2 ->Properties ->Switch Features ->VLAN Tagging

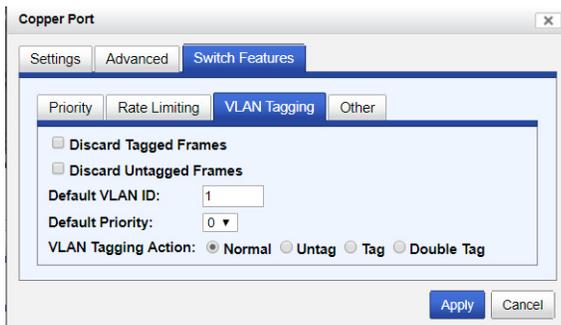


VLAN Tagging Define the VLAN tagging action to take on a egress frame.

- Normal -Take no action.
- Untag - Remove any existing tag.
- Tag
 - Insert tag with configured VLAN ID and VLAN priority if original frame is untagged.
 - Replace tag with configured VLAN ID and VLAN priority if original frame is tagged.
- Double tag - Append a tag with configured VLAN ID and VLAN priority.

Default: Normal


Port 2 ->Properties ->Switch Features ->Other

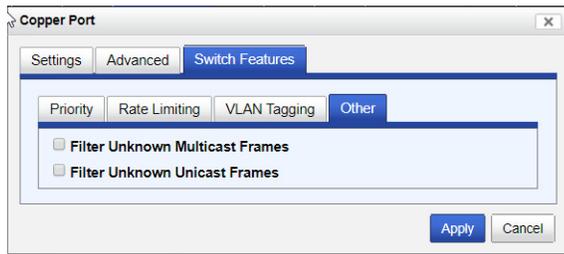

Filter Unknown Multicast Frames When enabled, multicast frames with unknown destination addresses are not allowed to egress this port.
Default: Disabled

Filter Unknown Unicast Frames When enabled, unicast frames with unknown destination addresses are not allowed to egress this port.
Default: Disabled

Alert Log Tab

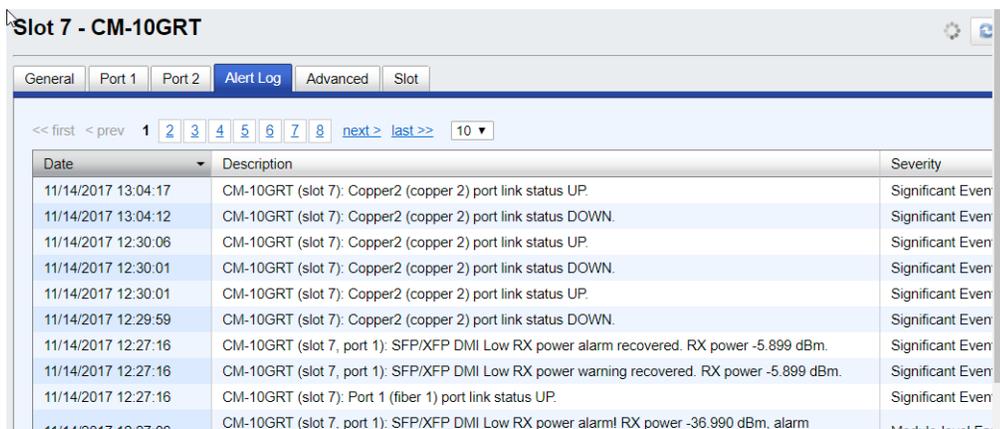

Displays the current local Alerts. The local Alert buffer contains the last 200 alerts and displays these events in a wrap around fashion.

Advanced Tab



Restart Module Restarts this Media Converter Module.

Reset Factory Defaults Resets this Media Converter Module back to factory defaults.

Diagnostics

Loopback **Port 1:** Port 1 (fiber) will be in loopback mode. Data received on the receive (RX) fiber connection is looped back to the transmit (TX) fiber connection.

Port 2: Port 2 (copper) will be in loopback mode. Data received on the TXD lines are looped back to the RXD lines.

Off: Loop back mode is off.

(**Note:** only one port can be in loopback mode at a time)


Note: DIP switches are only active when the "Auto-Config" jumper is set to "SW". When this jumper is set to "Auto", loop-backs can only be initiated from the MCR-MGT management module.

Virtual Cable Test Performs a Virtual Cable Test to remotely and non-evasively diagnose the quality and characteristics of the attached Ethernet cable. This test can detect issues such as cable opens, cable shorts or any impedance mismatch in the cable and then accurately report (within one meter) the distance of the fault. In addition, this Virtual Cable Test will detect pair swaps, pair polarity reversal and excessive pair skew.

Advanced Diagnostics, This feature should only be used if guided by a Perle Technical Support Representative. Use of this feature without guidance from a Perle Technical Support Representative could make your Media Converter Module inoperable.

Note: The View Module Memory feature under the Advanced Diagnostics menu should only be used if guided by a Perle Technical Support Representative.

Slot

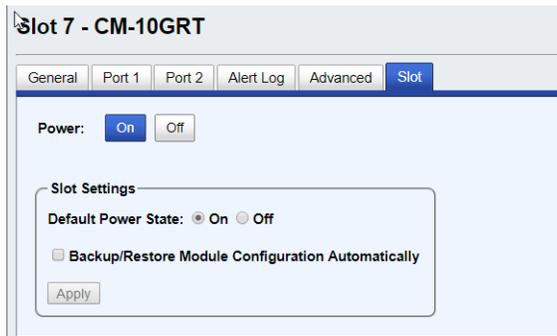

Power State Immediately power the slot on or off. The current state of the slot is highlighted in BLUE.

Press the "ON" button to immediately power the slot on.

Press the "OFF" button to immediately power the slot off.

Default Power State This is the default power state of the slot when the chassis is powered up or restarted.

Default: On

Backup/Restore Module

Enabled: The configuration information associated with this slot is saved on the Management Module and will be downloaded to the Media Converter Module whenever the Media Converter Module is inserted into this slot.

Disabled: The Media Converter Module configuration information is only kept on this Module.

Default: Disabled

18

CM-10GR-STS Media Converter Modules

This model contains two SFP/SFP+ pluggable transceivers. These pluggable transceiver ports can be populated with any combination of 10 gigabit SFPs+ or 1 gigabit SFP modules

CM-10GR-STS Modules Parameters

MCR 1900

MCR-MGT-232323 Slot 9

Slot 9 - CM-10GR

General | Port 1 | Port 2 | Alert Log | Advanced | Slot

Name: CM-10GR
 Model: CM-10GR-STS
 Description: Rate Converting 10G Managed Module. SFP Slot to SFP Slot

Hardware Setup
 Configuration Jumper: Auto

Settings Copy Settings...

SMI Chassis

MCR-MGT-900098 Slot 2

Slot 2 - CM-10GR-STS

General | Port 1 | Port 2 | Alert Log | Advanced | Slot


Name: SMI-10GR-STS
 Model: CM-10GR-STS
 Description: Rate Converting 10G Managed Module. SFP Slot to SFP Slot

Hardware Setup
 Configuration Jumper: Auto

Settings Copy Settings...

General

Module tab -> General

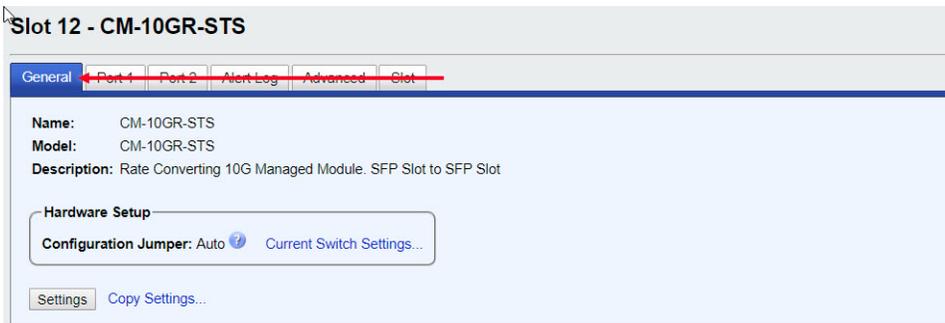


- Name** Displays the configured name for this Module.
- Model** Displays the module’s model information.
- Description** Displays a description of the Module that is inserted in this slot.
- Configuration Jumper**
 - Auto:** Use software configuration if present, otherwise use hardware DIP switch settings.
 - Switch:** Use hardware DIP switch settings.

For detailed information on hardware DIP switch settings, see the Cx-0Hardware Installation Guide.
- Current Switch Settings**
 - Displays the current DIP switch settings.

For detailed information on hardware jumpers and DIP settings, see the Cx-10GR-STS Media Converter Module Guide.

Settings

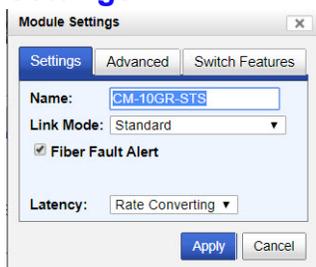

Configure the following parameters:

- Name** Displays the configured name for this Module.
- Link Mode**
 - Smart Link Passthrough:** In this mode, the link state on one port connection is directly reflected through the media converter to the other port. If the link is lost on one of the connections, then the other link will be brought down by the media converter.
 - Standard Mode:** In this mode, the links can be brought up and down independently of each other. A loss of link on either connection can occur without affecting the other fiber connection.
 - Default:** Smart Link Pass-through

Fiber Fault Alert When enabled, if the Media Converter Module detects a loss of signal on the fiber receiver, it will immediately disable its fiber transmitter signal. This in effect, notifies the fiber link partner that an error condition exists on the fiber connection.
Note: This feature only takes effect if Fiber Negotiation has been turned off. When disabled, the Media Converter Module will not monitor for or generate Fiber Fault Alert.
Default: On


Latency **Rate Converting:** Both ports can operate at the same or different speeds.
Cut Through: Both ports need to be the same speed and full duplex. Energy Efficient Ethernet must be disabled.
Default: Rate Converting

General > Settings-> Module ->Advanced



Maximum Packet Size Select the maximum packet size.
Options: 1522, 2048, 10240
Default: 10240

General ->Settings ->Module ->Switch Features

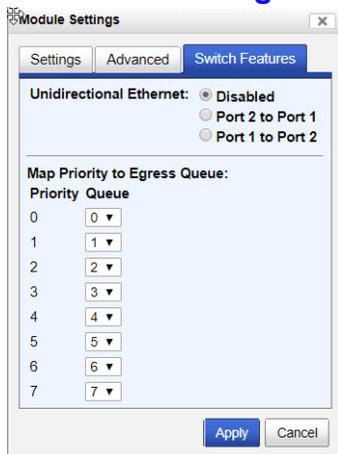


Unidirectional Ethernet When enabled, this feature provides the ability to restrict the flow of data between the fiber ports.
Default: Disabled


Map Priority to Egress Queue This is the **default** egress priority mapping for both fiber ports.

- Priority 0 (lowest priority).....Queue 0
- Priority 1Queue 0
- Priority 2Queue 1
- Priority 3Queue 1
- Priority 4Queue 2
- Priority 5Queue 2
- Priority 6Queue 3
- Priority 7 (highest priority)Queue 3

Copy Settings

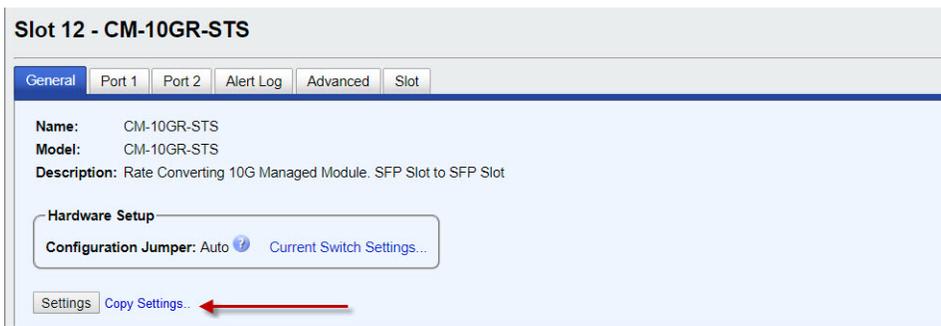

Copy Module Settings Copy this module's settings to other modules of the same type.

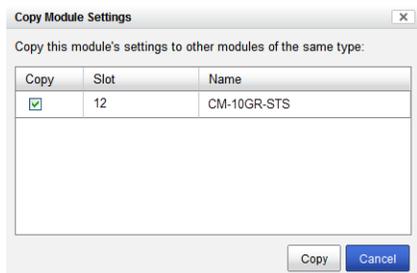


Ports 1 and 2 tab (SFP+'s installed)

Port -> Properties



Port -> Settings

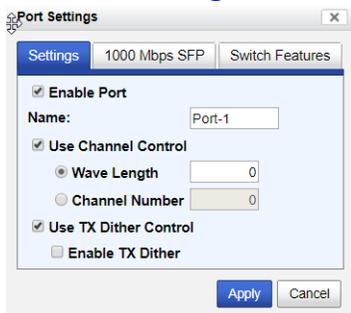

- Enable Port** Enables/Disables the fiber port.
- Name** The name of the fiber port.
Field Format: 8 characters
- Use Channel Control*** *** Note: See manufacturers documentation for parameter settings.**
- Use TX Dither Control*** *** Note: See manufacturers documentation for parameter settings.**

Port ->SFP

Slot 12 - CM-10GR-STS Refresh

General Port 1 Port 2 Alert Log Advanced Slot

Properties SFP Statistics

Information

Connector:	LC
Fiber Mode:	Multi-mode
Fiber Wavelength:	850 nm
Nominal Signaling Rate:	10300 Mbps
Link Reach for 50/125 Multi-mode Fiber:	300 m
Link Reach for 62.5/125 Multi-mode Fiber:	300 m
Serial Number:	FT17071911732
Manufacturer:	UBNT

Status

Module Temperature:	46.070 °C (Normal)
Transceiver Transmit Supply Voltage:	3.257 V (Normal)
Transceiver Transmit Bias Current:	10.652 mA (Normal)
Transceiver Transmit Power:	-3.265 dBm (Normal)
Transceiver Receive Optical Power:	-3.291 dBm (Normal)

Alarm and Warning Thresholds +

View Module Memory

Note: The View Module Memory feature should only be used if guided by a Perle Technical Support Representative.

Port ->Statistics

Slot 12 - CM-10GR-STS Refresh

General Port 1 Port 2 Alert Log Advanced Slot

Properties SFP Statistics

Basic

Bytes		Frames	
Received (Good):	123445	Receive Filtered:	0
Received (Error):	186645	Transmit Filtered:	0
Transmitted:	0	Receive Discards:	0

Detailed +

Reset Counters

Alert Log Tab

Date	Description	Severity
11/16/2017 18:23:13	CM-10GR-ST5 (slot 12, port 1): SFP/XFP DMI Low RX power alarm! RX power -40.000 dBm, alarm threshold -13.002 dBm.	Module-level Fault
11/16/2017 18:23:13	CM-10GR-ST5 (slot 12, port 1): SFP/XFP DMI Low RX power warning. RX power -40.000 dBm, warning threshold -12.000 dBm.	Persistent Error
11/16/2017 18:23:13	CM-10GR-ST5 (slot 12): Port-1 (fiber 1) port link status DOWN.	Significant Event
11/16/2017 18:23:13	CM-10GR-ST5 (slot 12): Port-1 (fiber 1) port link status UP.	Significant Event
11/16/2017 18:23:12	CM-10GR-ST5 (slot 12): Port-1 (fiber 1) port link status DOWN.	Significant Event
11/16/2017 18:23:06	CM-10GR-ST5 (slot 12, port 2): SFP/XFP DMI Low RX power alarm! RX power -35.229 dBm, alarm threshold -13.002 dBm.	Module-level Fault
11/16/2017 18:23:06	CM-10GR-ST5 (slot 12, port 2): SFP/XFP DMI Low RX power warning. RX power -35.229 dBm, warning threshold -12.000 dBm.	Persistent Error
11/16/2017 15:47:26	CM-10GR-ST5 (slot 12): Port-1 (fiber 1) port link status UP.	Significant Event
11/16/2017 15:47:26	CM-10GR-ST5 (slot 12): Port-1 (fiber 1) port link status DOWN.	Significant Event
11/16/2017 15:47:26	CM-10GR-ST5 (slot 12): Port-1 (fiber 1) port link status UP.	Significant Event

Displays the current local Alerts. The local Alert buffer contains the last 200 alerts and displays these events in a wrap around fashion.

Advanced Tab

Restart Module Restarts this Media Converter Module.

Reset Factory Defaults Resets this Media Converter Module back to factory defaults.

Diagnostics

Fiber Loopback

Port 1: Port 1 will be in loopback mode. All data received on the receive (RX) fiber connection is looped back to the transmit (TX) fiber connection.

Port 2: Port 2 will be in loopback mode. All data received on the receive (RX) fiber connection is looped back to the transmit (TX) fiber connection.

Off: Loop back mode is off.

(**Note:** only one port can be in loopback mode at a time)

Note: DIP switches are only active when the "Auto-Config" jumper is set to "SW". When this jumper is set to "Auto", loop-backs can only be initiated from the MCR-MGT management module.

Advanced Diagnostics

Advanced Diagnostics, Read/Write Register This feature should only be used if guided by a Perle Technical Support Representative. Use of this feature without guidance from a Perle Technical Support Representative could make your Media Converter Module inoperable.

Slot



Power State Immediately power the slot on or off. The current state of the slot is highlighted in BLUE.
 Press the "ON" button to immediately power the slot on.
 Press the "OFF" button to immediately power the slot off.

Default Power State This is the default power state of the slot when the chassis is powered up or restarted.
Note: Applies the the MCR1900 chassis
Default: On

Backup/Restore Module Configuration Automatically **Enabled:** The configuration information associated with this slot is saved on the Management Module and will be downloaded to the Media Converter Module whenever the Media Converter Module is inserted into this slot.
Disabled: The Media Converter Module configuration information is only kept on this Module.
Default: Disabled



Alert Messages

Introduction

This appendix contains the list of alerts which can be generated by the MCR-MGT Management Module.

The alerts are grouped in the following sections;

- Management Module alerts
- Chassis alerts
- Power supply alerts
- Media converter alerts
- SFP related alerts

Format of alerts

Each alert consists of the following items;

- Date alert occurred
- Time alert occurred
- Name of instance of object (i.e Media Converter Module name and slot number)
- Description of event which triggered the alert
- Severity of the alert

Severity levels

Alerts are assigned a specific severity level. This enables the user to set a filter for alerts at an appropriate severity level.

The following are the severity levels defined on the MCR-MGT Management Module in decreasing severity level. Also included is the syslog equivalent level.

<u>Severity level</u>	<u>Syslog equivalent</u>
System Level Fault -	Emergency
Module Level Fault -	Alert
Persistent Error -	Critical
One Time Error -	Error
Significant Event -	Warning
Normal Operation -	Notice

Alert Messages

Management Module Alerts

Mgmt: Management module has been inserted in slot **x**, Model=**model**, S/N=**s/n**.
Severity --> Significant Event

Mgmt: System boot - Cold Start (System diagnostic file available).
Severity --> Normal Operation

Mgmt: System boot - Warm start, System crash (System diagnostic file available).
Severity --> Normal Operation

Mgmt: Has been reset.
Severity --> Significant Event

Mgmt: Has been reset to factory default.
Severity --> Significant Event

Mgmt: Ethernet port link status UP.
Severity --> Normal Operation

Mgmt: Ethernet port link status DOWN.
Severity --> Significant Event

Mgmt: Console port monitored signal changed. DSR now inactive.
Severity --> Significant Event

Mgmt: Authentication SUCCESSFUL! Access method=Serial Console, Originating IP=**Unknown**.
Severity --> Normal Operation

Mgmt: Authentication SUCCESSFUL! Access method=SNMP, Originating IP= **ip**.
Severity --> Normal Operation

Mgmt: Authentication SUCCESSFUL! Access method=Telnet, Originating IP= **ip**.
Severity --> Normal Operation

Mgmt: Authentication SUCCESSFUL! Access method=SSH, Originating IP= **ip**.
Severity --> Normal Operation

Mgmt: Authentication SUCCESSFUL! Access method=WebManager(HTEMPP), Originating IP= **ip**.
Severity --> Normal Operation

Mgmt: Authentication SUCCESSFUL! Access method=WebManager(HTEMPPS), Originating IP= **ip**.
Severity --> Normal Operation

Mgmt: Authentication FAILED! Access method=Serial Console, Originating IP=**Unknown**.
Severity --> One Time Error

Mgmt: Authentication FAILED! Access method=SNMP, Originating IP= **ip**.
Severity --> One Time Error

Mgmt: Authentication FAILED! Access method=Telnet, Originating IP= **ip**.
Severity --> One Time Error

Mgmt: Authentication FAILED! Access method=SSH, Originating IP= **ip**.
Severity --> One Time Error

Mgmt: Authentication FAILED! Access method=WebManager(HTEMPP), Originating IP= **ip**.
Severity --> One Time Error

Mgmt: Authentication FAILED! Access method=WebManager(HTEMPPS), Originating IP= **ip**.

Severity --> One Time Error
Mgmt: System date/time has been set. Current date/time is now **mm dd, yyyy hh:mm:ss tz** (GMT **-hhh**).

Severity --> Significant Event
Mgmt: Communication with Secondary SNMP server **ip** recovered.

Severity --> Significant Event
Mgmt: Communication with Primary SNMP server **ip** FAILED.

Severity --> One Time Error
Mgmt: Communication with SNMP trap host 5 IP=**ip** recovered.

Severity --> Significant Event
Mgmt: Communication with SNMP trap host 2 IP=**ip** FAILED.

Severity --> One Time Error
Mgmt: Communication with email server **ip** recovered.

Severity --> Significant Event
Mgmt: Communication with email server **ip** FAILED.

Severity --> One Time Error
Mgmt: Configuration saved to flash.

Severity --> Normal Operation
Mgmt: System IP address has been dynamically changed from **ip** to **ip**.

Severity --> Significant Event
Mgmt: TFTP file transfer of file fileName1 to remote host **ip** was successful.

Severity --> Normal Operation
Mgmt: TFTP file transfer of file fileName2 to remote host **ip** failed.

Severity --> One Time Error
Mgmt: TFTP file transfer of file fileName3 from remote host **ip** was successful.

Severity --> Normal Operation
Mgmt: TFTP file transfer of file fileName4 from remote host **ip** failed.

Severity --> One Time Error
Mgmt: Chassis configuration mismatch! Backup Media Converter Module configurations reset to factory default.

Severity --> Significant Event

Chassis Alerts

Chassis: Has been reset.

Severity --> Significant Event
Chassis: High Temperature alarm cleared! Temperature **temp** C/F.

Severity --> Significant Event
Chassis: High temperature alarm! Temperature **temp** C/F, alarm threshold **temp** C/F.
Alarm Relay Engaged."

Severity --> System Level Fault
Chassis: Slot 5 has been powered ON. Model=**model**, S/N=**s/n**, Module name=**name**."

Severity --> Significant Event
Chassis: Slot 7 has been powered OFF.

Severity --> Significant Event
Chassis: OK.

Severity --> Significant Event
Chassis: Failed! Reason code=33. Alarm Relay Engaged.

Severity --> System Level Fault
Chassis: Communication with temperature sensor has been restored.

Severity --> Significant Event
Chassis: Communication with temperature sensor failed.
Severity --> One Time Error

Power Supply Alerts

POWER SUPPLY A: Power Supply Monitoring Unit has been inserted. Model=**model1**, S/N=**s/n**."
Severity --> Significant Event
POWER SUPPLY A: Has been removed from chassis.
Severity --> Significant Event
POWER SUPPLY A: Power supply OK.
Severity --> Significant Event
POWER SUPPLY A: Power supply failed! Reason code=22. Alarm Relay Engaged.
Severity --> System Level Fault
POWER SUPPLY B: Voltage from power supply restored.
Severity --> Significant Event
POWER SUPPLY B: No voltage being supplied from power supply. Alarm Relay Engaged.
Severity --> System Level Fault
POWER SUPPLY B: Fan OK.
Severity --> Normal Operation
POWER SUPPLY B: Fan failed! Alarm Relay Engaged.
Severity --> System Level Fault

Media Converter Alerts

Mod. Name (slot x,): Has been inserted. Model=**model1**, S/N=**s/n**."
Severity --> Significant Event
Mod. Name (slot x): Has been removed.
Severity --> Significant Event
Mod. Name (slot x): Has been reset.
Severity --> Significant Event
Mod. Name (slot x): Recovered communication with Management module.
Severity --> Significant Event
Mod. Name (slot x): No longer communicating with Management module.
Severity --> Module Level Fault
Mod. Name (slot x): OK.
Severity --> Significant Event
Mod. Name (slot x): Failed! Reason code=44.
Severity --> Module Level Fault
Mod. Name (slot x): Fiber port link status UP.
Severity --> Significant Event
Mod. Name (slot x): Copper port link status DOWN.
Severity --> Significant Event
Mod. Name (slot x): Configuration update failed.
Severity --> One Time Error
Mod. Name (slot x): Configuration update successful.
Severity --> Normal Operation
Mod. Name (slot x): Configuration mismatch resolved. Type inserted **model1**, type configured **model1**.

Severity --> Significant Event
Mod. Name (slot x): Backup media configuration mismatch. Module type inserted **model**, module type configured **model**.
Severity --> Persistent Error
Mod. Name (slot x): Firmware update successful.
Severity --> Normal Operation
Mod. Name (slot x): Firmware update failed!
Severity --> One Time Error
Mod. Name (slot x): Module has been powered down due to detection of a hardware failure.
Severity --> Module Level Fault
Mod. Name (slot x): The image on this Media Converter Module is invalid.
Severity --> Module Level Fault
Mod. Name (slot x): Module not fully supported. Please download latest firmware to MCR-MGT module.
Severity --> Significant Event
Mod. Name (slot x): Module firmware is being updated.
Severity --> Significant Event

SFP/XFP Alerts

Mod. Name (slot x, port y): SFP/XFP module has been inserted.
Severity --> Significant Event
Mod. Name (slot x, port y): SFP/XFP module has been removed.
Severity --> Significant Event
Mod. Name (slot x, port y): Recovered communication with SFP/XFP module.
Severity --> Significant Event
Mod. Name (slot x, port y): Unable to communicate with SFP/XFP module.
Severity --> Module Level Fault
Mod. Name (slot x, port y): SFP/XFP DMI High temperature warning recovered.
Temperature **temp** C/F
Severity --> Significant Event
Mod. Name (slot x, port y): SFP/XFP DMI High temperature warning. Temperature **temp** C/F, warning threshold **temp** C/F."
Severity --> Persistent Error
Mod. Name (slot x, port y): SFP/XFP DMI High temperature alarm recovered.
Temperature **temp** C/F.
Severity --> Significant Event
Mod. Name (slot x, port y): SFP/XFP DMI High temperature alarm! Temperature **temp** C/F, alarm Threshold **temp** C/F."
Severity --> Module Level Fault
Mod. Name (slot x, port y): SFP/XFP DMI Low temperature warning recovered.
Temperature **temp** C/F.
Severity --> Significant Event
Mod. Name (slot x, port y): SFP/XFP DMI Low temperature warning. Temperature **temp** C/F, warning threshold **temp** C/F."
Severity --> Persistent Error
Mod. Name (slot x, port y): SFP/XFP DMI Low temperature alarm recovered.
Temperature **temp** C/F.

Severity --> Significant Event
Mod. Name (slot x, port y): SFP/XFP DMI Low temperature alarm! Temperature **temp** C/F, alarm Threshold **temp** C/F."
Severity --> Module Level Fault
Mod. Name (slot x, port y): SFP/XFP DMI High voltage warning recovered. Voltage **value** Volts.
Severity --> Significant Event
Mod. Name (slot x, port y): SFP/XFP DMI High voltage warning. Voltage **value** Volts, warning threshold **value** Volts."
Severity --> Persistent Error
Mod. Name (slot x, port y): SFP/XFP DMI High voltage alarm recovered. Voltage **value** Volts.
Severity --> Significant Event
Mod. Name (slot x, port y): SFP/XFP DMI High voltage alarm! Voltage **value** Volts, alarm threshold **value** Volts."
Severity --> Module Level Fault
Mod. Name (slot x, port y): SFP/XFP DMI Low voltage warning recovered. Voltage **value** Volts.
Severity --> Significant Event
Mod. Name (slot x, port y): SFP/XFP DMI Low voltage warning. Voltage **value** Volts, warning threshold **value** Volts."
Severity --> Persistent Error
Mod. Name (slot x, port y): SFP/XFP DMI Low voltage alarm recovered. Voltage **value** Volts.
Severity --> Significant Event
Mod. Name (slot x, port y): SFP/XFP DMI Low voltage alarm! Voltage **value** Volts, alarm threshold **value** Volts."
Severity --> Module Level Fault
Mod. Name (slot x, port y): SFP/XFP DMI High TX bias current warning recovered. TX Bias: **value** mA
Severity --> Significant Event
Mod. Name (slot x, port y): SFP/XFP DMI High TX bias current warning. TX Bias value mA, warning threshold value mA."
Severity --> Persistent Error
Mod. Name (slot x, port y): SFP/XFP DMI High TX bias current alarm recovered. TX Bias: value mA.
Severity --> Significant Event
Mod. Name (slot x, port y): SFP/XFP DMI High TX bias current alarm! TX Bias value mA, alarm threshold value mA."
Severity --> Module Level Fault
Mod. Name (slot x, port y): SFP/XFP DMI Low TX bias current warning recovered. TX Bias value mA.
Severity --> Significant Event
Mod. Name (slot x, port y): SFP/XFP DMI Low TX bias current warning. TX Bias value mA, warning threshold value mA."
Severity --> Persistent Error
Mod. Name (slot x, port y): SFP/XFP DMI Low TX bias current alarm recovered. TX Bias value mA.
Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI Low TX bias current alarm! TX Bias value mA, alarm threshold value mA."

Severity --> Module Level Fault

Mod. Name (slot x, port y): SFP/XFP DMI High TX power warning recovered. TX power value mW.

Severity --> Significant Event

Mod. Name (slot x, Slot y): SFP/XFP DMI High TX power warning. TX power value mW, warning threshold value mW."

Severity --> Persistent Error

Mod. Name (slot x, port y): SFP/XFP DMI High TX power alarm. TX power value mW, alarm threshold value mW."

Severity --> Module Level Fault

Mod. Name (slot x, port y): SFP/XFP DMI High TX power alarm recovered. TX power value mW.

Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI Low TX power warning recovered. TX power value mW

Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI Low TX power warning. TX power value mW, warning threshold value mW."

Severity --> Persistent Error

Mod. Name (slot x, port y): SFP/XFP DMI Low TX power alarm recovered. TX power 2000.001 mW.

Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI Low TX power alarm. TX power value mW, alarm threshold value mW."

Severity --> Module Level Fault

Mod. Name (slot x, port y): SFP/XFP DMI High RX power warning recovered. RX power value mW.

Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI High RX power warning. RX power value mW, warning threshold value mW."

Severity --> Persistent Error

Mod. Name (slot x, port y): SFP/XFP DMI High RX power alarm recovered. RX power 3000.001 mW.

Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI High RX power alarm! RX power value mW, alarm threshold value mW."

Severity --> Module Level Fault

Mod. Name (slot x, port y): SFP/XFP DMI Low RX power warning recovered. RX power value mW.

Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI Low RX power warning. RX power value mW, warning threshold value mW.

Severity --> Persistent Error

Mod. Name (slot x, port y): SFP/XFP DMI Low RX power alarm recovered. RX power value mW.

Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI Low RX power alarm! RX power value mW, alarm threshold value mW.
Severity --> Module Level Fault

Mod. Name (slot x, port y): SFP/XFP module has been shutdown due to high temperature.
Severity --> Module level Fault"

Mod. Name (slot x, port y): SFP/XFP module has been recovered from shutdown due to high temperature.
Severity --> Significant Event

Mod. Name (slot x, port y): Module port XFP High APD Bias voltage warning. Voltage value mV, warning threshold value mV.
Severity --> Persistent Error

Mod. Name (slot x, port y): Module port XFP High APD Bias voltage warning recovered. Voltage value mV.
Severity --> Persistent Error

Mod. Name (slot x, port y): Module port XFP High APD Bias voltage alarm! Voltage value mV, alarm threshold value mV.
Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP High APD Bias voltage alarm recovered. Voltage value mV.
Severity --> Significant Event

Mod. Name (slot x - port y): XFP Low APD Bias voltage warning. Voltage value mV, warning threshold value mV.
Severity --> Persistent Error

Mod. Name (slot x, port y): XFP Low APD Bias voltage warning recovered. Voltage value mV. Severity --> Persistent Error

Mod. Name (slot x, port y): XFP Low APD Bias voltage alarm! Voltage value mV, alarm threshold value mV.
Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP Low APD Bias voltage alarm recovered. Voltage value mV.
Severity --> Significant Event

Mod. Name (slot x, port y): XFP High TEC current warning. Current value mA, warning threshold value mA. Severity --> Persistent Error

Mod. Name (slot x, port y): XFP High TEC current warning recovered. Current value mA.
Severity --> Persistent Error

Mod. Name (slot x, port y): XFP High TEC current alarm! Current value mA, alarm threshold value mA. Severity --> Module Level Fault

Mod Name (slot x, port y: XFP High TEC current alarm recovered. Current value mA.
Severity --> Significant Event

Mod. Name (slot x, port y): XFP Low TEC current warning. Current value mA, warning threshold value mA. Severity --> Persistent Error

Mod. Name (slot x, port y): XFP Low TEC current warning recovered. Current value mA.
Severity --> Significant Event

Mod. Name (slot x, port y): XFP Low TEC current alarm! Current value mA, alarm threshold value mA. Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP Low TEC current alarm recovered. Current value mA.
Severity --> Significant Event

Mod. Name (slot x, port y): XFP High Laser temperature warning. Temperature, warning threshold.
Severity --> Persistent Error

Mod. Name (slot x, port y): XFP High Laser temperature warning recovered.
Temperature Severity --> Significant Event

Mod. Name (slot x, port y): XFP High Laser temperature alarm! Temperature, alarm
threshold Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP High Laser temperature alarm recovered.
Temperature. Severity --> Significant Event

Mod. Name (slot x, port y): XFP Low Laser temperature warning. Temperature,
warning threshold.
Severity --> Persistent Error

Mod. Name (slot x, port y): XFP Low Laser temperature warning recovered.
Temperature Severity --> Significant Event

Mod. Name (slot x, port y): XFP Low Laser temperature alarm! Temperature, alarm
threshold Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP Low Laser temperature alarm recovered. Temperature
Severity --> Significant Event

Mod. Name (slot x, port y): XFP High Laser wavelength warning. Wavelength nm,
warning threshold nm.
Severity --> Persistent Error

Mod. Name (slot x, port y): XFP High Laser wavelength warning recovered.
Wavelength nm. Severity --> Persistent Error

Mod. Name (slot x, port y): XFP High Laser wavelength alarm! Wavelength nm, alarm
threshold nm.
Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP High Laser wavelength alarm recovered. Wavelength
nm. Severity --> Significant Event

Mod. Name (slot x, port y): XFP Low Laser wavelength warning. Wavelength nm,
warning threshold nm.
Severity --> Persistent Error

Mod. Name (slot x, port y): XFP Low Laser wavelength warning recovered. Wavelength
nm. Severity --> Significant Event

Mod. Name (slot x, port y): XFP Low Laser wavelength alarm! Wavelength nm, alarm
threshold nm.
Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP Low Laser wavelength alarm recovered. Wavelength
nm. Severity --> Significant Event

Mod. Name (slot x, port y): XFP High +5V supply voltage warning. Voltage value
Volts, warning threshold value Volts.
Severity --> Persistent Error

Mod. Name (slot x, port y): XFP High +5V supply voltage warning recovered. Voltage
value Volts. Severity --> Persistent Error

Mod. Name (slot x, port y): XFP High +5V supply voltage alarm! Voltage value
Volts, alarm threshold value Volts.
Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP High +5V supply voltage alarm recovered. Voltage
value Volts. Severity --. Significant Event

Mod. Name (slot x, port y): XFP Low +5V supply voltage warning. Voltage value
Volts, warning threshold value Volts.
Severity --> Persistent Error

Mod. Name (slot x, port y): XFP Low +5V supply voltage warning recovered. Voltage
value Volts. Severity --> Persistent Error

Mod. Name (slot x, port y): XFP Low +5V supply voltage alarm! Voltage value Volts,
alarm threshold value Volts.
Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP Low +5V supply voltage alarm recovered. Voltage value Volts. Severity --> Significant Event

Mod. Name (slot x, port y): XFP High +3.3V supply voltage warning. Voltage value Volts, warning threshold value Volts. Severity --> Persistent Error

Mod. Name (slot x, port y): XFP High +3.3V supply voltage warning recovered. Voltage value Volts. Severity --> Significant Event

Mod. Name (slot x, port y): XFP High +3.3V supply voltage alarm! Voltage value Volts, alarm threshold value Volts. Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP High +3.3V supply voltage alarm recovered. Voltage value Volts. Severity --> Significant Event

Mod. Name (slot x, port y): XFP Low +3.3V supply voltage warning. Voltage value Volts, warning threshold value Volts. Severity --> Persistent Error

Mod. Name (slot x, port y): XFP Low +3.3V supply voltage warning recovered. Voltage value Volts. Severity Significant Event

Mod. Name (slot x, port y): XFP Low +3.3V supply voltage alarm! Voltage value Volts, alarm threshold value Volts. Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP Low +3.3V supply voltage alarm recovered. Voltage value Volts. Severity --> Significant Event

Mod. Name (slot x, port y): XFP High +1.8V supply voltage warning. Voltage value Volts, warning threshold value Volts. Severity --> Persistent Error

Mod. Name (slot x, port y): XFP High +1.8V supply voltage warning recovered. Voltage value Volts. Severity --> Significant Event

Mod. Name (slot x, port y): XFP High +1.8V supply voltage alarm! Voltage value Volts, alarm threshold value Volts. Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP High +1.8V supply voltage alarm recovered. Voltage value Volts. Severity --> Significant Event

Mod. Name (slot x, port y): XFP Low +1.8V supply voltage warning. Voltage value Volts, warning threshold value Volts. Severity --> Persistent Error

Mod. Name (slot x, port y): XFP Low +1.8V supply voltage warning recovered. Voltage value Volts. Severity --> Significant Event

Mod. Name (slot x, port y): XFP Low +1.8V supply voltage alarm! Voltage value Volts, alarm threshold value Volts. Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP Low +1.8V supply voltage alarm recovered. Voltage value Volts. Severity --. Significant Event

Mod. Name (slot x, port y): XFP High -5.2V supply voltage warning. Voltage value Volts, warning threshold value Volts. Severity --> Persistent Error

Mod. Name (slot x, port y): XFP High -5.2V supply voltage warning recovered. Voltage value Volts. Severity --> Persistent Error

Mod. Name (slot x, port y): XFP High -5.2V supply voltage alarm! Voltage value Volts, alarm threshold value Volts. Severity --> Module Level Alert

Mod. Name (slot x, port y): XFP High -5.2V supply voltage alarm recovered. Voltages value Volts. Severity --. Significant Event

Mod. Name (slot x, port y): XFP Low -5.2V supply voltage warning. Voltage value Volts, warning threshold value Volts.

Severity --> Persistent Error
Mod. Name (slot x, port y): XFP Low -5.2V supply voltage warning recovered.
Voltage value Volts. Severity --> Significant Event
Mod. Name (slot x, port y): XFP Low -5.2V supply voltage alarm! Voltage value
Volts, alarm threshold value Volts.
Severity --> Module Level Fault
Mod. Name (slot x, port y): XFP Low -5.2V supply voltage alarm recovered. Voltage
value Volts. Severity --> Significant Event
Mod. Name (slot x, port y): XFP High +5V supply current warning. Current value mA,
warning threshold value mA.
Severity --> Persistent Error
Mod. Name (slot x, port y): XFP High +5V supply current warning recovered. Current
value mA. Severity --> Significant Event
Mod. Name (slot x, port y): XFP High +5V supply current alarm! Current value mA,
alarm threshold value mA.
Severity --> Module Event Error
Mod. Name (slot x, port y): XFP High +5V supply current alarm recovered. Current
value mA. Severity --> Significant Error
Mod. Name (slot x, port y): XFP High +5V supply current warning. Current value mA,
warning threshold value mA.
Severity --> Persistent Error
Mod. Name (slot x, port y): XFP High +5V supply current warning recovered. Current
value mA. Severity --> Significant Event
Mod. Name (slot x, port y): XFP High +5V supply current alarm! Current value mA,
alarm threshold value mA.
Severity --> Module Level Fault
Mod. Name (slot x, port y): XFP High +5V supply current alarm recovered. Current
value mA. Severity --> Significant Event
Mod. Name (slot x, port y): XFP High +3.3V supply current warning. Current value
mA, warning threshold value mA.
Severity --> Persistent Error
Mod. Name (slot x, port y): XFP High +3.3V supply current warning recovered.
Current value mA. Severity --> Significant Event
Mod. Name (slot x, port y): XFP High +3.3V supply current alarm! Current value mA,
alarm threshold value mA.
Severity --> Module Level Fault
Mod. Name (slot x, port y): XFP High +3.3V supply current alarm recovered. Current
value mA. Severity --> Significant Event
Mod. Name (slot x, port y): XFP High +3.3V supply current warning. Current value
mA, warning threshold value mA.
Severity --> Persistent Error
Mod. Name (slot x, port y): XFP High +3.3V supply current warning recovered.
Current value mA. Severity --> Significant Event
Mod. Name (slot x, port y): XFP High +3.3V supply current alarm! Current value mA,
alarm threshold value mA.
Severity --> Module Level Fault
Mod. Name (slot x, port y): XFP High +3.3V supply current alarm recovered.
Currents value mA. Severity --> Significant Event
Mod. Name (slot x, port y): XFP High +1.8V supply current warning. Current value
mA, warning threshold value mA.
Severity --> Persistent Error
Mod. Name (slot x, port y): XFP High +1.8V supply current warning recovered.
Current value mA. Severity --> Significant Events

Mod. Name (slot x, port y): XFP High +1.8V supply current alarm! Current value mA,
alarm threshold value mA.
Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP High +1.8V supply current alarm recovered. Current
value mA. Severity --> Significant Event

Mod. Name (slot x, port y): XFP High +1.8V supply current warning. Current value
mA, warning threshold value mA.
Severity --> Persistent Error

Mod. Name (slot x, port y): XFP High +1.8V supply current warning recovered.
Current value mA. Severity --> Significant Event

Mod. Name (slot x, port y): XFP High +1.8V supply current alarm! Current value mA,
alarm threshold value mA.
Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP High +1.8V supply current alarm recovered. Current
Value mA. Severity --> Significant Event

Mod. Name (slot x, port y): XFP High -5.2V supply current warning. Current value
mA, warning threshold value mA.
Severity --> Persistent Error

Mod. Name (slot x, port y): XFP High -5.2V supply current warning recovered.
Current value mA. Severity --> Significant Event

Mod. Name (slot x, port y): XFP High -5.2V supply current alarm! Current value mA,
alarm threshold value mA.
Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP High -5.2V supply current alarm recovered. Current
value mA. Severity --> Significant Event

Mod. Name (slot x, port y): XFP High -5.2V supply current warning. Current value
mA, warning threshold value mA.
Severity --> Persistent Error

Mod. Name (slot x, port y): XFP High -5.2V supply current warning recovered.
Current value mA. Severity --> Significant Event

Mod. Name (slot x, port y): XFP High -5.2V supply current alarm! Current value mA,
alarm threshold value mA.
Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP High -5.2V supply current alarm recovered. Current
value mA. Severity --> Significant Event

Mod. Name (slot x, port y): XFP High +5V supply voltage warning
Severity --> Persistent Error

Mod. Name (slot x, port y): XFP High +5V supply voltage warning recovered.
Severity --> Significant Event

Mod. Name (slot x, port y): XFP High +5V supply voltage alarm!
Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP High +5V supply voltage alarm recovered.
Severity --> Significant Event

Mod. Name (slot x, port y): XFP Low +5V supply voltage warning.
Severity --> Persistent Error

Mod. Name (slot x, port y): XFP Low +5V supply voltage warning recovered.
Severity --> Significant Event

Mod. Name (slot x, port y): XFP Low +5V supply voltage alarm!
Severity --> Module Level Fault

Mod. Name (slot x, port y): XFP Low +5V supply voltage alarm recovered.
Severity --> Significant Event

Mod. Name (slot x, port y): XFP High +3.3V supply voltage warning
Severity --> Persistent Error

Mod. Name (slot x, port y): XFP High +3.3V supply voltage warning recovered.

Severity --> Significant Event
Mod. Name (slot x, port y): XFP High +3.3V supply voltage alarm!
Severity --> Module Level Fault
Mod. Name (slot x, port y): XFP High +3.3V supply voltage alarm recovered.
Severity --> Significant Error
Mod. Name (slot x, port y): XFP Low +3.3V supply voltage warning.
Severity --> Persistent Error
Mod. Name (slot x, port y): XFP Low +3.3V supply voltage warning recovered.
Severity --> Significant Event
Mod. Name (slot x, port y): XFP Low +3.3V supply voltage alarm! Severity -->
Module Level Fault
Mod. Name (slot x, port y): XFP Low +3.3V supply voltage alarm recovered.
Severity --> Significant Event
Mod. Name (slot x, port y): XFP High +1.8V supply voltage warning
Severity --> Persistent Error
Mod. Name (slot x, port y): XFP High +1.8V supply voltage warning recovered.
Severity --> Significant Event
Mod. Name (slot x, port y): XFP High +1.8V supply voltage alarm! Severity -->
Module Level Fault
Mod. Name (slot x, port y): XFP High +1.8V supply voltage alarm recovered.
Severity --> Significant Event
Mod. Name (slot x, port y): XFP Low +1.8V supply voltage warning. Severity -->
Persistent Error
Mod. Name (slot x, port y): XFP Low +1.8V supply voltage warning recovered.
Severity --> Significant Event
Mod. Name (slot x, port y): XFP Low +1.8V supply voltage alarm! Severity -->
Module Level Fault
Mod. Name (slot x, port y): XFP Low +1.8V supply voltage alarm recovered.
Severity --> Significant Event
Mod. Name (slot x, port y): XFP High -5.2V supply voltage warning Severity --
>Persistent Error
Mod. Name (slot x, port y): XFP High -5.2V supply voltage warning recovered.
Severity --> Significant Event
Mod. Name (slot x, port y): XFP High -5.2V supply voltage alarm!
Severity --> Module Level Fault
Mod. Name (slot x, port y): XFP High -5.2V supply voltage alarm recovered.
Severity --> Significant Event
Mod. Name (slot x, port y): XFP Low -5.2V supply voltage warning.
Severity --> Persistent Error
Mod. Name (slot x, port y): XFP Low -5.2V supply voltage warning recovered.
Severity --> Significant Event
Mod. Name (slot x, port y): XFP Low -5.2V supply voltage alarm! Severity -->
Module Level Fault
Mod. Name (slot x, port y): XFP Low -5.2V supply voltage alarm recovered.
Severity --> Significant Event
Mod. Name (slot x, port y): SFP/XFP module has been inserted.
Severity --> Significant Event
Mod. Name (slot x, port y): SFP/XFP module has been removed.
Severity --> Significant Event
Mod. Name (slot x, port y): Unable to communicate with SFP/XFP module.
Severity --> Significant Event
Mod. Name (slot x, port y): Recovered communication with SFP/XFP module.
Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI High temperature warning. Temperature, warning threshold.
Severity --> Persistent Error

Mod. Name (slot x, port y): SFP/XFP DMI High temperature warning recovered. Temperature. Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI High temperature alarm! Temperature, alarm Threshold.
Severity --> Module Level Faults

Mod. Name (slot x, port y): SFP/XFP DMI High temperature alarm recovered. Temperature. Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI Low temperature warning. Temperature, warning threshold.
Severity --> Persistent Error

Mod. Name (slot x, port y): SFP/XFP DMI Low temperature warning recovered. Temperature. Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI Low temperature alarm! Temperature, alarm Threshold.
Severity --> Module Level Fault

Mod. Name (slot x, port y): SFP/XFP DMI Low temperature alarm recovered. Temperature Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI High voltage warning. Voltage value Volts, warning threshold value Volts.
Severity --> Persistent Error

Mod. Name (slot x, port y): SFP/XFP DMI High voltage warning recovered. Voltage value Volts.
Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI High voltage alarm! Voltage value Volts, alarm threshold value Volts.
Severity --> Module Level Fault

Mod. Name (slot x, port y): SFP/XFP DMI High voltage alarm recovered. Voltage value Volts. Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI Low voltage warning. Voltage value Volts, warning threshold value Volts.
Severity --> Persistent Error

Mod. Name (slot x, port y): SFP/XFP DMI Low voltage warning recovered. Voltage value Volts. Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI Low voltage alarm! Voltage value Volts, alarm threshold value Volts.
Severity --> Module Level Fault

Mod. Name (slot x, port y): SFP/XFP DMI Low voltage alarm recovered. Voltage value Volts.
Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI High TX bias current warning. TX Bias value mA, warning threshold value mA."

Mod. Name (slot x, port y): SFP/XFP DMI High TX bias current warning recovered. TX Bias: value mA Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI High TX bias current alarm! TX Bias value mA, alarm threshold value mA.
Severity --> Module Level Fault

Mod. Name (slot x, port y): SFP/XFP DMI High TX bias current alarm recovered. TX Bias: value mA. Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI Low TX bias current warning. TX Bias value mA, warning threshold value mA.
Severity --> Persistent Error

Mod. Name (slot x, port y): SFP/XFP DMI Low TX bias current warning recovered. TX Bias value mA. Severity --> Significant Events

Mod. Name (slot x, port y): SFP/XFP DMI Low TX bias current alarm! TX Bias value mA, alarm threshold value mA. Severity --> Module Level Fault

Mod. Name (slot x, port y): SFP/XFP DMI Low TX bias current alarm recovered. TX Bias value mA. Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI High TX power warning. TX power, warning threshold Severity --> Persistent Error

Mod. Name (slot x, port y): SFP/XFP DMI High TX power warning recovered. TX power. Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI High TX power alarm. TX power, alarm threshold. Severity --> Module Level Fault

Mod. Name (slot x, port y): SFP/XFP DMI High TX power alarm recovered. TX power. Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI Low TX power warning. TX power, warning threshold Severity --> Persistent Error

Mod. Name (slot x, port y): SFP/XFP DMI Low TX power warning recovered. TX power Severity --> Significant Event

Mod. Name (slot x, port y): SFP DMI Low TX power alarm. TX power, alarm threshold. Severity --> Module Level Fault

Mod. Name (slot x, port y): SFP/XFP DMI Low TX power alarm recovered. TX power. Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI High RX power warning. RX power, warning threshold Severity --> Persistent Error

Mod. Name (slot x, port y): SFP/XFP DMI High RX power warning recovered. RX power Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI High RX power alarm! RX power, alarm threshold Severity --> Module Level Fault

Mod. Name (slot x, port y): SFP/XFP DMI High RX power alarm recovered. RX power Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI Low RX power warning. RX power, warning threshold Severity --> Persistent Error

Mod. Name (slot x, port y): SFP/XFP DMI Low RX power warning recovered. RX power Severity --> Significant Event

Mod. Name (slot x, port y): SFP/XFP DMI Low RX power alarm! RX power, alarm threshold Severity --> Module Level Fault

Mod. Name (slot x, port y): SFP/XFP DMI Low RX power alarm recovered. RX power Severity --> Significant Event

Mod. Name (slot x,): Speed Mismatch between SFP and the other SFP/XFP module Severity --> Persistent Error

Mod. Name (slot x,): SFP speed mismatch has recovered. Severity --> Significant Event

Mod. Name (slot x,): An XFP module's power requirements has exceeded card capacity Severity --> Module Level Fault

Mod. Name (slot x,): XFP excessive power alarm has recovered Severity --> Significant Event

Mod. Name (slot x, port y): Low upstream bandwidth alarm! Bandwidth (Upstream Bandwidth kbps) dropped below threshold (UpstreamBandwidthThreshold kbps). Severity --> Persistent Error

Mod. Name (slot x, port y): Recovered from low upstream bandwidth condition.

```
Severity --> Significant Error
Mod. Name (slot x, port y): Low downstream bandwidth alarm! Bandwidth
  (DownstreamBandwidth kbps) dropped below threshold
  (DownstreamBandwidthThreshold kbps).
Severity --> Persistent Error
Mod. Name (slot x, port y): Recovered from low downstream bandwidth condition.
Severity --> Significant Error
```

VDSL Line Alerts

```
Mod. Name (slot x,): Peer was reset
Severity --> Significant Event
```



SSL/TLS Ciphers

Full Name	Key-Exchange	Authentication	Encryption	Key-Size	HMAC
EDCHE-ECDSA-AES256-GCM-SHA384	Kx=ECDH	Au=ECDSA	Enc=AES-GCM	256	Mac=SHA384
ECDHE-ECDSA-AES256-SHA384	Kx=ECDH	Au=ECDSA	Enc=AES	256	Mac=SHA384
ECDHE-ECDSA-AES256-SHA	Kx=ECDH	Au=ECDSA	Enc=AES	256	Mac=SHA1
DHE-DSS-AES256-GCM-SHA384	Kx=DH	Au=DSS	Enc=AES-GCM	256	Mac=SHA384
DHE-RSA-AES256-GCM-SHA384	Kx=DH	RSA	Enc=AES-GCM	256	Mac=SHA384
DHE-RSA-AES256-SHA256	Kx=DH	RSA	Enc=AES	256	Mac=SHA256
AES256-GCM-SHA384	Kx=RSA	RSA	Enc=AES-GCM	256	Mac=SHA384
AES256-SHA256	Kx=RSA	RSA	Enc=AES	256	Mac=SHA256
DHE-DSS-AES256-SHA256	Kx=DH	DSS	Enc=AES	256	Mac=SHA256
DHE-RSA-AES256-SHA	Kx=DH	RSA	Enc=AES	256	Mac=SHA1
DHE-DSS-AES256-SHA	Kx=DH	DSS	Enc=AES	256	Mac=SHA1
ADH-AES256-GCM-SHA384	Kx=DH	None	Enc=AES-GCM	256	Mac=SHA384
ADH-AES256-SHA256	Kx=DH	None	Enc=AES	256	Mac=SHA256
ADH-AES256-SHA	Kx=DH	None	Enc=AES	256	SHA1
AES256-SHA	Kx=RSA	Au=RSA	Enc=AES	256	Mac=SHA1
ECDHE-RSA-AES128-GCM-SHA256	Kx=ECDH	Au=RSA	Enc=AES-GCM	128	Mac=SHA256
ECDHE-ECDSA-AES128-GCM-SHA256	Kx=ECDH	Au=ECDSA	Enc=AES-GCM	128	SHA256
ECDHE-ECDSA-AES128-SHA256	Kx=ECDH	Au=ECDSA	Enc=AES	128	SHA256
ECDHE-ECDSA-AES128-SHA	Kx=ECDH	Au=ECDSA	Enc=AES	128	SHA1
DHE-DSS-AES128-GCM-SHA256	Kx=DH	Au=DSS	Enc=AES-GCM	128	SHA256
DHE-RSA-AES128-GCM-SHA256	Kx=DH	Au=RSA	Enc=AES-GCM	128	SHA256

Full Name	Key-Exchange	Authentication	Encryption	Key-Size	HMAC
DHE-RSA-AES128-SHA256	Kx=DH	Au=RSA	Enc=AES	128	SHA256
DHE-DSS-AES128-SHA256	Kx=DH	Au=DSS	Enc=AES	128	SHA256
DHE-RSA-AES128-SHA	Kx=DH	Au=RSA	Enc=AES	128	SHA1
DHE-DSS-AES128-SHA	Kx=DH	Au=DSS	Enc=AES	128	SHA1
ADH-AES128-SHA256	Kx=DH	Au=None	Enc=AES	128	SHA256
ADH-AES128-SHA	Kx=DH	Au=None	Enc=AES	128	SHA1
AES128-GCM-SHA256	Kx=RSA	Au=RSA	Enc=AES-GCM	128	SHA256
AES128-SHA256	Kx=RSA	Au=RSA	Enc=AES	128	SHA256
AES128-SHA	Kx=RSA	Au=RSA	Enc=AES	128	SHA1
RC2-CBC-MD5	Kx=RSA	Au=RSA	Enc=RC2	128	MD5
ADH-RC4-MD5	Kx=DH	Au=None	Enc=RC4	128	MD5
RC4-SHA	Kx=RSA	AU=RSA	Enc=RC4	128	SHA1
RC54-MD5	Kx=RSA	Au=RSA	Enc=RC4	128	MD5
ECDHE-ECDSA-DES-CBC3-SHA	Kx=ECDH	Au=ECDSA	Enc=3DES	168	SHA1
EDH-RSA-DES-CBC3-SHA	Kx=DH	Au=RSA	Enc=3DES	168	SHA1
EDH-DSS-DES-CBC3-SHA	Kx=DH	Au=DSS	Enc=3DES	168	SHA1
ADH-DES-CBC3-SHA	Kx=DH	Au=None	Enc=3DES	168	SHA1
DES-CBC3-SHA	Kx=RSA	Au=RSA	Enc=3DES	168	SHA1
DES-CBC3-MD5	Kx=RSA	Au=RSA	Enc=3DES	168	MD5
EDH-RSA-DES-CBC-SHA	Kx=DH	Au=RSA	Enc=DES	56	SHA1
EDH-DSS-DES-CBC-SHA	Kx=DH	Au=DSS	Enc=DES	56	SHA1
ADH-DES-CBC-SHA	Kx=DH	Au=None	Enc=DES	56	SHA1
DES-CBC-SHA	Kx=RSA	Au=RSA	Enc=DES	56	SHA1
EXP-EDH-RSA-DES-CBC-SHA	Kx=DH-512	Au=RSA	Enc=DES	40	SHA1
EXP-EDH-DSS-DES-CBC-SHA	Kx=DH-512	Au=DSS	Enc=DES	40	SHA1
EXP-DES-CBC-SHA	Kx=RSA-512	Au=RSA	Enc=DES	40	SHA1
EXP-RC2-CBC-MD5	Kx=RSA-512	Au=RSA	Enc=RC2	40	MD5
EXP-ADH-DES-CBC-SHA	Kx=DH-512	Au=none	Enc=DES	40	SHA1
EXP-ADH-RC4-MD5	Kx=DH-512	Au=none	Enc=RC4	40	MD5
EXP-RC4-MD5	Kx=RSA-512	Au=RSA	Enc=RC4	40	MD5



Pinouts and Cabling Diagrams

Console Port Pinout

The RJ-45 console port on the MCR-MGT Management Module has a standard “Cisco” pinout as defined below.

Pin order:




Pinout:

Pin #	Pin Description
1	RTS (out)
2	DTR (out)
3	TxD (out)
4	GND
5	GND
6	RxD (in)
7	DSR (in)
8	CTS (in)



Auto-Config Switch

The default jumper setting is Auto mode. Jumper the top and middle Pin to select Auto mode. Jumper the middle and bottom Pin to select SW mode.

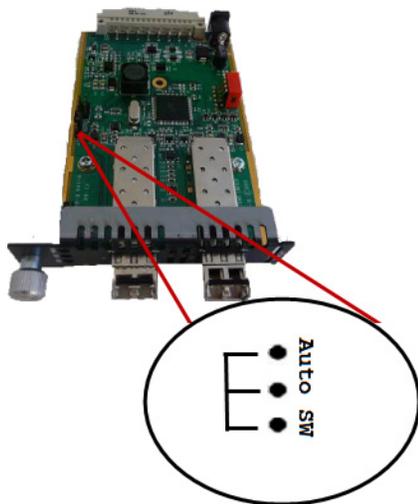



Troubleshooting

General Troubleshooting

- Ensure that any Media Converter Modules and MCR-MGT Management Modules are securely seated in the Chassis of the MCR1900 or the SMI Media Converter.
- If the media converter module is a managed module and it is detected as an unmanaged module, then carefully pull the module out of the chassis and re-insert the module securing it to the front face plate of the chassis.
- Ensure all cabling is of the correct type and is in good working order.
- Ensure the remote device's fiber connection type is compatible with the Media Converter Module. If using a simplex fiber connection, ensure that you have both an Upstream (U) and Downstream (D) Media Converter Module.
- For duplex fiber connections, ensure the RX and TX has been reversed between the two Media Converter Modules.

No Connectivity

If unable to get full connectivity with the Media converter Modules and all their DIP switches are in the UP position, then this procedure is recommended for troubleshooting.

Method 1

1. Set the Link mode to Standard to ON on both Media Converter Modules. Leave all other switches in the UP position.
2. Connect the near end device to the copper connection. The LKC LED indicates good copper connection. If the LKC LED is not lit, then check the copper cable and the attached device.
3. Repeat for the far end Media Converter Module.
4. Connect the fiber cable to both Media Converter Modules. The LKF LED indicates good fiber connection. If no LKF LED then check the fiber cabling. Ensure the transmitter and receiver pairs are crossed.
5. Return modules to their desired configuration.

Method 2

The fiber connection can also be verified by configuring the remote Media Converter Module for loopback mode. The LKF LEDs on both Media Converter Modules should be lit. Data should pass through the local converter, over the fiber connection to the remote Media Converter. At the remote Media Converter Module, the data will be looped back and passed through the fiber, back to the local Media Converter Module and passed to the copper link.

Communication Issues

Webmanager screen appears garbled.

- Press and hold Ctrl, then press F5 or clear the cache memory on your browser.

General communication checks and practices are as follows:

- Are your cables connected and correctly configured? If you are using EIA-232, see to verify that your cables are correctly configured.
- Can you ping your host? If you can ping but packet loss is reported, ping another host/device on the same network. This will tell you whether the problem is specific to the host/device or general to the network.
- After entering or changing IP information for your MCR-MGT Management Module, *reboot* the MCR-MGT Management Module does not apply when using BOOTP or DHCP). Once the Management Module has rebooted, other network devices should be able to communicate with it (ping, telnet, etc.). Also, protocols such as ARP and proxy-ARP will work properly.
- Use the **show routes** command (command line only). Is there a route to the host?
- If the MCR Web Manager cannot communicate with the Management Module, verify that the service is enabled under Administration, Access, **HTTP** and/or **HTTPS** are enabled for the MCR Web Manager. If you are using only HTTPS, the connection URL must start with **https://**.

Host Problems

Cannot access a host by name:

- If using DNS or if DNS is required, ensure a nameserver is configured on your MCR-MGT Management Module and is accessible (ping it).
- If not using DNS, verify that the host is configured in the **Host Table**. Check access to the host by pinging it using the host's IP address.

Cannot access a host on a local network, verify:

- The network address is correct.
- The subnet mask is set correctly and reflects the network configuration.
- The broadcast address is set correctly and reflects the network configuration.

Cannot access a host on a remote network:

- Use the **show route** command to verify that there is a route to the remote host. If no gateway is specified, verify that a default gateway is specified. Ping the default gateway to check if it is working.
- Consider the situation beyond the gateway; for example, are intermediate gateways and the remote host available? Also, check the messages returned by the **ping** command; for example, that a particular host or gateway is unreachable.

Access to host lost after a few minutes.

- If the route to this host goes through routers, make sure those routers are all sending RIP packets across the networks.

RADIUS Authentication Problems

User is waiting up to 60 seconds before login is accepted or denied and Authentication is set to RADIUS. User has entered User Name and Password, and has pressed Enter.

- Check RADIUS configuration of primary and secondary authentication/accounting hosts specified, if you have retry and timeout values greater than the default, the Management Module be spending time trying each of these hosts and keeping the user waiting.

- Adjust RADIUS configuration: specify just one host, reduce **Timeout** and **Retry** values to the default or less than default.

You cannot progress beyond the login and password prompts when authentication is set to RADIUS:

- On the RADIUS host, check the secret (password), you should see it displayed in clear text in the RADIUS clients file. If you are unsure whether it is the same secret which you entered in the Management Module, go to the Management Module and re-enter a new secret.
- On the RADIUS host, verify that there is only one entry for a particular user; do not have multiple entries of the same user name (even if the passwords are different).

Unknown IP Address

You don't know the IP address of the Management Module so you cannot obtain a successful login.

- Review [Chapter 2, *Setting IP Addresses*](#) .

SSL/TLS

Could not obtain peer's certificate.

- You have selected a cipher key exchange of ADH (anonymous Diffie-Hellman) and enabled Peer verification. ADH does not use certificates so they will not be sent in an SSL/TLS handshake. Disable Peer Verification or change to a cipher suite that uses certificates.
- You have selected Peer Verification on the configured SSL/TLS server and have not configured a certificate for the client. Either disable peer verification on the SSL/TLS server or configure a certificate for the SSL/TLS client.

Certificate did not match configuration

- The message is displayed when **Validate Peer Certificate** has been enabled, but the configured **Validation Criteria** does not match the corresponding data in the certificate received from the peer. The data configured must match exactly to the data in the certificate. The data is also case sensitive.

tlsv1 alert handshake failure or sslv3 alert handshake failure

- The remote site has an SSL/TLS error and is sending this message with an alert message. Look at the error messages on the remote end and fix the problem indicated.

IPv6 Issues

You are not seeing the IPv6 address value when you attempt to connect to the MCR-MGT Management Module.

Windows Vista and Server 2008 operating systems have IPv6 support already enabled, however, you will have to install IPv6 support for Windows XP.

To install IPv6 support in Windows XP, do the following:

1. In Control Panel, double-click the **Network Connections** icon.
2. Double-click the **Local Area Connection** entry.
3. In the Local Area Connection Status window, click the **Properties** button on the **General** tab.
4. In the Local Area Connections window, click the **Install** button on the **General** tab.
5. In the Select Network Component Type window, select **Protocol** and click the **Add** button.
6. In the Select Network Protocol window, select **Microsoft TCP/IP version 6** and click the **OK** button.

Contacting Technical Support

Making a Technical Support Query

Contact information for the Perle Technical Assistance Center (PTAC) can be found at the link below. A Technical Support Query may be made via this web page.

http://www.perle.com/support_services/support_request.shtml

Warranty / Registration

Perle's standard Lifetime Warranty provides customers with return to factory repairs for Perle products that fail under the conditions of the warranty coverage. Details can be found at

http://www.perle.com/support_services/warranty.shtml

Feedback on this Manual

If you have any comments or suggestions for improving this manual please email Perle using the following address:

Email: ptac@perle.com

Please include the **title**, **part number** and **date** of the manual (you can find these on the title page at the front of this manual).



Symmetric Key File

Symmetric Key File

This section defines the layout of the SNMP Symmetric Key file that must be downloaded to the management card in order to use the SNMP server authentication feature. Each line of the SNMP symmetric key file consists of three fields: a key ID in the range 1 to 65,534, inclusive, a key type and a message digest key consisting of a printable ASCII string equal to or less than 20 characters or a 40 character hex digit string.

key ID	key type	message digest key	
1	MD5	CeR{+'9LRTY:a0=P?GOA	ascii string
2	MD5	POE)+'9KRMYP0-PZOQ	ascii string
3	MD5	E)+'9KRRTS {+'9LRTpp	ascii string
4	MD5	ECeE)+'9KRDSRuorQPiw	ascii string
5	SHA1	0e9e44502940294fa788aafaac34ccb126347d34	hex digit string
6	SHA1	f4e9e4454e9e4450294facb126309ff4ccb1200	hex digit string
7	SHA1	e9e44502949e4450294ccb12634e9e447d3489	hex digit string
8	SHA1	40294fa7894facb126502944fac4e9e788aafaa	hex digit string

Note: Note:1-10 key ID entries are allowed in this SNMP key file. Both MD5 and SHA1 are supported. Key ID 0 is excluded.